

PORODO
LIFESTYLE



Porodo Lifestyle
RAZE
Rechargeable Trimmer
SKU: PDLFSTJ20BK



Table of Contents

Product Overview	2
Specifications	2
Safety Instructions	3
Power Options	4
Package Contents	5
Replacing Guiding Combs	5
Trimming Instructions with combs	6
Trimming Without a Comb	7
Cleaning and Maintenance	8
Environmental Considerations	8
Disposal	9
Warranty	9
Contact Us	9

Product Overview

The Porodo Raze Rechargeable Trimmer is designed for both cord and cordless use, offering convenience and flexibility for various grooming needs. It features a powerful 7000RPM motor speed and provides up to 2.5 hours of working time on a full charge. The trimmer comes with 4 interchangeable comb attachments, allowing you to customize your grooming experience. Equipped with USB-C charging, it offers fast and efficient power-up, while it is designed to be easy to clean and ensures hassle-free maintenance. The ergonomic build of the trimmer makes it comfortable to use, providing a seamless grooming experience.

Specifications

Material	ABS, Copper, Ceramic (Moved Blade), Powder Metallurgy (Fixed Blade)
Input	5V/1A
Rated Power	6W
Rated Voltage	5V
Battery Capacity	1400mAh
Motor Speed	7000RPM

Charging Time	2.5h
Working Time	2.5h
Charging Interface	USB-C
Guide Combs	1.5 ,3 ,4.5 ,6mm
Product Weight	130g
Product Size	39.1 x 41.7 x 153.8mm
Model Number	PDLFSTJ20

Safety Instructions

1. The hair trimmer is intended for domestic use.
2. Connect the power supply adaptor to an AC outlet (100-240V).
3. Disconnect the power adaptor from the power outlet when it is not being used or before cleaning.
4. Do not pull the cord to unplug the device.
5. The power supply cord should not hang over the edge of a table or desktop, or touch hot surfaces.
6. If the non-detachable part of the cord is damaged, it should be replaced by the manufacturer or at an authorized service point to avoid danger.
7. This device is intended for cutting natural hair only. It should not be used for

cutting artificial or animal hair. Using the device for purposes other than intended will void the warranty.

- 8.** Do not touch the power supply adaptor with wet hands, especially when plugging or unplugging it from the main supply outlet.
- 9.** Always use the included adaptor to power the hair trimmer.
- 10.** Connect the device only to easily accessible power supply outlets.
- 11.** Do not cover the adaptor, as it may cause the temperature to rise dangerously.
- 12.** Never use the Trimmer while bathing.
- 13.** Never immerse the trimmer or its cord in water or any other liquids.
- 14.** Do not place the hair trimmer on wet surfaces or cloths during operation.
- 15.** Do not store the device in areas where it could fall into water.
- 16.** Do not use the device with a damaged comb attachment to prevent injury hazards.
- 17.** Never attempt to remove foreign objects from the trimmer using sharp objects (e.g., a comb).
- 18.** Always clean the device after use.
- 19.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge.
- 20.** Children should be supervised to ensure they do not play with the appliance.
- 21.** Do not use unapproved attachments.
- 22.** The hair trimmer can be used both with and without a power cord.
- 23.** Ensure the hair that you're going to cut is clean, dry, and combed.
- 24.** Place a towel around the neck to prevent cut hair from falling on the collar.

Power Options

1. Operation with Power Supply Adapter

First, insert the adapter plug into the device, then plug the adapter into a mains supply outlet (100-240V). In mains-supplied mode, the device is ready for use.

2. Charging the Battery and Cordless Operation

- a.** To charge the device, move the O/I switch to the "O" position.

- b.** Place the device on the loading base.
- c.** Connect the loading base to the adapter cord.
- d.** Insert the plug of the adapter into the appropriate mains supply outlet (100-240V). The LED indicator will change from red to white when fully charged. When fully charged, the hair trimmer can operate for approximately 2.5 hours.
- e.** The hair trimmer accumulator reaches optimal power after three complete charge and discharge cycles. 2.5 hours is sufficient for the next load. To ensure long battery life, always fully discharge the accumulator before recharging.

Package Contents





Replacing Guiding Combs

- 1.** Attachment Combs and Installation Instructions
 - a.** The comb 1# can cut hair at a 1.5mm cutting length.
 - b.** The comb 2# can cut hair at a 3.0mm cutting length.

- c.** The comb 3# can cut hair at a 4.5mm cutting length.
 - d.** The comb 4# can cut hair at a 6.0mm cutting length.
 - e.** Select the appropriate attachment based on the desired cutting length.
- 2. Installation and Removal Instructions:**
- a.** Before installing, removing, or changing the attachment comb, switch the unit off. If the unit is powered by the adapter, unplug it.
 - b.** To install the attachment, insert the front edge of the blade into the upper part of the attachment and press the attachment lock until it clicks into place.
 - c.** To remove the attachment, press the attachment lock with your thumb.
 - d.** Replace the attachment by removing the current one and inserting another as described above.

Trimming Instructions with combs

- 1.** Make sure the appliance is fully charged before you start cutting. Only use the appliance on clean, dry hair. Do not use it on freshly washed hair.
- 2.** Comb the hair in the direction of growth.
- 3.** Slide the hair clipping comb into the guiding grooves.
- 4.** When trimming for the first time, start with the maximum trimming length to familiarize yourself with the appliance.
- 5.** Switch on the appliance.
- 6.** Move the appliance slowly through the hair.
- 7.** For the most effective trim, move the appliance against the direction of hair growth.
- 8.** Since hair does not always grow in the same direction, move the appliance in different directions.
- 9.** Ensure the flat part of the comb remains in full contact with the scalp for an even result.
- 10.** Make overlapping passes over the head to ensure all the hair that needs to be cut is trimmed.

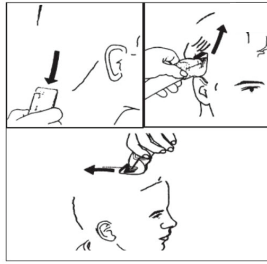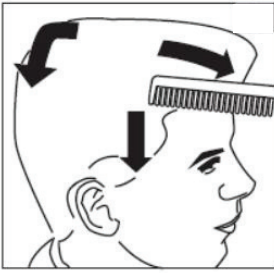

Trimming Without a comb

- 1.** You can cut the hair in a uniform length of 0.1 mm without attaching a comb.



- 2.** For clipping the hair line of bristle and whiskers or neck shaving:
 - a.** Move the hair trimmer slowly along your hair.
 - b.** Place the edge of the cutting head without a comb on your desired length of bristle hairline.
 - c.** Move down the trimmer to cut the hair.

Cleaning and Maintenance

1. Always switch off the hair trimmer and unplug the adapter from the power supply outlet before cleaning and maintenance.
 2. Remove the comb attachment from the hair trimmer.
 3. To remove the cutting head, press forward on the cutting head with your thumb to release it from the frame.
 4. If necessary, rinse the plastic comb attachments under running water, then dry them thoroughly.
 5. Use the attached cleaning brush to remove any hair remnants from the cutting head.
 6. Insert the protrusion of the cutting head back into the locking hole in the frame of the cutting head.
 7. Press the cutting head in until you hear a clicking sound indicating it is locked in place.
- Note:** To reduce friction, from time to time, insert one or two drops of oil between the blades and distribute it evenly.
8. You can use any acid-free oil (such as oil for a sewing machine).
 9. Remove any excess oil with a cloth.

Environmental Considerations

1. Return cardboard packages to recycling points.
2. Dispose of polyethylene (PE) bags in appropriate containers.
3. Batteries contain harmful substances. Do not throw them away with household waste. Return used batteries to recycling points. Before disposing of or returning the appliance to a recycling point, make sure to remove the batteries from the battery compartment.
4. Return a worn-out appliance to an appropriate collection point, as the components may pose a threat to the environment.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**