

PORODO



Porodo

**Fun Talk
Walkie-Talkie Watch & Camera**

SKU: PDS072BUPK



Table of Contents

Product Overview	2
Specifications	2
Schematic View	3
Function Introduction	3
Walkie-Talkie Operation Guide	8
Safety Instructions	8
Disposal	8
Warranty	9
Contact Us	9

Product Overview


The Porodo Fun Talk Walkie-Talkie Watch & Camera is designed for children aged 3 and above. It features a 1.52-inch TFT screen and a 0.08MP camera for fun picture-taking. Powered by an 800mAh battery, the watch includes customizable settings and supports educational apps. It also offers a walkie-talkie function for easy communication, along with an alarm and timer. The watch is made with a child-friendly design, making it both fun and practical for young users.

Specifications

Material	Plastic
Battery Capacity	800mAh
Display	1.52" TFT
Screen Resolution	240 × 283
Memory	32Mb (RAM), 128MB (ROM)
Camera	0.08MP
Charging Time	2.5h
Talking Time	3h
Working Time	2-3 Days
Standby Time	10 Days
Charging Method	USB-C

Chipset	MT6261CA
G-Sensor	SC7A20
Bandwidth	22mm
Product Weight	50g
Product Size	3.4 × 5.5 × 22.7 cm
Model Number	PDS072

Schematic View

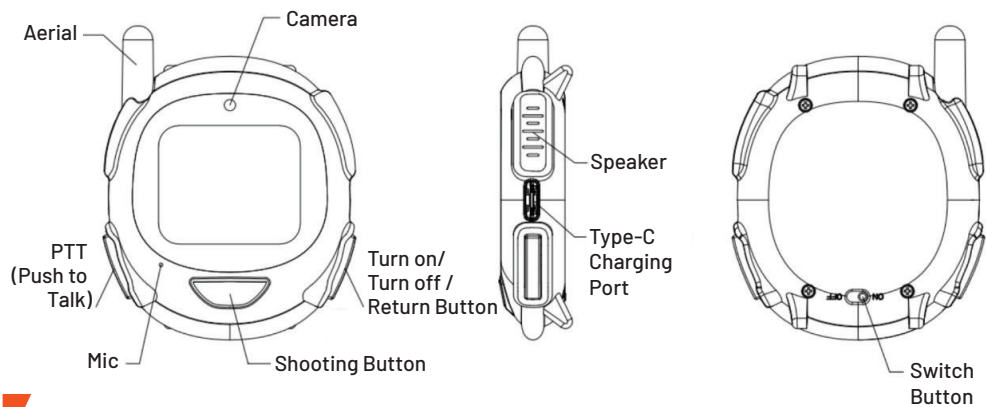

Function Introduction



a. Games

1. Click the game icon to access the game selection.
2. The watch offers six games: BEE WER, CAR GRAB GOODS, CRAWL 2048, MARIO EAT GOLD, NINJA TRAINING, and STICK HERO.
3. Use the left and right triangle icons to navigate.
4. Swipe right to exit or press the power button to return to the default watch face.

5. Select a game icon to enter and follow on-screen instructions.



b. Video

1. Click the video icon to access the video interface.

2. Swipe right to exit or press the power button to return to the default watch face.

3. Click the icon in the lower left corner to start recording, and click again to pause.

4. Click the icon in the lower right corner to save the video.

5. To view or delete a recorded video, click the corresponding icon in the lower right corner.



c. Camera

1. Click the camera icon to access the camera interface.

2. Swipe right to exit or press the shooting button at the bottom of the screen to take a photo.

3. To view the photo, click the icon in the lower right corner.

4. Click the respective icons in the lower left or right corners to save or delete the photo.



d. Pedometer

1. Click the pedometer icon to access the pedometer interface.

2. Click the icon in the upper right corner to start or pause step counting.

3. To clear data, click the icon in the upper left corner (only when step counting is paused).

4. The interface displays step count, calories burned (left icon), and distance in kilometers (right icon).

5. To pause or exit, click the pause icon or swipe right.



e. Photo Album

1. Click the album icon to view photos and videos.
2. To return to the previous screen, click the icon in the lower right corner, swipe right, or press the power button.
3. The interface shows memory used by photos/videos and the date.
4. Double-click any item to view the corresponding photo or video.
5. Use the lower left corner options to rename, delete, or manage files.



f. Recorder

1. Click the recorder icon to enter the recording interface.
2. Click the record button in the lower left corner to start or pause recording.
3. The folder icon in the lower right allows you to view recorded files, their name, and duration.
4. Click the middle icon to play the recording and the right icon to delete it.
5. Swipe right or press the power button to exit the recording interface.



g. Alarm

1. Click the alarm icon to enter alarm settings.
2. Use the toggle in the lower left corner to turn the alarm on or off.
3. Set the alarm tone by clicking the settings icon in the lower right corner.
4. Adjust the alarm time by clicking the numbers on the screen and confirm by clicking the icon in the lower right.
5. When the alarm rings, turn it off or set a snooze delay.



h. Calendar

1. Click the calendar icon to view the current date.
2. Use the upper and lower screens to navigate to the previous or next month.
3. Swipe right to exit the interface.



i. Calculator

- 1.** Click the calculator icon to access the calculator.
- 2.** Swipe right to return to the previous interface.



j. Timer

- 1.** Click to enter the timer interface.
- 2.** Adjust the countdown by clicking the numbers at the top and bottom of the screen.
- 3.** Confirm the time by clicking the icon below.
- 4.** Start the timer by clicking the same icon.
- 5.** A bell will ring when time is up.
- 6.** Use the left icon to restore the initial value (pause first).
- 7.** Use the right icon to pause or restart.
- 8.** Swipe right to return to the previous interface.



k. Stopwatch

- 1.** Click the stopwatch icon to start timing by clicking the middle triangle icon.
- 2.** Click the lower left icon to clear the time (timer must be paused first).
- 3.** Use the lower right icon to pause or restart the timer.
- 4.** Swipe right to return to the previous interface.



l. Settings

- 1.** Click the settings icon to enter the settings menu.
- 2.** Navigate through options like wallpaper, date, time, time format, storage, reset, brightness, and volume by using the left and right sides of the screen.
- 3.** Swipe right to return to the previous interface.

Wallpaper: Select a background from four available options.

Date: Set the year, month, and day, and confirm.

Time: Adjust the time, then confirm.

Storage: View SD card memory and total storage.

Reset: Shut down and restart the device.

Brightness: Adjust screen brightness using the - /+ icons.

Volume: Adjust volume using the -/ + icons.

Other Settings:

1. Power On: Long press the right button.

2. Power Off: Long press the right button on the standby interface.

3. On the watch face interface, long press the screen to switch between available watch faces (10 options are available).




4. Charging: Use a Type-C USB charging cable. It supports charging through a computer USB port or a 5V standard mobile phone charger.

5. Photo Transfer: When the device is turned off, connect the data cable to the computer USB port to download photos to the computer.

Walkie-Talkie Operation Guide



1. Click the Walkie-Talkie icon to access the walkie-talkie interface.
2. Use the volume icon  to adjust the sound level.
3. Set the channels by clicking the channel icon  on the right.

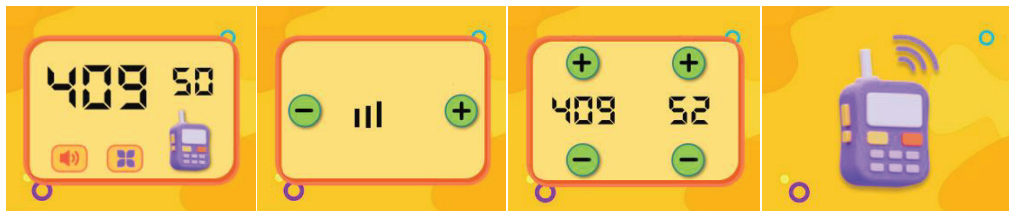

Safety Instructions

1. **Water Resistance Warning:** This product is not water-resistant. Do not expose it to rain, hand washing, swimming, hot showers, or saunas. Wearing the watch in these conditions may cause water damage.
2. **Charger Safety:** Always use a charger that meets international safety standards. Using an incompatible charger may cause slow charging, overheating, or other issues. Please use caution when charging.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**