

PORODO
LIFESTYLE



Porodo Lifestyle
Vyta
Automatic Slow Juicer

SKU: PDLFSTT30BK



Table of Contents

Product Overview	2
Specifications	2
Product Components	3
Safety Precautions	4
Troubleshooting	5
Assembly Instructions	6
Instructions for Use	8
Disposal	9
Warranty	9
Contact Us	9

Product Overview


The Porodo Vyta Automatic Slow Juicer features a 150W motor for efficient juice extraction from various fruits and vegetables. Its 4.34-inch wide feeding tube and pulp outlet design separate juice from pulp for a smooth, pulp-free drink. The juicer includes a reverse function to clear blockages and ensure smooth operation. It is easy to assemble and clean, with dishwasher-safe parts, and has a total capacity of 1.68L, making it a practical choice for your kitchen.

Specifications


Rated Voltage	220-240V
Rated Frequency	50Hz
Motor Power	150W
Motor Speed	45-60rpm
Noise Level	70dB
Feed Chute	110mm
Total Capacity	1.68L
Juicer Cup Capacity	700mL
Pulp Cup Capacity	650mL
Power Plug	UK 3-Pin Plug
Model Number	PDLFSTT30

Product Components

1. Hopper
2. Bowl Cover
3. Squeezing Screw
4. Strainer
5. Bowl
6. Base
7. Juice Cup
8. Pulp Container
9. Cleaning Brush
10. Pusher
11. Filter

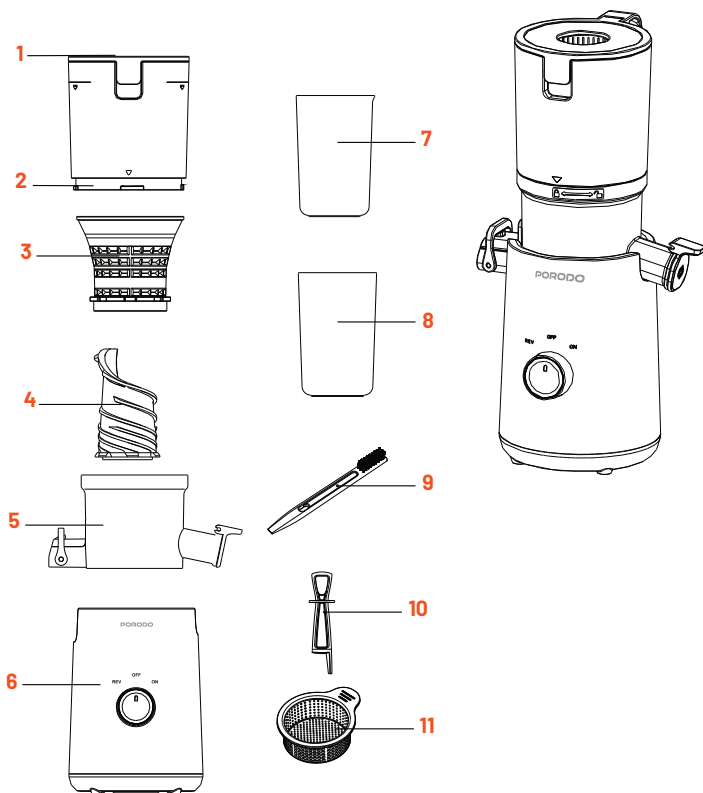

1. Unlock Sign
2. Pulp Outlet
3. Bowl Dot
4. Switch
5. Juice Outlet
6. Juice Outlet Stopper

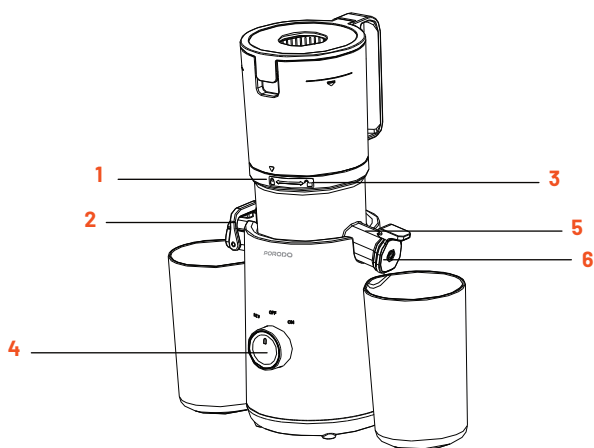

Safety Precautions

Make sure to:

1. Read the manual carefully.
2. Follow the instructions.

Warning: Incorrect operation may result in injury or death.

1. Always plug the unit in with dry hands.
2. Do not bend, drag, or press the power cord. Keep the power cord away from high temperatures and fire. Do not crack or modify the power cord.
3. Do not disassemble or repair the unit on your own.
4. Do not insert fingers, metal objects, or unknown substances into the bowl gap.
5. Keep the base dry.
6. Do not touch the switch with wet hands.
7. If the power cord is damaged or the plug is loose, do not use it.
8. Ensure proper grounding before use. Do not connect to a gas pipe, telephone line, or other items. Always use a grounded adapter.
9. Do not separate bowl components during operation. Do not put fingers or spoons into the feeding tube or outlet as it can cause injury or malfunction.
10. Keep the unit out of reach of children.
11. Ensure the bowl cover is fastened tightly before operating.
12. If there are gas leaks, natural gas, or other combustible gases, do not unplug the adapter until proper ventilation occurs.
13. Do not insert spoons or chopsticks into the juice outlet.
14. If the pusher does not work during operation, press "REV" for 2–3 seconds, then press "On" after REV. If the pusher continues to fail, the motor may be damaged. Stop using it and avoid moving or disassembling the unit.
15. Do not involve ties, necklaces, scarves, or other apparel in the feeding tube.
16. Do not use the unit for more than 30 minutes continuously.
17. Do not use any other pusher except the one provided when dropping food.
18. Do not use the unit after severe impact or dropping.

- 19.** If abnormal sounds, overheating, or smoke occur, stop using the unit immediately.
- 20.** Always unplug the adapter when finished.
- 21.** Do not clean in temperatures above 80°C. Do not place in a dishwasher, dryer, or microwave.
- 22.** The unit weighs approximately 2.0 kg, so ensure you hold the handle at the bottom and use two hands to move it.
- 23.** Allow the unit to cool down for 5 minutes after each use.
- 24.** Do not insert spoons, chopsticks, or other utensils during operation in the juice outlet.
- 25.** The spinning brush can clamp components, so be cautious.
- 26.** Only use the recommended pusher. Other objects may cause damage or injury.
- 27.** Do not attempt to juice hard materials, including large seeds.
- 28.** Do not operate the ON/OFF switch with wet hands to avoid electric shock, leakage, or other accidents.
- 29.** Do not throw fruit mixed with wine, honey, sugar, or other substances that can cause sticking.

Troubleshooting

- 1.** Motor is stuck or has stopped:
 - 1.1.** Ensure the power cord is properly plugged in.
 - 1.2.** Make sure the bowl is properly assembled.
 - 1.3.** Assemble the unit as per the instructions in the manual.
- 2.** Bowl is stuck and does not detach from the base:
 - 2.1.** Check if there is excessive food in the bowl.
 - 2.2.** Ensure no unknown substances are in the bowl.
 - 2.3.** Press the reverse button for 3-5 seconds. Repeat the process 2-3 times, then push the bowl upward while turning.
- 3.** Stopped during use:

Check for excessive food or thicker food inside the unit.

4. Water mark or scratch on the squeezing screw:

These marks are from the manufacturing process and are perfectly normal.

5. Difference between compound strainer and juice strainer:

5.1. Thin grid mesh: For pure juice.

5.2. Thick grid mesh: For both pulp and juice.

6. Leaking from the bowl:

6.1. Ensure the pulp outlet stopper is tightly plugged in.

6.2. Check for excessive fruits.





6.3. Make sure to put fruits in separately.

7. The unit vibrates, some vibration is normal:

However, if severe shaking causes imbalance, check for a defective screw.

Assembly Instructions

a. Assembly Instructions for Bowl, Strainer, and Cover

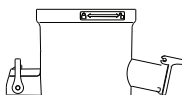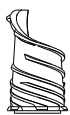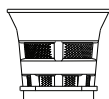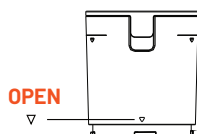

Step 4: Align the green dot on the bowl cover and the bowl, then tighten it clockwise until both are aligned.



Step 3: Place the strainer into the bowl. Rotate the strainer slightly if necessary.




Step 2: Place the screw into the bowl.



Step 1: Assemble the bowl onto the base.


b. Assembly Instructions for Pulp Outlet and Strainer

Step 1: Lock the pulp outlet in place.

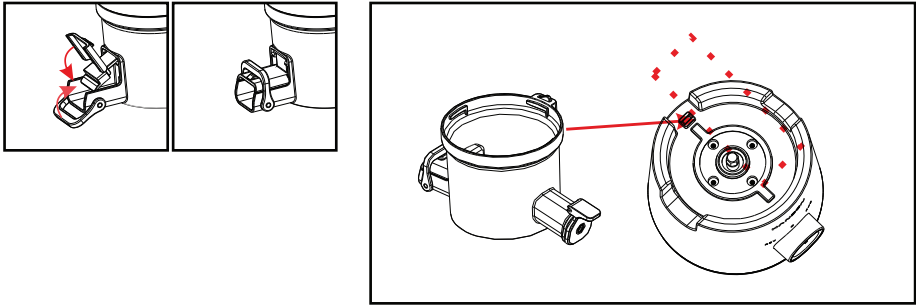


Step 2: Place the bowl onto the base.

Step 3: Place the screw into the bowl first, then insert the strainer into the bowl. Rotate the strainer slightly if needed.

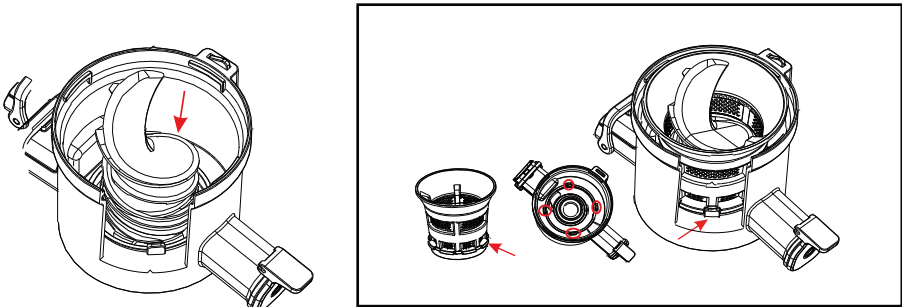

Step 3: Ensure the rotation aligns with the triangle mark.

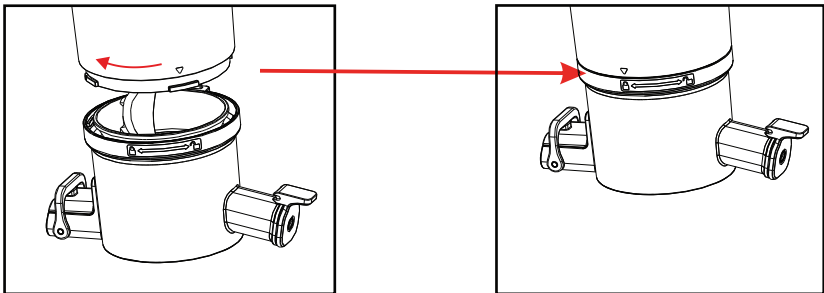


Instructions for Use

Step 1: Turn the "ON" button to start the motor and begin juicing.


Step 2: Drop the fruit into the feeding tube using the pusher. Insert food at a slow pace to allow all the pulp to be extracted.

Step 3: Press the "REV" button to reverse the motor when it stops. The motor will slow down as you press "REV."



Step 4: If the squeezing screw stops, follow these steps:

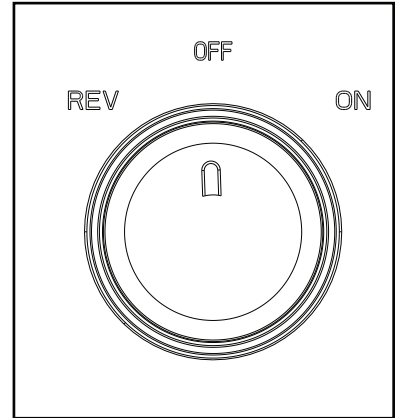



1. Stop the operation when the button is in the "OFF" position.

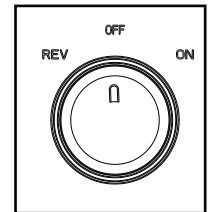

2. Press the "REV" button for 3-5 seconds, then repeat the process 2-3 times.

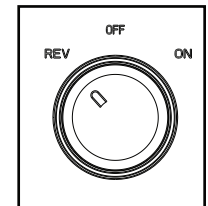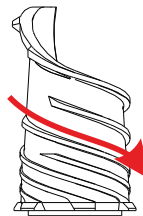

3. Once the reverse function stops, press the forward button to restart the operation.

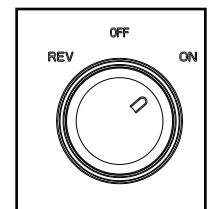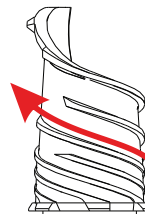

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: **support@porodo.net**

Instagram: **porodo**