

PORODO



Porodo

ECHOBX Android TV Box

SKU: PDH96MAXWH

Table of Contents

Product Overview	2
Specifications	2
Safety Instructions	3
Package Contents	4
Input Ports	4
Remote Control Buttons	5
Installation Guide	6
Bluetooth Pairing	6
Remote Indicators	7
Troubleshooting	7
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Echobox Android TV Box provides 4K Ultra HD streaming capabilities, bringing your favorite content to life with stunning clarity and detail. It supports HDR for enhanced picture quality, offering an immersive viewing experience. With up to Android 14, this TV box ensures you stay up to date with the latest features and apps. Equipped with 2GB of RAM and 16GB of internal storage, it allows for smooth performance and ample space for your streaming needs. The dual-frequency connectivity ensures reliable and fast performance for uninterrupted streaming. Additionally, it supports USB connectivity and multi-format compatibility, making it versatile for various media files and devices. With easy access to apps like Netflix, Hulu, YouTube, and Prime Video, as well as the integration of Google Assistant for voice commands, the Porodo Echobox is designed to enhance your home entertainment experience.

Specifications

Power Supply	DC 5V/2A
Operating System	Android 14.0
CPU	Allwinner H313 Quad Core ARM Cortex A53
GPU	Mali-G31, OOpenGL ES 3.2
RAM	2GB
ROM	16GB
TF Card	64GB Max

LAN	Ethernet: 100 Standard RJ-45
Bluetooth Version	5.0
WiFi	IEEE 802.11 b/g/n/ac/ax
Video Encoding	1080p@60fps
Interface	AV, HD, LAN, DC, TF, USB
Product Weight	92.2g
Product Size	18.8 x 90 x 90mm
Model Number	PDH96MAX

Safety Instructions

- 1.** The device contains live parts. Do not open. Risk of electric shock.
- 2.** Device parts should not be repaired by users.
- 3.** Place the device on a flat, firm, and stable surface. Do not place it on a carpet or rug.
- 4.** Position the device in a well-ventilated location to prevent the accumulation of internal heat.
- 5.** Protect the device from high temperatures, humidity, water, and dust.
- 6.** Do not place any objects near the device that may damage it (e.g., liquid-filled objects or candles).
- 7.** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-Mh, etc.) batteries.

 
Package Contents




TV Box



Remote Control





Power Adapter

 


HD Cable

  Input Ports

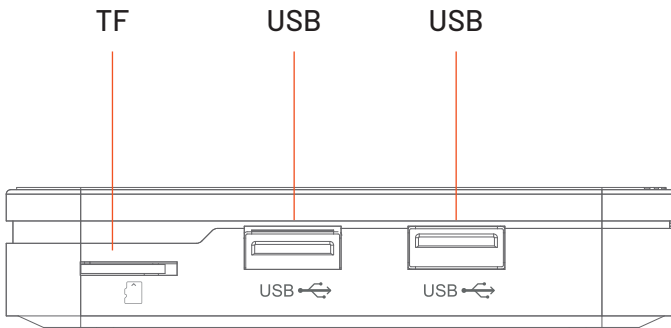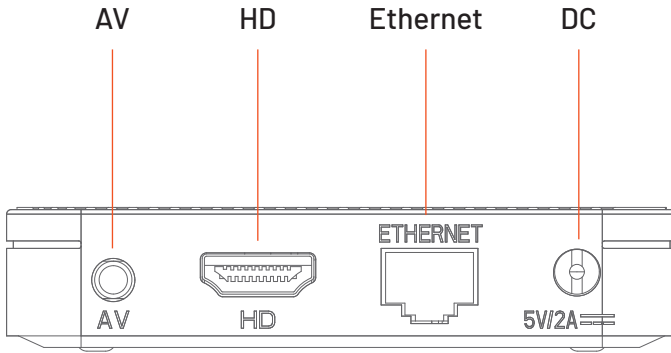

Remote Control Buttons

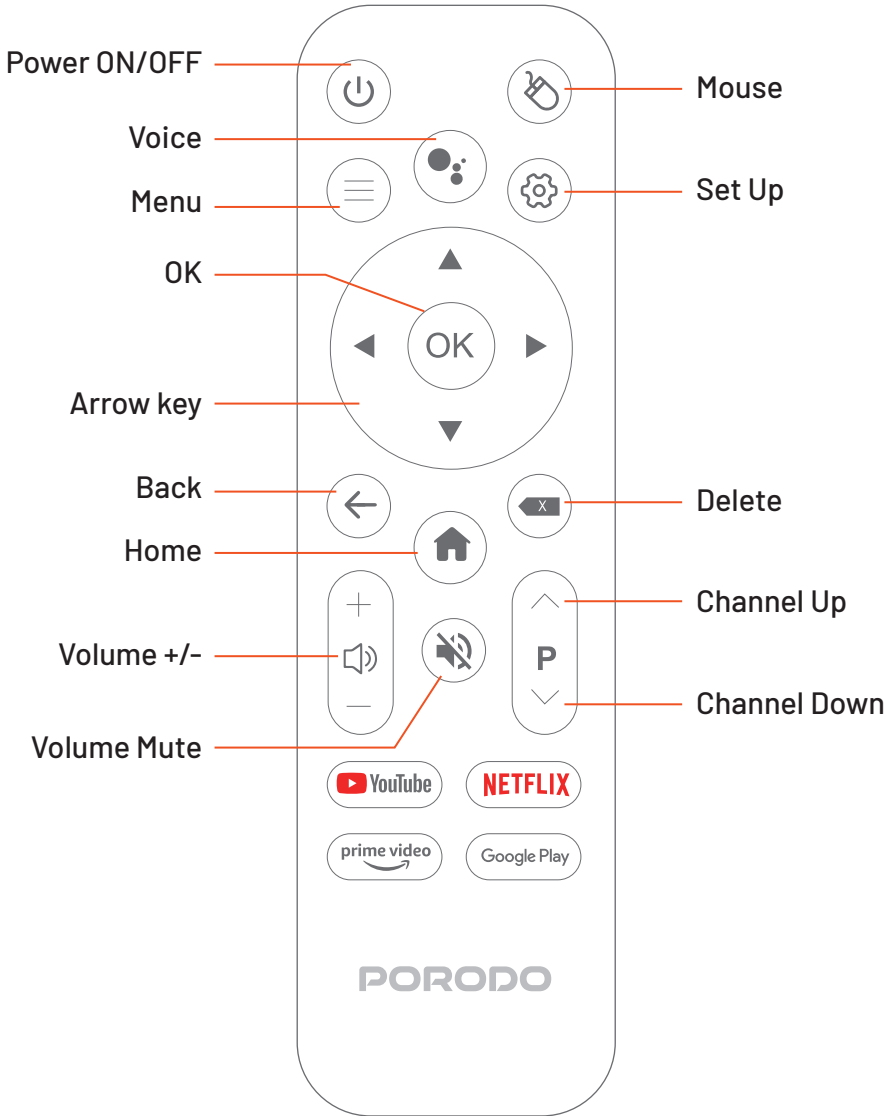 

Note: Press the Google Assistant button to start voice searching for what you want.

Installation Guide

Note: Press the Google Assistant button to start voice searching for what you want.



1. Connect the TV with an HD cable.



2. Turn on the TV box.

Bluetooth Pairing

1. For the first pairing, please place the remote control near the box. Press and hold the [LEFT] and [RIGHT] buttons on the remote control for about 10 seconds at the same time. You will see the red light on the remote control flashing continuously. Release the buttons to enter pairing mode automatically.

2. For the second pairing (Bluetooth reconnection), press any button on the remote control to reconnect.

Remote Indicators

1. Infrared status: When infrared is emitted, the LED blinks 2 times continuously when the key is pressed. The LED will turn off when the key is released.
2. Bluetooth status: When sending Bluetooth, the LED will be on when the button is pressed. The LED will turn off when the button is released.

Troubleshooting

1. No display after powering on?

Ensure your device is properly connected to the TV and the correct HD input is selected in your TV settings.

2. TV has images but no sound?

Ensure your TV is not muted and that the volume is set to an appropriate level.

3. Failed to connect to the network?

Ensure the Ethernet cable is securely connected. Verify that your Wi-Fi is functioning and that the box has a strong signal from your router.

4. Remote control failure?

- a. Replace the battery in the remote control with a new one, ensuring it is placed in the correct polarity.

- b. Make sure the remote control is within range of the TV box.

- c. Go to the Settings menu to unpair and re-pair the remote control.

Note: Please use our accessories to avoid any risks.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: **support@porodo.net**

Instagram: **porodo**