

PORODO
LIFESTYLE



Porodo Lifestyle
MENZO
Rechargeable Trimmer

SKU: PDLFSTWE826



Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Blade Installation	3
Blade Cleaning and Maintenance	5
Cleaning the Trimmer Body	5
Charging Instructions	6
Safety Instructions	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Menzo Rechargeable Trimmer combines convenience and performance, offering both corded and cordless operation. Equipped with a 7000 RPM motor speed, it delivers precision grooming, ensuring a smooth experience every time. With a working time of 90 minutes on a full charge, the trimmer is perfect for extended use. It includes three attachment combs (2mm, 4mm, and 6mm), allowing for versatile styling and trimming. USB-C charging ensures fast and efficient power replenishment, while the high-precision blades guarantee a clean and sharp cut. Ideal for personal grooming, the trimmer is designed to meet various needs with ease and reliability.

Specifications

Material	ABS
Rated Voltage	3.7V
Rated Power	5W
Battery Capacity	600mAh
Motor Speed	7000RPM
Working Time	90min
Charging Time	90min
Charging Interface	USB-C
Water Resistance Level	IPX6
Product Weight	141.2g
Product Size	34.9 x 37.8 x 152.6cm

Model Number	PDLFSTWE826
--------------	-------------

Product Features

- a. Engineered Blades:** Specifically designed to cut through coarse or thick hair without pulling, tugging, nicks, or cuts. Features an extra-compact trimming blade for safe trimming in sensitive areas.
- b. Powerful Motor:** Equipped with an extra-powerful motor that provides ultra-quiet operation and low vibration for a smooth and comfortable grooming experience.
- c. Waterproof Design:** 100 % waterproof with a fully washable body. IPX7 waterproof rating ensures safe use in water.
- d. Detachable Blade:** The blade is detachable for easy cleaning, ensuring optimal hygiene and convenience.
- e. Adjustable Guide Comb:** Includes an adjustable guide comb for customizable trim lengths, providing versatility in styling.
- f. High-Precision Blades:** Features high-precision blades that offer a clean, sharp cut with every use.
- g. Corded & Cordless Use:** Can be used both corded and cordless, giving you flexibility in your grooming routine.
- h. Long Battery Life:** Offers 90 minutes of working time on a full charge, ideal for extended use.
- j. USB-C Charging:** Fast and convenient USB-C charging for quicker power replenishment.
- k. 7000 RPM Motor Speed:** Delivers efficient and smooth trimming with a high motor speed for optimal performance.

Blade Installation

- 1. Installing the Blade**
 - a.** Turn off the trimmer first. Press the blade with your thumb and push it forward


in the direction of the arrow.

- b.** Please hold the blade while disassembling to avoid it falling.




2. Removing the Blade

- a.** Insert the blade (part A) into the trimmer body (slots B).

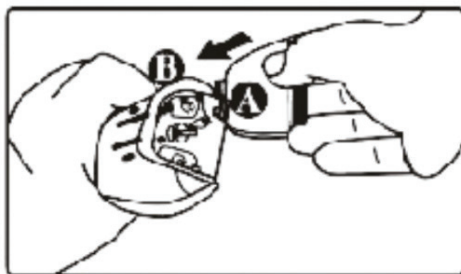

- b.** Press the blade back until you hear a click.


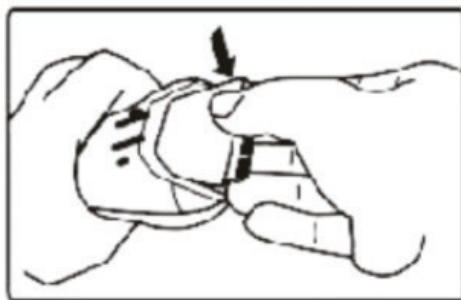


3. Warnings:

- a.** The ceramic blade is fragile; please handle it with care.
- b.** Please sterilize the blade regularly to ensure hygiene.

Blade Cleaning and Maintenance

1. Use a cleaning brush to clean the cutter teeth.
2. Press the blade handle (as shown in the picture) and use a brush to clean between the bottom blade and the upper blade.
3. Never remove the spring of the blade, as this may prevent the blade from returning to its original state and could cause it to be scrapped.
4. Each time after use, please remove the blade and clean the surface as well as the blade teeth.
5. Please wipe the dry blade to prevent the spring from getting rusty.
6. The blade may slightly heat up during operation, which is normal and will not affect the operation.

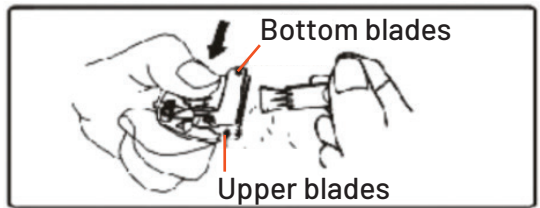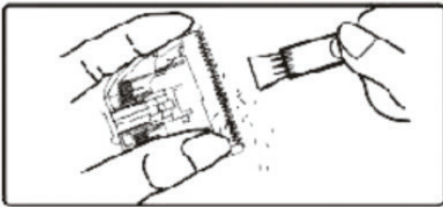

Cleaning the Trimmer Body


1. Sweep the trimmed hair out of the blade slot with a cleaning brush.
2. Wash the trimmer with water.
3. Dry the trimmer with a cloth and place the blade back for storage.



Charging Instructions

Make sure to turn off the trimmer, then connect the USB cable for charging. (The USB cable can be plugged into chargers with a USB interface, such as a cell phone, computer, laptop, power bank, etc.)

Note: Please charge your trimmer before first use.

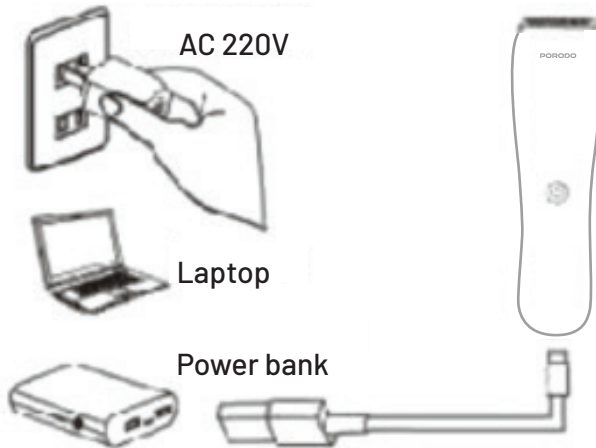

Safety Instructions

1. Ensure the trimmer is turned off before cleaning, assembling, or disassembling the blade to avoid accidental activation.
2. Store the trimmer in a safe place, away from children and pets, to prevent any potential accidents.
3. While the trimmer is waterproof, ensure the charging port and electrical components do not come into direct contact with water.
4. To prevent damage, use only the USB cable provided with the trimmer for charging.
5. When attaching or detaching the blade, avoid applying excessive force to prevent damage to the blade or the trimmer body.

- 6.** The ceramic blade is fragile; avoid dropping the trimmer or mishandling the blade.
- 7.** Always inspect the trimmer for any visible damage before use. If the trimmer or any components are damaged, stop using it immediately and contact customer support.
- 8.** Clean the trimmer after each use to ensure optimal performance and hygiene.
- 9.** Never charge the trimmer while it is plugged into an electrical outlet unattended. Always unplug it after charging is complete.
- 10.** The motor is not user-serviceable. Do not attempt to disassemble or modify the motor in any way.
- 11.** Ensure the trimmer is completely dry before storing it to prevent internal damage or corrosion.
- 12.** For safety reasons, avoid using the trimmer while it is plugged in and charging.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**