

PORODO
LIFESTYLE



Porodo Lifestyle
Groomax
Rechargeable Trimmer

SKU: PDLFSTRN7BK



Table of Contents

Product Overview	2
Specifications	2
Product Components	3
Instructions for Use	3
Charging Guidelines	4
Package Contents	4
Safety Precautions	4
Cutter Head Replacement	5
Cleaning and Maintenance	5
FAQ	6
Material Contents	6
FCC Statement	7
Disposal	8
Warranty	9
Contact Us	9

Product Overview

The Porodo Groomax Rechargeable Trimmer offers an all-in-one solution for trimming, shaping, and detailing. With a powerful 8800 RPM motor speed and up to one hour of continuous use, it ensures a smooth and precise trimming experience. The trimmer is designed for both corded and cordless use, providing flexibility during use. Its IPX6 water resistance feature makes it easy to clean and maintain. The device is equipped with USB-C charging for convenience, ensuring that it is always ready for use. This trimmer is ideal for individuals seeking a reliable, multi-use grooming tool that is both durable and easy to maintain.

Specifications

Material	ABS
Rated Voltage	5V
Rated Power	3W
Battery Capacity	350mAh
Motor Speed	8500±300RPM
Working Time	1h
Charging Time	1.5h
Charging Interface	USB-C
Water Resistance Level	IPX6
Product Weight	52.2±5g
Product Size	18 × 35 × 155mm
Model Number	PDLFSTRN7

Product Components



Instructions for Use

1. Replace the cutter head assembly with the appropriate attachment, suitable for both wet and dry use.
2. To power on or off, press the power button briefly. Press the button again to turn off the device.
3. Indicator light guide: When charging, the red light will be on. Once fully charged, the white light will be on. If the battery is low, the white light will blink. When the device is powered on, the white light will stay on.
4. For use with the nose and ear hair cutter head: Gently position the cutter head into the nostrils and ear holes, and trim any excess hair.
5. After use, press the power button briefly to turn off the device. Clean the cutter head, wipe the device clean, and store it properly.

Charging Guidelines

1. Ensure that the correct voltage (5V) is selected before charging.
 2. Connect the Type-C charging cable to the bottom port and plug it into a mobile phone charger or computer USB port.
 3. Once fully charged, the white light will stay on. Disconnect the power supply promptly.
 4. The product requires 1.5 hours to fully charge and provides approximately 90 minutes of use. For optimal performance, use the trimmer once a week for about 3 minutes. After being fully charged, it can be used for up to six months.
- Note:** If the product is not used for an extended period, it is recommended to charge it regularly every three months. This will help maintain the trimmer's charging functionality and ensure it remains in good working condition.

Package Contents

- a. Charging Cable ×1
- b. Cleaning Brush ×1

Safety Precautions

Note: This product is suitable for cleaning under an open tap.

Warning: Please read and follow the instructions carefully to prevent electric shock or personal injury.

1. This product is intended for personal use only and is not recommended for collective use.
2. Before using, please inspect the product for any visible damage. Do not use it if it is damaged.
3. The trimmer is fully waterproof, and the cutter head can be rinsed under running water after trimming.
4. Always separate the handheld unit from the power cord before cleaning the device with water.

5. Avoid using salt water, thinner, gasoline, alcohol, or any other chemicals to clean the trimmer.
6. Do not insert the blade more than 0.5 mm into the ear or nostril, as this may cause damage to the eardrum or nasal mucosa.
7. Always turn off the power after use and install the protective cover for safety.
8. If the charging cable is damaged, do not use the product. Replace the cable or have it repaired immediately.
9. Do not attempt to open the device. If repairs are needed, please seek professional assistance.
10. Do not replace any components of this product or make any modifications to it.
11. Avoid placing the product in environments where the temperature is below -10°C or above 40°C for extended periods.
12. Always keep the product out of reach of children.

Cutter Head Replacement

1. Turn off the trimmer.
2. Hold the cutter head tightly and rotate it counterclockwise.
3. Pull the cutter head upwards.
4. Replace with a new cutter head.
5. Rotate the new cutter head clockwise until it locks in place.

Warning: If the power cord is damaged, it must be replaced by the manufacturer, its authorized service center, or other qualified personnel to avoid any risk or hazard.

Cleaning and Maintenance

Warning: Separate the handheld part from the power cord before cleaning the handheld unit with water.

1. Turn off the power switch before starting the cleaning process.

- 2. Remove the cutter head accessories from the machine body.
- 3. Use a cleaning brush to remove any hair scraps from each cutter head.
- 4. Alternatively, rinse the cutter head directly under the faucet.
- 5. After cleaning, wipe the cutter head dry.
- 6. Reinstall the cutter head back onto the machine body.
- 7. Rotate the cutter head clockwise until it is securely locked in place.

FAQ

- Q1:** The motor becomes slow and weak during use. What should I do?
Solution: This may indicate that the battery is running low. To resolve this, ensure that the trimmer is fully charged. Once charged, complete the trimming operation for optimal performance.
- Q2:** The trimmer is not turning on. What should I do?
Solution: Ensure that the trimmer is fully charged. If the battery is completely drained, plug the device into a charger and allow it to charge for at least 1.5 hours before attempting to power it on.
- Q3:** Can I use the trimmer while it is charging?
Solution: For safety reasons, it is recommended to charge the trimmer fully before use. Using the trimmer while charging is not advised as it may cause overheating.

Material Contents

Hazardous Material Table						
Parts Name	Hazardous Material					
	Pb	Hg	Cd	CrVI	PBB	PBDEs
Shell Combination	o	o	o	o	o	o
Motor Components	o	o	o	o	o	o
Circuit Board Components	×	o	o	o	o	o
Battery Pack	o	o	o	o	o	o
Appendix	o	o	o	o	o	o

Hazardous Material Information

- (o) Indicates that the content of the hazardous substance in all materials of this component is below the limit specified in GB/T 26572.
- (×) Indicates that the content of the hazardous substance in at least one material of the component exceeds the limit specified in GB/T 26572.

Product Life Span

The (♻️) mark indicates the period of ten years during which the toxic and hazardous substances or elements in the electrical and electronic products will not leak or mutate under normal use conditions. During this period, the use of these products will not cause serious pollution to the environment or significant damage to personal or property safety.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements.

The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

1. Please dispose of this product responsibly.
2. Before discarding the product, remove the battery from the device.
3. When removing the battery, ensure the appliance is disconnected from the power supply.
4. To dispose of the product, first remove the tail cover, outer shell, and battery from the PCB board. Then, send the battery to the designated recycling station for proper disposal.
5. Batteries should be handled with care. If the battery leaks, handle it immediately. Any leaked liquid that contacts the skin or clothing should be wiped off promptly to avoid injury.
6. Rechargeable batteries can be disposed of at stores that sell them or at public recycling points, where special containers are provided for battery disposal.
7. Dispose of other parts of the product according to local laws and policies. Please refer to local disposal guidelines for further details.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**