

PORODO
LIFESTYLE



Porodo Lifestyle
POCKET HD Thermal Printer
SKU: PD-LFST048-WH

Table of Contents

Overview	2
Specifications	2
Package Contents	2
Product Diagram	3
Indicator Guide	3
Precautions	3
Battery Warning	4
APP Download Method	4
Connection Guide	4
Replacing the Printing Paper	6
Operation Guide	7
Troubleshooting	9
FCC Statement	11
IC Caution Statement	12
Disposal	12
Warranty	13
Contact Us	13

Overview

The Porodo Pocket HD Thermal Printer offers high-definition, inkless printing for a variety of documents and images. It is compatible with both iOS and Android devices, featuring a user-friendly app for easy customization of fonts and themes. With its compact design and Type-C charging, it provides up to 1.5 hours of working time, making it perfect for quick and portable printing needs.


Specifications

Battery Capacity	1000mAh
Recharge Time	2.5H
Working Time	1.5H
Power Input	5V/1A
Label Width	50mm
Printing Resolution	203dpi


Package Contents




1. Printer

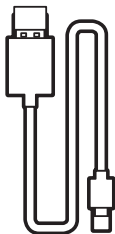

2. Power cord

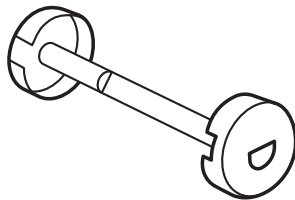


3. Paper holder bracket

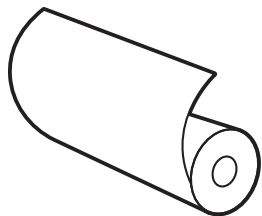

4. Printing paper roll

Product Diagram

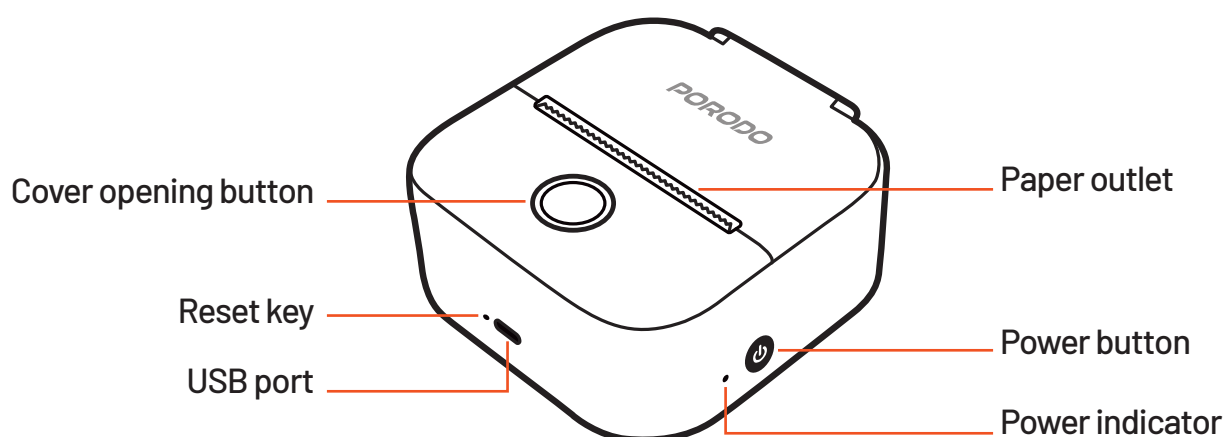

Indicator Guide

Power Indicator Status Description	Power Indicator Status	Description
	Green steady light	Standby / Charging completed
	Green flashing	Charging
	Red steady light	Fault: out of paper / Overheated
	Red flashing	Out of power

Precautions

1. Please use a 5V==1A input for charging the device.
2. Connect the USB cable to the power adapter before charging. To prevent damage to the port, gently insert or unplug the charging cable.
3. Once the device is fully charged, make sure to unplug the charging cable promptly.
4. For safety, avoid charging or using the printer in environments with high temperatures, humidity, heavy smoke, dust, or near open flames, such as in bathrooms, steam rooms, or near heat sources.

5. Charging the device improperly could damage the print head.
6. Be cautious when handling the print head to avoid burns caused by heat.
7. The tearing blade is sharp, so please handle it carefully to prevent accidental cuts.
8. If the printer is not functioning properly, use the reset hole to restart the machine.

Battery Warning

1. Never disassemble, puncture, crush, or throw the battery into fire.
2. If the battery shows signs of severe swelling, do not reuse it.
3. Avoid placing the battery in high-temperature environments. Additionally, do not use the battery after it has been submerged in water.
4. Using the wrong type of battery can cause an explosion. Ensure the used battery is disposed of properly according to the instructions.
5. If using a power adapter for the battery, ensure it meets the required safety standards or use an adapter with certification.

APP Download Method

1. To begin, please search for the "Phomemo" application in your respective app store, then download and install it.
2. For Apple App Store users: Search for "Phomemo" and proceed to download.
3. For Google Play Store users: Search for "Phomemo" and proceed to download.

Connection Guide

Prior to the first use, ensure the printer is fully charged. After charging, press and hold the power button for approximately 3 seconds to power the device on. Connect the device to the application.



Method 1:

- 1.1 Activate Bluetooth on your mobile device.
- 1.2 Open the Phomemo application.

1.3 Tap the icon located in the upper-right corner of the main interface of the Phomemo app.

1.4 Select product name from the available devices list.

1.5 Complete the connection process to the device.

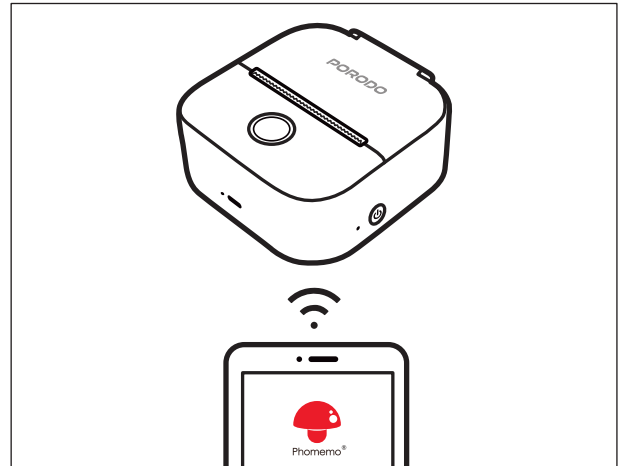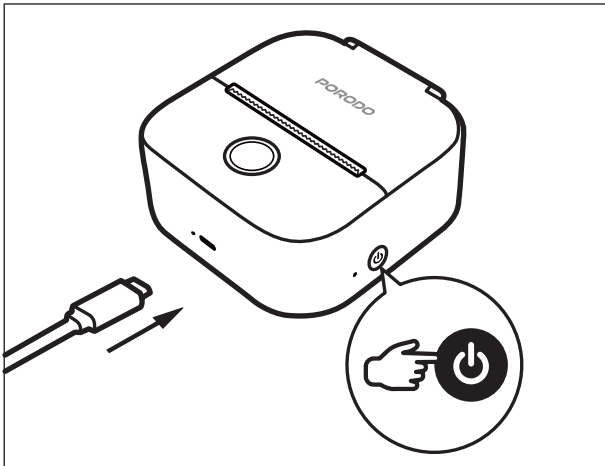


Method 2:

2.1 After powering on the printer, double-click the start-up button to display the QR code.

2.2 Open the Phomemo app and scan the displayed QR code to establish the connection.


Tip:

Users can access a tutorial on the app, which provides a step-by-step guide to connecting the machine, as shown in the instructional video.

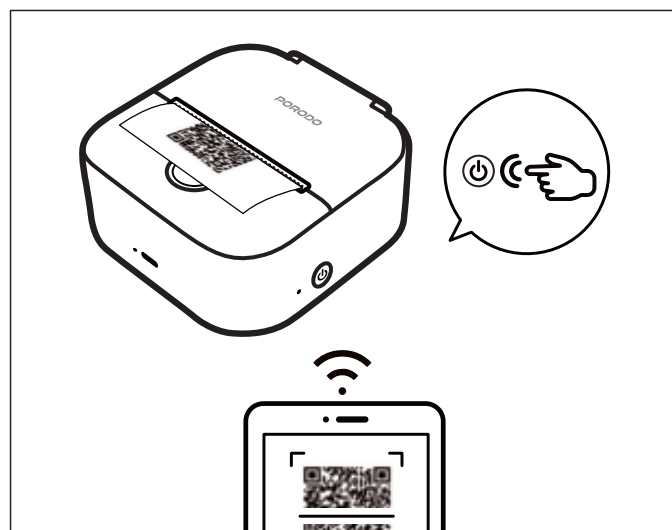

Replacing the Printing Paper

1. Lift the top cover and remove the used printing paper.


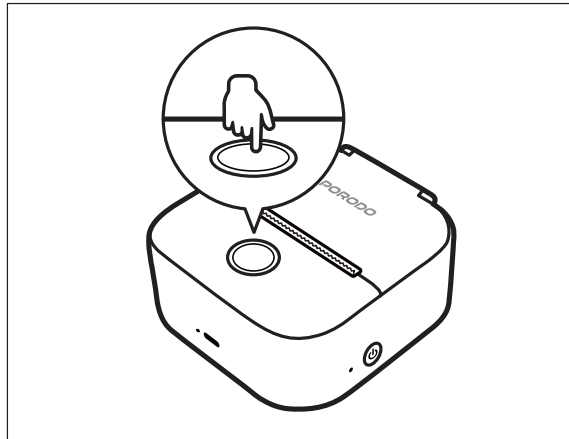


2. Remove the adjuster from the right side of the machine.
3. Load the printing paper into the compartment.
4. Install the adjuster on the right side to secure the paper.
5. Insert the printing paper into the paper compartment, ensuring the top cover is closed.

Tips on How to Identify the Front and Back of the Printing Paper:

- a. Take out a sheet of printing paper and gently scratch it with your nails to determine the surface; ensure that the color side is facing up.
- b. Make sure the smooth side of the paper is facing up and is properly aligned with the printing port.

Note: Official consumables do not contain BPA.

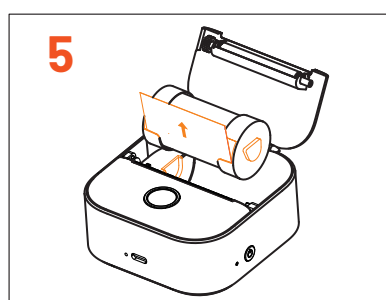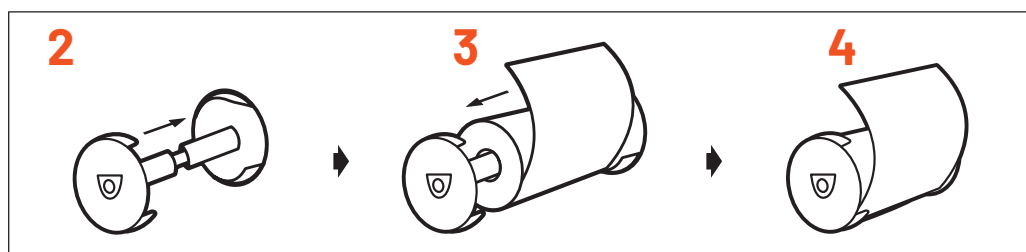

1. Open the Phomemo app and select the "Print Images" function.
2. Add the photos you need to print.
3. Adjust the picture in the work bar area. You can modify the picture, change the brightness, contrast, rotate, or crop the image.
4. Select the photo printing density: Fine, Medium, Thick, or Dedicated.
5. Press the "Print" button in the lower right corner to begin printing the image.

6. Graphic Operation Guidelines

There are a large number of hand-painted original materials available in the material library. Various personalized edits can be performed with this function. The operation steps are as follows:

- a. Open the Phomemo app and select the "Graphic" function.
- b. Click any graphic to enter the editing area.
- c. In the "Functional Area," you can add text, tables, pictures, stickers, and QR codes for personalized editing. The edited content will be displayed in the "Editing Area."

Feature	Instructions
Text	Select the "Text" option to insert text into the body for editing. You can modify the content, font, and alignment as desired.
Table	Select the "Table" option to insert a table for editing within the body of the document.
Image	Select the "Image" option to insert an image into the editing area for customization or printing.
Emoji	Select the "Emoji" option to insert emojis into the editing area for customization or printing.
QR Code	Select the "QR Code" option to generate a QR code. Enter the desired text, which will be converted into a QR code for printing.

7. Note: After editing the content, click the print icon () in the upper right corner to complete printing.

Tips:

You can view the operating tutorial in the APP, and follow the video instructions to connect and operate the machine.

8. Windows Application Document Printing Guidelines

- a. Open the Phomemo APP and select the "Print Web" function.
- b. Enter the desired web address, then click the print button on the page to print the web information.

Tips:

You can access the operating tutorial in the APP, and follow the video instructions to connect and operate the machine.



Possible Reason		
Problem	Possible Reason	Solution
Half margin of page printed	The paper roll holder is not installed correctly.	Reinstall the paper roll holder according to the instructions provided for the paper roll adapter.
	The machine's print head cannot rebound.	Press the print head to ensure it rebounds properly.
Machine can't be charged	The machine cannot charge.	Connect the machine and check the battery status through the Bluetooth connection in the upper right corner. This will show the remaining power of the machine.
	The charger is heating up.	Use a 5V=1A charging cable to charge the machine. Under normal conditions, the machine should be fully charged in 2-5 hours.
	The machine is unable to activate.	Do not leave the battery uncharged for an extended period (around three months), as this may cause the battery to fail to activate or run down naturally.
Machine indicator flashes fast	The battery is less than 10%.	The indicator light will flash quickly to signal that the battery is low.
No response after long-pressing the power button	The machine has no power.	Charge the machine for half an hour and then try turning it on again.
Upper and lower covers are stuck when opening	The upper and lower covers of the new machine may have a running-in period.	Open and close the covers a few times to ensure they move smoothly.
	The machine may have foreign objects inside.	Open the paper compartment and clean the inner compartment to remove any obstructions.
Cannot connect to machine's Bluetooth	The mobile phone Bluetooth is not turned on.	Turn on the Bluetooth on your mobile phone. Please note that Bluetooth cannot turn on automatically and must be turned on manually.
	The app cannot find the machine.	The machine is not turned on. Turn on the machine to a normal state.
		Double-click the printer's power button to print the QR code. Then, scan the QR code directly to connect to the printer.

Machine's Bluetooth connection failed	The mobile phone positioning permission is not turned on.	For Android phones, open the phone positioning permission.
The machine doesn't print	There are no words on the paper.	Ensure the paper roll is installed with the printing side facing up.
	The system has a bug.	Restart the phone to resolve system issues.
	There are black bars on the paper.	Remove some paper to resolve the jam.
	The indicator light is flashing.	Charge the machine for at least half an hour. Reinstall the paper roll. Ensure the paper roll is not pulled to the paper outlet, and pull the paper roll out by a section, preferably beyond the paper outlet.
Paper jam when printing	The paper roll is loose and jammed.	Remove the support for the paper roll, manually wind the paper roll, and then reinstall the support. Alternatively, directly insert the paper roll to print.
	There are foreign objects inside the machine.	Open the paper compartment and clean the inner compartment.
APP shows the printer is out of paper	There is no paper in the machine.	Reinstall the paper roll, ensuring it is not pulled to the paper outlet. Pull the paper roll out by a section, preferably beyond the paper outlet.
	The sensor cannot recognize the paper.	Clean the sensor with an alcohol-stick cotton swab.
	The system has a bug.	Uninstall and reinstall the app to resolve system issues.
Printing succeeded, but the paper printed has no content	The paper roll is loaded upside down.	Take out the paper roll, use your fingernail to draw hard on the paper, and reinstall it with the color side facing up.
Missing print output	The machine's cover is not properly closed.	Reinstall the paper roll holder according to the instructions provided for the paper roll adapter.
	Paper roll expansion hole	Remove the paper roll, cut off the wrinkled part, and reinstall it for printing.
	The machine box cover is not properly secured	Ensure the cover of the machine is securely closed. Press it firmly with your palm.
	The machine has low power.	Charge the machine and then attempt printing again.
		Set the print density to its maximum level to achieve the highest quality output.
	The paper roll has been exposed to the air for too long.	Damp rolls left in the machine or exposed to air can cause incomplete printing. Store unused paper rolls in sealed bags or boxes for protection.
Printed font differs from the edited font	The font output may vary due to different phone models or versions.	Font printing may vary by phone model; set the system font as the default.

Faded font on the paper roll	Improper use and preservation	Do not use glue with thermo-sensitive paper.
		Thermo-sensitive paper should not be pasted with glue.
		Oil-based pens or gel pens may cause issues when used on thermal paper after printing.
		Environmental factors such as temperature, humidity, alcohol, disinfectant, sweat, or hand sanitizers can cause fading.
		Store printed papers in a dry environment, away from light, and avoid contact with other printed surfaces or transparent bags.
		Use official adhesive-backed paper for sticking. Avoid alkaline liquid adhesives as they may cause fading.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the **interference by one or more of the following measures:**

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the

receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

IC Caution Statement

Radio Standards Specification RSS-Gen, Issue 5 - English:

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

RF Exposure Statement:

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

French:

Cet appareil contient des émetteurs/récepteurs exemptés de licence conformes aux RSS d'Innovation, Sciences et Développement économique Canada. Le

fonctionnement est soumis aux deux conditions suivantes :

Cet appareil ne doit pas causer d'interférences.

Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF :

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

Disposal

This product must not be disposed of as unsorted household waste.

It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**