

PORODO



Porodo

4K ANDROID SMART STREAMING TV STICK

SKU: PDH313WH



Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Package Contents	4
Schematic View	4
Operation Guide	5
Bluetooth Pairing	6
Remote LED Indicator	7
Troubleshooting	7
Disposal	8
Warranty	8
Contact Us	8

Product Overview

The Porodo 4K Android Smart Streaming TV Stick offers an enhanced entertainment experience with its seamless integration of Google Assistant and Voice Control, allowing for effortless navigation. Equipped with Bluetooth V5, Android 14, and dual-band Wi-Fi, it delivers a smooth and fast streaming experience. This compact and easy-to-set-up device features 4K UltraHD resolution for crisp visuals, while the HDMI port ensures compatibility with a wide range of TVs. With its quad-core performance and support for popular streaming platforms like YouTube, Netflix, Prime Video, and Shahid, it provides access to a vast library of content. Simply plug it in, and you're ready to enjoy a world of entertainment.

Specifications

 
Operating System	Android 14.0
CPU	Quad-Core ARM Cortex A53
GPU	Mali-G31 OpenGL ES 3.2
RAM	2GB DDR3
Internal Storage	16GB (Expandable with USB Drive)
Wi-Fi	IEEE 802.11 b/g/n/ac/ax (Dual-band)

Bluetooth Version	5.0 (For Remote Control Only)
Power Supply	DC 5V/2A
Video Output	1x HDMI (Supports 4K @60fps)
Product Size	13.2 x 30.6 x 77.7mm
Model Number	PDH313


Safety Precautions

1. Do not attempt to open or disassemble the device, as this may result in electric shock.
2. The device contains no components intended for user repair; all maintenance or servicing must be performed exclusively by qualified personnel.
3. Ensure the device is placed on a flat, firm, and stable surface, avoiding carpets, rugs, or any soft surfaces that could compromise stability.
4. Position the device in a well-ventilated area to prevent overheating and allow for adequate air circulation.
5. Protect the device from high temperatures, humidity, moisture, and dust to maintain proper operation and safety.
6. Keep the surrounding area free of objects that could cause damage or hazards, such as liquid-filled containers, candles, or other heat sources.
7. Use only batteries of the same type and avoid mixing old and new batteries, as well as different chemistries such as alkaline, standard (carbon-zinc), or rechargeable batteries.


Package Contents



TV Stick

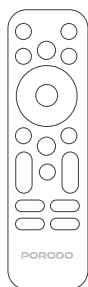



Remote Control

 

Power Adapter

  Schematic View

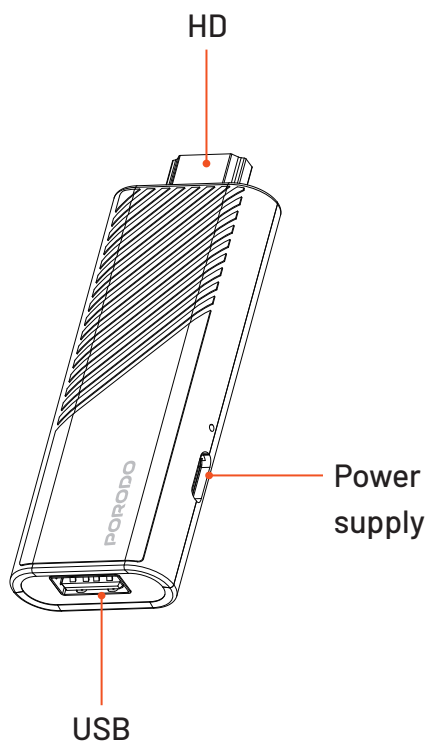


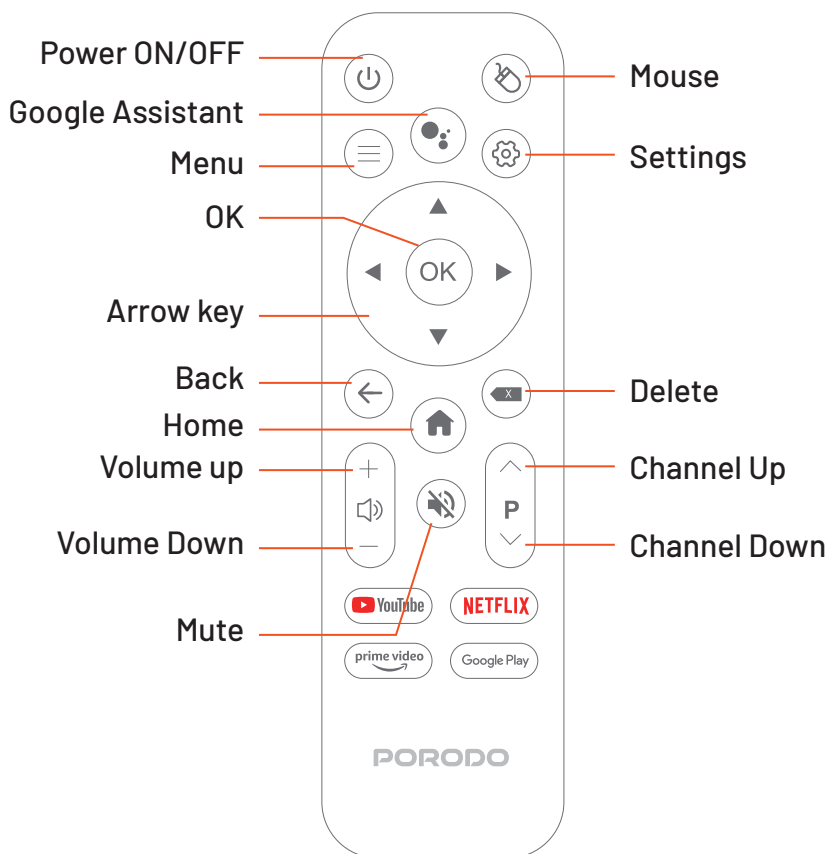

NOTE: Press the Google Assistant button to start searching your desired topic by voice.

Operation Guide

1. Connect the TV Stick to the HD input port of your TV.
2. Connect the TV Stick to a power supply.
3. Turn on the TV Stick and connect it to the network via Wi-Fi.
4. Open your preferred TV channel or movie to start watching.

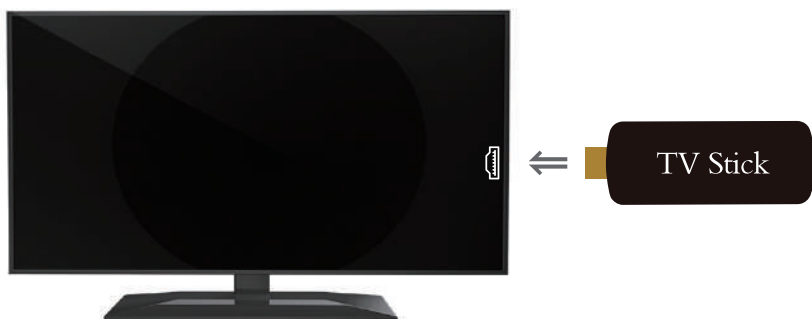


Bluetooth Pairing

1. First Pairing

- a. Place the remote control near the TV stick.
- b. Press and hold the [LEFT] and [RIGHT] buttons on the remote control simultaneously for about 10 seconds.
- c. You will see the red light on the remote control flash continuously.
- d. Release the buttons to automatically enter pairing mode.

2. Second Pairing (Bluetooth Reconnection)

Press any button on the remote control to reconnect.

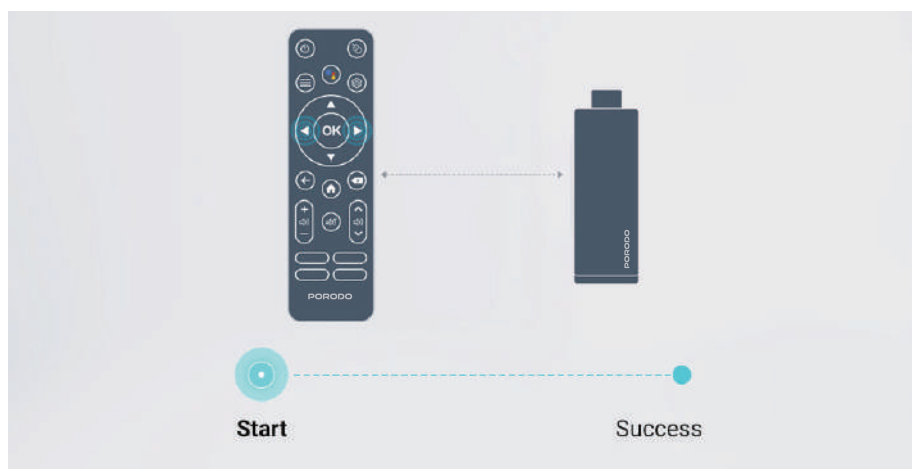

Remote LED Indicator

1. Infrared Status

- a. When infrared is emitted, the LED blinks twice continuously while the key is pressed.
- b. The LED goes off when the key is released.

2. Bluetooth Status

- a. When Bluetooth is being transmitted, the LED is on while the button is pressed.
- b. The LED turns off when the button is released.

Troubleshooting

1. No display after powering on?

Ensure your device is properly connected to the TV and the correct HD input is selected on your TV.

2. TV has images but no sound?

Check that the TV is not on mute and the volume is turned up.

3. Failure to connect to the network?

- a. Confirm the Ethernet cable is securely connected and that Wi-Fi is functional.
- b. Ensure the TV stick has a strong Wi-Fi signal from your router.

4. Remote control not working?

- a. Replace the remote control battery with a new one and ensure it's installed with the correct polarity.
- b. Make sure the remote control is within the range of the TV stick.
- c. Go to the settings menu to unpair and re-pair the remote control.

NOTE: Please use only the provided accessories to avoid any risks.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [**https://www.porodo.net/warranty**](https://www.porodo.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
[**https://www.porodo.net/warranty**](https://www.porodo.net/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
[**info@porodo.net**](mailto:info@porodo.net)

Website: [**https://www.porodo.net/**](https://www.porodo.net/)

Service Support: [**support@porodo.net**](mailto:support@porodo.net)

Instagram: [**porodo**](#)