

PORODO



Porodo

**FINDORA II
SMART CARD FINDER**

SKU: PDK18DBK

Table of Contents

Product Overview	2
Specifications	2
iOS Quick Start	3
Locating your Item on Find My	3
Find an Item Out of Range with Find My	4
Finding a Lost Item by Find My	4
Resetting the Card Finder on Find My	5
Unwanted Tracking Detection on Find My	5
Quick Start on Android	5
Resetting your Card Finder on Find Hub	6
Fast Pair Instructions on Find Hub	6
Card Finder Features on Android	7
FCC Statement	7
Disposal	8
Warranty	9
Contact Us	9

Product Overview

The Porodo Findora II Smart Card Finder is an efficient and ultra-slim device designed to help you easily track and locate your personal items in real-time. With a 50-meter wide range, it ensures reliable tracking over a significant distance. The device is water-resistant, making it suitable for various weather conditions, and it features wireless recharging for added convenience. Additionally, it supports smart voice alerts, enabling easy notifications. Compatible with both Android's Find Hub and Apple's Find My, this tracker offers seamless integration for effortless item location. The Findora II combines practical functionality with a modern design, making it an ideal solution for those looking to never lose track of their important belongings.

Specifications

Material	ABS
Battery Capacity	155mAh
Charging Time	1.5h
Standby Time	6-9 months (Single Charge)
Bluetooth Version	5.2
Bluetooth Distance	20-50m
Compatibility	iOS, Android Devices

Product Size	2.6 x 50 x 80mm
Model Number	PDK18D

iOS Quick Start

1. Scan the Qr code below, download, and install the "Find My" app.
2. Turn on the Findora II
3. Open the "Find My" app and tap "+"
4. Turn on the Bluetooth on your iPhone.
5. Tap "Add Other Item"
6. search for "Findora II"
7. Tap "Connect".
8. Follow the instructions on screen to complete the connection.



Locating your Item on Find My

1. Finding Item Locator When It's Nearby
 - a. Open the Find My app and select the "Items" tab.
 - b. Tap on your Item Locator from the list.
 - c. Tap Play Sound to make your Item Locator beep.

- d.** Tap Stop Sound to stop the beeps once you find your item.
- 2.** Find Item Locator's Last Known Location
 - a.** Open the Find My app and select the "Items" tab.
 - b.** Tap on your Item Locator from the list.
 - c.** Your Item Locator's last known location will appear on the map as the emoji you chose during setup.
 - d.** To navigate to that last known location, tap Directions to open the Maps app.

Find an Item Out of Range with Find My

- 1.** Enabling "Notify When Left Behind"
 - a.** Open the Find My app and select the "Items" tab.
 - b.** Tap on your Item Locator from the list.
 - c.** Under Notifications, enable the Notify When Left Behind toggle.
 - d.** You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device.
- 2.** Enabling "Notify When Found"
 - a.** Under Notifications, enable the Notify When Found toggle.
 - b.** When another device with Find My sees your Item Locator, you will receive a notification of its updated location.

Finding a Lost Item by Find My

- a.** Enable "Lost Mode"
- b.** Open "Find My" app and select the items tab.
- c.** Tap on your item locator from the list.
- d.** Under Lost mode, select enable.
- e.** A detailed Lost Mode screen will pop up.
- f.** Select continue, enter your phone number or email address and tap next.

Resetting the Card Finder on Find My

1. Removing the Item Locator from the Find My app
 - a. Open the Find My app and select the "Items" tab.
 - b. Tap on your Item Locator from the list.
 - c. Please ensure Lost Mode is disabled.
 - d. Scroll to the bottom of the screen and tap Remove Item.
 - e. A summary will open, tap Remove to confirm.
2. Factory Reset Your Item Locator
 - a. After successfully removing the Item Locator from the Find My app, press the Item Locator's function button four times rapidly. You will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime.
 - b. The Item Locator is now reset and ready to be paired to a new device.

Unwanted Tracking Detection on Find My

If your iPhone detects that an unknown Item Locator is traveling with you, it will send you a notification. A sound will play, helping you locate it. These alerts are only activated when an Item Locator is not connected to its owner's phone, so your partner's Item Locator will not trigger a sound if they are with you.

Quick Start on Android

1. Download the "Find Hub" app from the Play Store.
2. Turn on the "Findora II" and wait for the pop-up to show smart card finder on Android Find Hub.
3. If you missed the pop-up, open settings in google and click on "All Services".
4. In the "connected devices & sharing" menu, select "Devices".
5. Click "Scan for nearby devices".

6. Card Pro will appear in the list of available nearby devices.
7. Click on "Findora II" and follow the on-screen instructions to complete the connection.

NOTE: To find nearby devices, in "Google Find Hub" app, select your smart card finder and select the device to view its location.

NOTE: To find far away devices, in the "Google Find Hub" app select your smart card finder select "Findora II" to view its location. To navigate to the location, select "get directions" to open map navigation.

Resetting your Card Finder on Find Hub

1. Open the "Google Find Hub" app, select your Card Pro, tap the Settings button, then tap "Remove from Find Hub" and confirm.

2. When the device is powered on, press the button five times continuously. On the fifth press, keep holding until you hear the prompt tone.

Note: Please ensure the Card Pro is powered on and removed from the "Google Find Hub" app before performing the reset.

Fast Pair Instructions on Find Hub

1. Make sure your phone's Bluetooth and network are turned on.

2. Press the button once to turn on the Card Pro (a beep will sound).

3. Bring the Card Pro close to your Android device and wait for the pop-up to show the Card Pro.

Note: If no pop-up appears, please restart your phone and try again.

4. Tap "Connect," read, and accept the prompts to complete the pairing.

5. In the "Google Find Hub" app, select "Card Pro" to customize the device name and category.

Card Finder Features on Android

1. Enabling lost Mode

- a. In the "Google Find Hub" app, select your smart card finder and tap "Mark as lost".
- b. Add your contact information and you will get notified if the find hub device network locates your card finder.

2. Location Sharing

In the "Google Find Hub" app, select your card finder then tap share device.

3. Connecting to Another Phone

After completing the reset process, you can connect to another android phone.

4. Charging

- a. Use regular wireless charging equipment to charge the product.
- b. While charging a red lights stays on.
- c. Green light appears when charging is full.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements.

The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)