

PORODO
LIFESTYLE



Porodo
ShARP
CORDLESS ELECTRIC SCISSORS

SKU: PDCESTY008GY

Table of Contents

Preface	2
Product Overview	2
Package Contents	2
Key Features	2
Main Functions	2
Before First Use	3
Charging Instructions	3
Operating Instructions	3
Speed Level Guide	3
Guide Light and LED Display	4
Safety Precautions	4
Important Notes	4
Cleaning and Maintenance	4
Storage Instructions	5
Troubleshooting	5
Specifications	5
Disposal	6
Warranty	7
Contact Us	7

Preface

Thank you for choosing the Porodo SHARP Cordless Electric Scissors. This product is designed for fast, easy, and precise cutting of different materials such as leather, carpet, blister packs, and cardboard.

Product Overview

The cordless electric scissors are equipped with a guide light, LED digital display, USB-C charging port, and built-in safety protection. The cordless design makes it easy to use at home, in workshops, or for daily cutting tasks.

Package Contents

1. Cordless Electric Scissors
2. Type-C Data Cable
3. Machine Bag

Key Features

1. Cordless electric design
2. speed levels 5
3. 6mm maximum cutting thickness
4. minutes working time 45
5. Operation guide light
6. LED digital display
7. USB-C charging port
8. Built-in safety protection
9. Storage bag included

Main Functions

This product is suitable for cutting:

1. Leather
2. Carpet
3. Blister packs
4. Cardboard

Before First Use

1. Remove all packaging materials.
2. Check that all accessories are included.
3. Charge the product fully before first use.
4. Make sure the blade area is clean and free from blockage.
5. Read all safety instructions before operation.

Charging Instructions

1. Connect the Type-C cable to the charging port.
2. Connect the cable to a suitable power source.
3. Allow the product to charge for 2-3 hours.
4. Disconnect the cable after charging is complete.
5. Do not use the product while charging.

Operating Instructions

1. Make sure the scissors are charged.
2. Select the suitable speed level.
3. Place the material on a stable surface.
4. Hold the scissors firmly.
5. Use the guide light to follow the cutting line.
6. Move the scissors slowly and steadily through the material.
7. Turn off the product after use.

Speed Level Guide

The product includes 5 speed levels. Use a lower speed for thin or delicate

materials and a higher speed for thicker materials such as carpet or cardboard.

Guide Light and LED Display

The operation light helps you cut with better precision. The digital display helps show product status and speed level during use.

Safety Precautions

1. Keep fingers away from the blade during operation.
2. Do not use the product near water or wet surfaces.
3. Do not allow children to use the product.
4. Do not cut materials thicker than 6mm.
5. Do not touch the blade immediately after use.
6. Use only the provided Type-C cable for charging.
7. Stop using the product if it becomes damaged.

Important Notes

1. This product is designed for cutting suitable household and craft materials only.
2. Do not use it for metal, stone, glass, or extremely hard materials.
3. Do not force the blade through thick materials.
4. Working time may vary depending on speed level and material thickness.
5. Noise level is approximately 50dB during operation.

Cleaning and Maintenance

1. Turn off the product before cleaning.
2. Remove dust and cutting residue from the blade area.
3. Wipe the body with a soft dry cloth.

4. Do not wash the product with water.
5. Keep the charging port clean and dry.
6. Store the product inside the machine bag when not in use.

Storage Instructions

1. Store in a cool and dry place.
2. Keep away from heat, moisture, and direct sunlight.
3. Keep out of reach of children.
4. Do not place heavy objects on top of the product.
5. Charge the battery regularly if stored for a long time.

Troubleshooting

1. Problem: The scissors do not turn on.

Solution: Charge the battery fully and try again.

2. Problem: The scissors cut slowly.

Solution: Select a higher speed level or check if the blade area is blocked.

3. Problem: The product stops while cutting.

Solution: The material may be too thick or hard. Use only materials within the 6mm cutting limit.

4. Problem: The product does not charge.

Solution: Check the Type-C cable, charging port, and power source.

5. Problem: Cutting is not smooth.

Solution: Clean the blade area and move the scissors slowly through the material.

Specifications

Rated Voltage	4V
Input	240-100V/60-50Hz
Protection Current	12A Max

Battery	Lithium-ion 2000mAh
Speed	240rpm \pm 10%
Noise Level	50dB
Cutting Thickness	6mm Max
Charging Time	2-3 Hours
Working Time	45 Minutes
Charging current	5V/500 mAh
Charging Port	Type-C
Accessories	Type-C Data Cable Machine Bag
Material	ABS
Product Size	175×145×65mm
Product Weight	450g
Model Number	PDCESTY008

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**