

PORODO
LIFESTYLE



Porodo Lifestyle
Handheld Garment Steamer

SKU: PD-LSPRGS-BK

Table of Contents

Features	2
Specifications	2
Schematic View	3
Safety Instructions	3
Attention	4
Before the First Use	5
Installation and Use	5
Ironing Clothes	6
After Each Use	6
Maintenance and Storage	7
Troubleshooting	7
Warranty	8
Contact Us	8


Features

1. **Sophisticated Design:** Features an elegant and spacious build.
2. **Large Water Tank:** Designed for extended use without frequent refills.
3. **Heated Metal Faceplate:** Smooths stubborn wrinkles effortlessly with its warm metal surface.
4. **Versatile Ironing Options:** Supports vertical, horizontal, and dry ironing to accommodate different fabric care needs.
5. **Durable Quality:** Utilizes pump steam technology to prevent leaks and spills, enhancing reliability and longevity.
6. **Extreme Steam:** Capable of steaming a variety of fabrics, from cotton to silk, ensuring clothes, bedding, and curtains remain wrinkle-free.
7. **Compact and Travel-Friendly:** Easily steams clothes whether they are hung vertically or lying flat, making this steamer an ideal travel companion.
8. **User-Friendly:** Operates efficiently with regular tap water. Lightweight and portable for daily use.

Specifications

Rated Voltage	230-240V
Rated Frequency	50-60Hz
Rated Power	1700W
Water Tank Capacity	360ml
Power Plug	UK 3-Pin Plug
Accessories	Fabric Brush and Water Cup
Product Weight	820g
Product Dimension	152×112×270mm

Schematic View

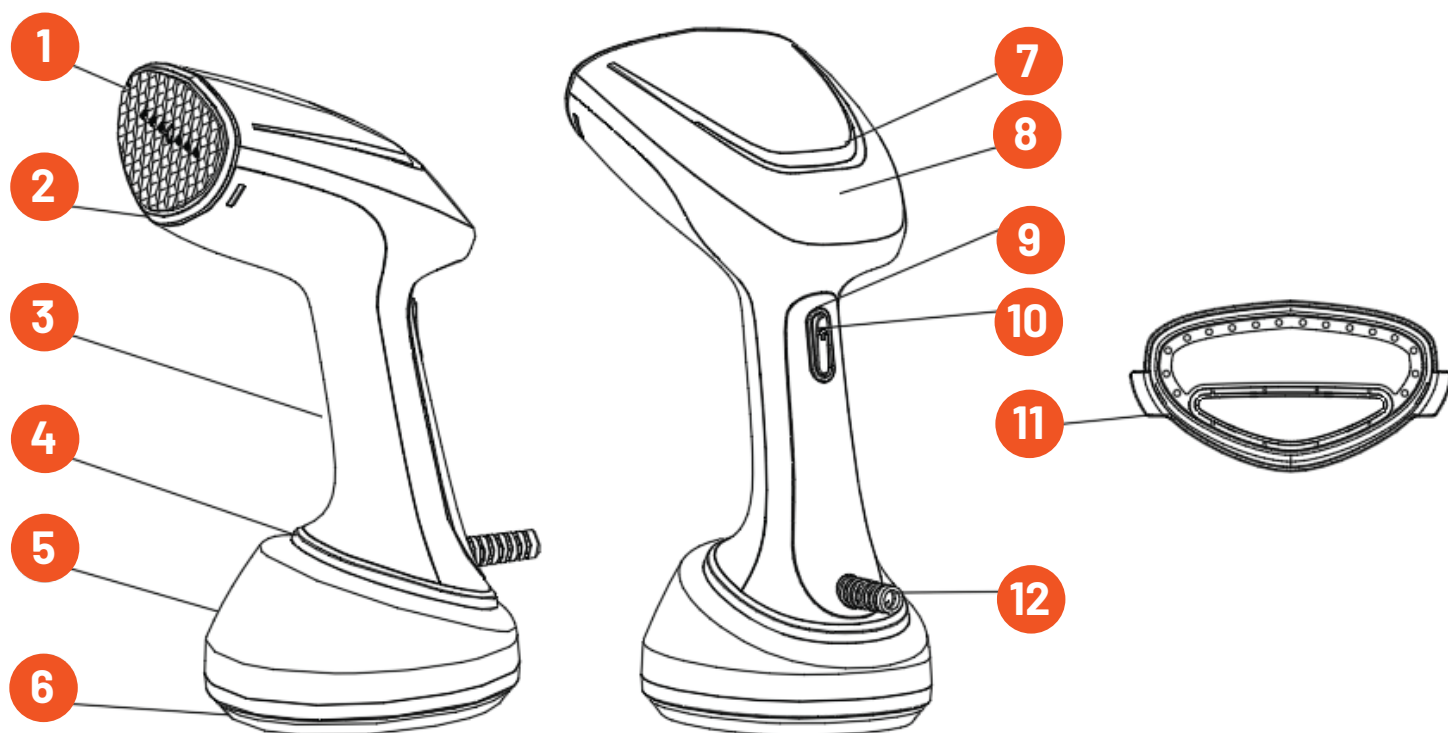

1. Stainless Steel Panel	7. Lamp Cover
2. Panel Bracket	8. Handle Cover
3. Handle	9. Ornament
4. Bottom Cove	10. Steam Button
5. Water Tank	11. Brush
6. Tank bottom Plate	12. Cord Bushing

Safety Instructions

Before operating this product, please thoroughly read the instruction manual and retain it for future reference.

A. Caution

1. Avoid immersing this product in water or other liquids, and do not rinse under a tap.
2. Operate the appliance with care, being mindful of the steam it produces. This steam can cause splattering, scalding, and other hazards.

B. Warning

- 1.** Before connecting the product to the power supply, verify that the marked voltage corresponds with the local power supply voltage.
- 2.** Do not use the product if the plug, power cord, or the product itself is visibly damaged or has fallen or leaked.
- 3.** This product must be serviced at an authorized maintenance center only.
- 4.** If the power cord is damaged, it must be replaced by a professional from the manufacturer or an equivalent service department to prevent hazards.
- 5.** Do not leave the product unattended while it is powered on.
- 6.** This product is not suitable for children or individuals who are physically or mentally disabled, or who lack the necessary experience and knowledge, unless they are under supervision or directed by someone responsible for their safety.
- 7.** Children should not be allowed to play with this product.
- 8.** Keep the product and its power cord out of reach of children under 8 years of age when the product is powered on or cooling down. Only children aged 8 or above may use body products under adult supervision.
- 9.** Avoid touching the steam head and surface while the product is in use. This product emits high-temperature steam; do not direct the steam at people or animals, and avoid ironing clothes while on the body to prevent burns.
- 10.** Always unplug the product before cleaning, installing or removing brush accessories, or filling the water tank.

Attention

- 1.** This product must be used with a grounded socket.
- 2.** Do not allow the steam nozzle to come into contact with surfaces when the product is very hot or connected to the power supply.
- 3.** Regularly inspect the power cord for damage.
- 4.** Prevent the power cord from coming into contact with high-temperature steam during operation.
- 5.** Do not operate the product when the water tank is empty.
- 6.** Always turn off the power and unplug the product if you intend to leave it unattended, even for a short period.

7. After ironing, turn off the product, remove the power plug, and allow the product to cool for 60 minutes before cleaning.
8. This product is intended for household use only; do not use it in bathrooms or outdoors.
9. Do not pull or drag the product or its power cord.
10. Be aware that hot steam may damage or discolor certain walls or doors.
11. If your area has hard tap water, regular use may lead to mineral buildup over time.
12. Avoid using perfume, vinegar, detergent, or ironing agent as these are not suitable for use with this product.

Before the First Use

1. Remove any labels or protective covers from the steam head and ensure the power cord is straightened before use.
2. The first time you use the ironing machine, allow the steam to discharge freely for a few minutes. This will help remove any residual impurities or odors from the manufacturing process.
3. To prevent circuit overload, it is advised not to plug the ironing machine into a socket circuit that is shared with other appliances.
4. Upon opening the package, thoroughly inspect all items and parts to ensure nothing is accidentally discarded.

Installation and Use

1. Remove all packaging materials from the product before use.
2. To fill the water tank, hold it by the handle, allowing it to rotate freely. Remove the lid, fill the tank, ensuring the water level remains at least one-third below the maximum mark, then replace the lid.
3. With one hand, hold the handle of the ironing machine and with the other, attach the cloth brush to the steam head. It will emit a sound when properly installed.
4. Plug the device into a power socket and turn it on.
5. The blue indicator light will illuminate, and the machine will begin to heat up.
6. Once preheated, press the button to release steam; press again to stop.
7. After use, disconnect the device from the power source.

Note: This ironing machine is equipped with a low temperature protection feature. If it fails to reach the required temperature, a blue indicator light will activate, indicating that the pump is inactive. Ensure that the machine does not spray steam directly at users to prevent scalding.

Ironing Clothes

The steam hanging ironing machine is straightforward to use, ideal for ironing clothes with wrinkles or creases, curtains, and refreshing decorative fabrics. It can also be applied to most knitwear.

Warning: This product is specifically designed for use with clothes suspended vertically. Avoid using it on clothes laid out in a horizontal position.

1. Ensure the fabric is breathable before use to prevent steam accumulation on the cloth, which could dampen it.
2. Check all pockets to ensure they are empty.
3. Inspect the back of the clothes for any objects that could be damaged by steam.
4. Avoid using the hanging ironing machine near metal parts of clothing, as high-temperature steam can cause these parts to fade.
5. When you press the steam button, a vibration and a subtle buzzing noise are normal operational sounds.
6. For optimal results, use the fabric brush gently along creases in an up-and-down motion to effectively smooth out wrinkles.
7. If not using the fabric brush, maintain a minimum distance of 5cm between the steam head and the cloth.
8. If the machine emits a louder humming sound and fails to eject steam, this could indicate a water shortage. Please check and refill the water tank if necessary.

After Each Use

1. After turning off the device, continue to run the power for about 15 seconds or until there is no steam output.
2. Press the power switch off or disconnect the power cord from the outlet.
3. Remove the tank, open the tank inlet cover, and invert the tank over a sink or bucket to drain any remaining water.
4. Place the device vertically on a flat surface and allow it to cool down completely before storing.

Maintenance and Storage

1. Remove the brush from the steam head and clean it using a damp cloth.
2. Avoid using harsh or corrosive cleaners or solvents.
3. Do not immerse the steam ironing machine in water or any other liquids.
4. Avoid throwing or bending the appliance.
5. Do not attempt to disassemble or reassemble the appliance.
6. Always empty the water tank after each use.
7. Do not store the appliance in damp environments.
8. Keep the appliance away from heat sources and direct sunlight.
9. Ensure that the steam outlets remain clean, unobstructed, and free from fouling.
10. It is advisable to store the ironing machine vertically in a flat, stable location such as a closet.

Troubleshooting

Problem	Solution
Iron does not heat up.	Ensure the plug is correctly inserted. Check the power supply.
No steam is emitted from the ironing machine.	Verify that the water tank is loaded correctly. Check the water level in the tank. Press the steam button firmly.
The water tank is leaking.	Ensure the water level does not exceed the maximum level. Confirm that the cover is securely closed. Follow the instructions in the manual and maintain the ironing machine in an upright position.
The ironing machine makes a loud pumping noise during operation.	Verify that the water tank is loaded correctly. Check the water level in the tank. It is normal for there to be air in the water pipe if the machine has not been used for an extended period.
Prevent discoloration of metal accessories on clothing.	Do not use the steam ironing machine directly on metal fittings. Use steam cautiously when near metal fittings.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**