

PORODO
LIFESTYLE



Porodo Lifestyle

Portable Folding Electric Kettle
with Temperature Setting and Touch Display

SKU: PD-KTLD850W-WH

Table of Contents

 
Features	2
Schematic View	2
Folding	3
Touch Interface	4
Instructions for Use	4
Specifications	6
Troubleshooting	6
Precautions	7
Safety Warnings	9
Environmental Compliance Notes	10
Compliance for Food Contact Materials	11
Cleaning and Maintenance	11
Warranty	12
Contact Us	12

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features


1. The kettle is made from high-grade silicone, ensuring durability, safety, and compliance with food contact regulations.
2. Its innovative folding design allows for easy storage and enhanced portability, making it ideal for small spaces and travel.
3. Equipped with a digital display, this kettle provides precise temperature control and real-time heating status updates.
4. The kettle features advanced heating technology that allows water to reach boiling point in few minutes, offering quick and efficient operation.
5. Integrated safety measures prevent the kettle from overheating and burning out when operated without water.
6. The foldable silicone body of the kettle is designed for compact storage and enhanced portability, perfect for users with limited space.
7. The kettle has a 600ml capacity, ideal for personal use.

Schematic View

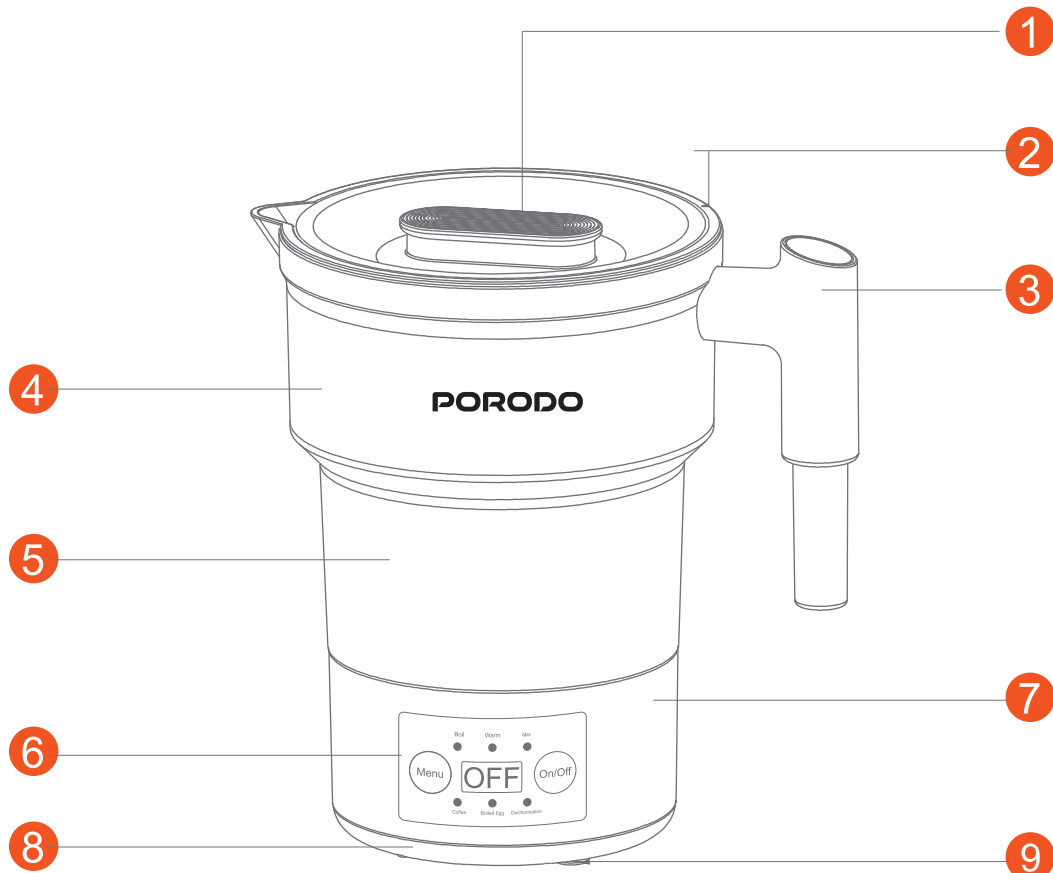

1. Lid Handle	4. Shell	7. Base
2. Lid	5. Kettle Body	8. Base Cover
3. Handle	6. Touch Interface	9. Anti-Slip Base

 Folding

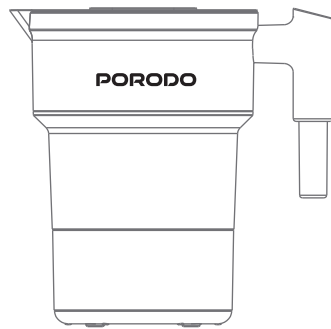

Not Folded

 


Folded

Step 1 and Step 2: Begin with the kettle in its expanded form. Compress the kettle handle upwards to fold the handle..


Step 3: Gently press down on the top to initiate the folding.

Step 4: Continue pressing until the body of the kettle is compacted.

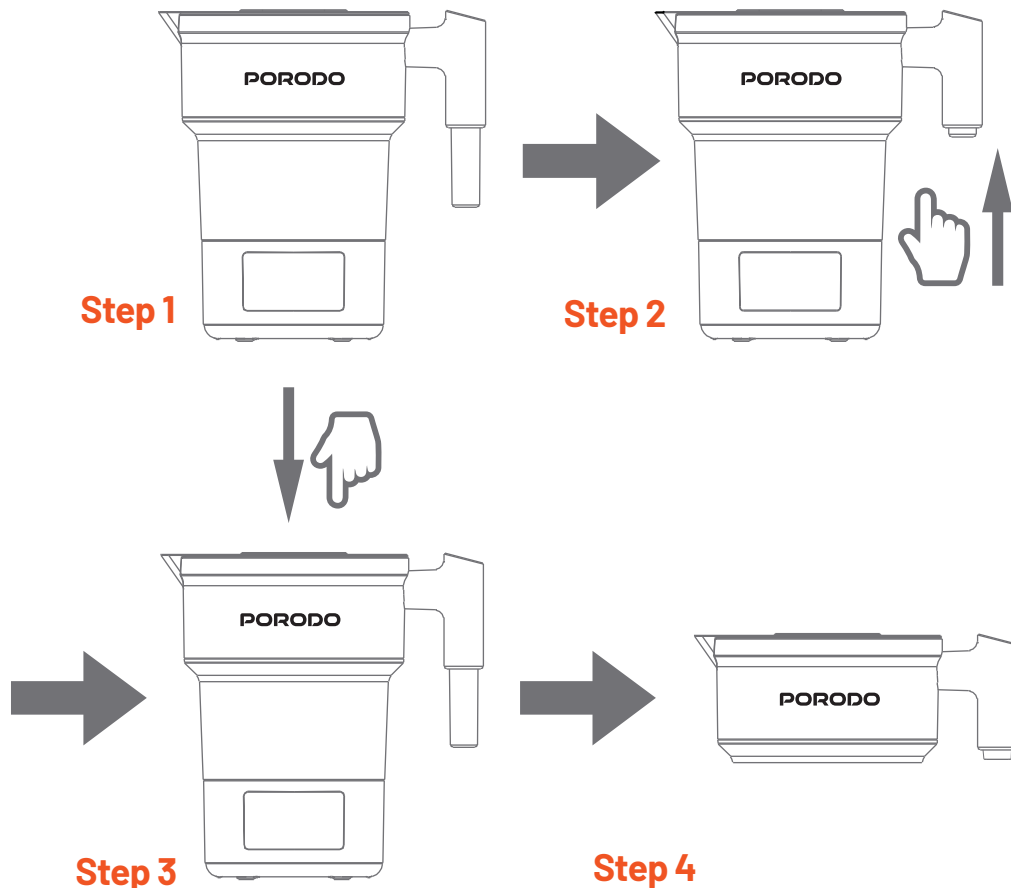

Touch Interface

 1. Lift the lid and fill the kettle with water up to the maximum water level indicator; do not exceed this mark.
2. Place your hand securely on the kettle when replacing the lid.
3. Turn on the power supply. You will hear a "beep" sound, and the kettle will enter the standby mode with the menu panel displaying "OFF".
4. Press the "On/Off" button to activate the setup mode. Select the desired function by pressing the "Menu" button, then press "On/Off" again to begin operation.

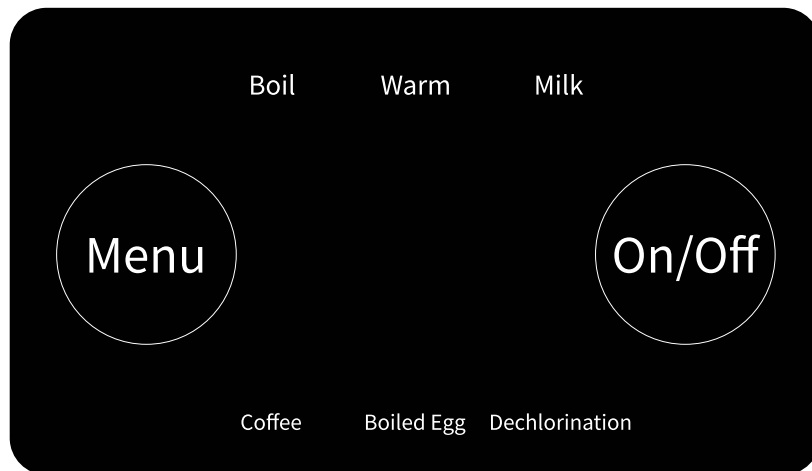

Instructions for Use

1. Press "Menu" once; the boiling water indicator will light up, displaying the current temperature.
2. Repeatedly press "Menu" to cycle through the available functions: Boiling water, Heat preservation, Milk warming, Coffee preparation, Egg boiling, and Dechlorination. Each function is indicated by three bars that cycle on the display.
3. Once you've selected the desired function, press "On/Off" to start the operation.

A. Boiling Water

1. To boil water, press "Menu" until the boiling water indicator blinks and the current temperature is displayed.
2. Press "On/Off" to initiate the boiling water program.
3. You will hear three buzzes when the boiling process is complete, and the display will show "OFF."

B. Heat Preservation

1. Press "Menu" until the heat preservation indicator blinks.
2. The current temperature will be displayed.
3. Press "On/Off" to start the heat preservation mode, which defaults to 60°C and lasts for 12 hours.

C. Milk Warming

1. Press "Menu" until the milk warming indicator blinks.
2. The current temperature will be displayed.
3. Press "On/Off" to begin warming milk. The default temperature is set to 45°C and will maintain this temperature for 12 hours.

D. Coffee Preparation

1. Press "Menu" until the coffee preparation indicator blinks.
2. The current temperature will be displayed.
3. Press "On/Off" to start the coffee function.
4. You will hear three buzzes when the coffee is ready. The panel will display "OFF".

E. Boiling Eggs

1. Press "Menu" until the boiled egg indicator blinks.
2. The current temperature will be displayed.
3. Press "On/Off" to start the egg boiling function.
4. You will hear three buzzes when the eggs are done. The panel will display "OFF".

F. Dechlorination

1. Press "Menu" until the dechlorination indicator blinks.
2. The current temperature will be displayed.
3. Press "On/Off" to activate the dechlorination program.
4. You will hear three buzzes upon completion. The display panel will show "OFF".

Specifications

Model	Porodo Lifestyle Portable Folding Electric Kettle with Temperature Setting and Touch Display
SKU	PD-KTLD850W-WH
Rated Voltage	220V, 50Hz
Rated Power	850W
Power Plug	UK 3-Pin Plug
Water Capacity	600 ml
Product Material	ABS, PP, 304 Stainless Steel, Silicone
Product Size	180×128×182mm (Unfolded Size), 76×128×76mm (Folded Size)

Troubleshooting


Error Description	Possible Cause	Solution
E1	Temperature detector malfunction	Clean the scale on the detector.
E2	Faulty temperature sensor cable	Contact service professionals for maintenance.
Not operational after powering on	Incorrectly plugged in	Check the power cord connection.
	Malfunctioning main control board	Contact service professionals for maintenance.
	Menu button not pressed	Refer to the instruction manual for guidance.
	Defective heating pipe	Contact service professionals for maintenance.
No heating function	Faulty thermostat	Contact service professionals for maintenance.
	Malfunctioning main control board	Contact service professionals for maintenance.
Continuous boiling water without shutting off	Faulty thermostat	Contact service professionals for maintenance.
	Malfunctioning main control board	Contact service professionals for maintenance.
Premature shutdown during heating	Scale buildup	Regularly clean the scale to maintain optimal function.
	Malfunctioning main control board	Contact service professionals for maintenance.

Note: In case the mentioned solutions did not resolve the issue, contact service professionals for maintenance.

Precautions


 **Warning:** Ignoring these instructions may lead to hazardous situations.


1. Keep out of reach of children.
2. Do not attempt to fold the kettle while it is in use or contains water.
3. Ensure the kettle is cooled before folding.


 **Note:** Improper use may result in damage to your property or pose a risk to your safety.


 **Caution:**

 1. Ensure continuous supervision if the kettle is to remain plugged in over long periods. If not in use for an extended time and unattended, please disconnect it.
2. Parts of the kettle may remain powered and pose a fire risk if the insulation deteriorates or if there is any leakage.

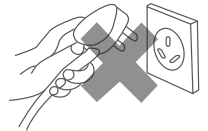

 
 **Safety Precautions:** Always disconnect the power before going to sleep or leaving home to prevent potential fire hazards from aging components and to conserve energy.

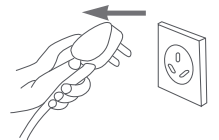


 Do not apply volatile substances such as oils, paints, or insecticides on or near the kettle as they may cause electrical shocks or fires.



 Do not expose the product to flammable materials or use it near mechanical oil components as it may cause damage, emit odors, or lead to fire hazards.




 **1.** Always unplug the device when not in use for extended periods or before leaving the house.


2. Ensure that parts of the device that may remain energized during standby do not pose a fire risk due to insulation failure or leaks.

3. Avoid pulling on the power cable when unplugging the device to prevent damage.

 



 Do not use the product in bathrooms or environments with high moisture as it can compromise insulation and lead to leakage or device failure.




 **1.** Ensure the power cord is securely plugged in before use.

2. Verify that the plug is firmly connected to the socket, with no looseness or partial insertion.

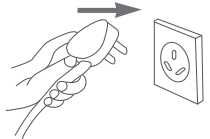

 Never use a product with a damaged power cord or plug, as this can cause electrical shocks, short circuits, and fires.



 Avoid using multiple power cord sockets simultaneously. Do not use an extension cord or share the power socket with other electrical appliances, as this can lead to overheating and pose a fire hazard.




 **1.** Do not mistreat the power cord. Avoid stepping on or crushing it.

2. Do not damage the power cord or plug. Such damage can cause electrical shocks, short circuits, or fires.

3. If the power cord is damaged, it must be replaced by the manufacturer, their maintenance department, or a qualified professional to ensure safety.



 Never unplug the power cord with wet hands to avoid the risk of electrical shock. Ensure your hands are dry before handling the plug.



Safety Warnings

Please read this manual thoroughly before using the product and retain it for future reference.

- 1.** Strictly adhere to the following instructions to avoid operational failures that could result in major accidents or injuries.
- 2.** It is strictly prohibited to immerse the electric kettle, including its power cord and power base, in water or any other liquid, as this poses a serious risk.
- 3.** Keep this product out of the reach of children, individuals with disabilities, or inexperienced users without proper supervision. Ensure that such individuals are supervised or guided by someone responsible for their safety at all times. Do not leave the product unattended while it is in operation.
- 4.** Avoid contact with the hot surfaces of the kettle or the steam emitted from the spout during operation to prevent burns. Ensure the lid is securely closed while boiling water. Do not open the lid while the water is boiling to avoid scalding.
- 5.** If the power cord is damaged, it is crucial to replace it with an authorized cord by service professionals.
- 6.** Should there be any damage to the electric kettle, promptly send the unit to an authorized service center for maintenance before further use. Do NOT attempt repairs on your own.
- 7.** Do NOT hang the power cord over the edge of a table or placing it in contact with hot surfaces. Always disconnect the power cord when the kettle is not in use for extended periods.
- 8.** Do NOT insert pins, wires, or any other objects into any openings of the electric kettle to prevent the risk of electric shock.
- 9.** Disconnect the power supply under any of the following circumstances: when the kettle is empty, while adding water, when the kettle is not in use, during cleaning or relocation, or if there is a malfunction.
- 10.** Do NOT place the kettle on tilted or unstable surfaces. Keep it away from heat sources to prevent damage to its plastic components. Ensure the kettle is positioned far away from other electrical appliances.
- 11.** Do NOT fill the kettle beyond the rated maximum water level. Overfilling may cause boiling water to spill out.

- 12.** Ensure there is water in the kettle before turning it on. Operating it dry can damage the appliance and reduce its service life.
- 13.** Before folding the kettle, confirm there is no liquid remaining inside, and ensure the power supply is disconnected.
- 14.** Do NOT connect the appliance to external automatic switching devices, such as timers, or circuits that are periodically activated by other appliances to prevent hazards related to improper functioning of the thermal circuit breaker.
- 15.** Never handle the power cable with wet hands. Removing or plugging in the cable while your hands are wet can lead to a short circuit or electric shock.

Environmental Compliance

- 1.** The product complies with AMRHS standards for Electrical and Electronics products, ensuring it meets regulatory environmental requirements.
- 2.** During the designated environmental protection usage period, users can be assured that no harmful substances will leak or precipitate from the product, ensuring safety and health throughout its use.
- 3.** The environmental protection service period for our products extends for 10 years, ensuring sustained compliance and minimal environmental impact during this time.

P/N	Toxic or Harmful Substance or Element					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Plastic Components	○	○	○	○	○	○
Circuit Board	✗	○	○	○	○	○
Pot Body	○	○	○	○	○	○
Heating Plate	✗	○	○	○	○	○
Power Cord	✗	○	○	○	○	○

This document is prepared in accordance with SJ/T11364 standards.

The "O" Symbol indicates that the toxic or harmful substances in the product are below the limits specified in GB/T26572.

The "X" Symbol denotes that the content of toxic or harmful substances in at least one homogeneous material of the components exceeds the limits set forth in GB/T26572.

Note: Some components marked with "O" may still contain harmful substances. These components cannot be replaced or reduced at this time.

Compliance for Food Contact Materials

P/N	Materials	Compliance Criteria
Body	Silicone Gel	GB4806.11-2016
Lid	PP	GB4806.7-2016
Heating Plate	SUS304 06Cr16Ni10	GB4806.9-2016
Metal Lid	SUS304 06Cr16Ni10	GB4806.9-2016
NTC	SUS304 06Cr16Ni10	GB4806.9-2016
Screws	SUS304 06Cr16Ni10	GB4806.9-2016

Cleaning and Maintenance

1. To extend the service life of the electric kettle, regularly clean the mineral deposits from the kettle.
2. Unplug the power plug and allow the electric kettle to cool down before cleaning.
3. Avoid cleaning with steel wool or any chemical or abrasive powder cleaner.

4. Cleaning steps:

4.1 Pour 0.2L of edible white vinegar into the electric kettle and let it soak for more than 1 hour.

4.2 Pour the solution out of the pot and wipe off the remaining sediment with a damp cloth.

4.3 Fill the kettle with water and bring it to a boil. After boiling, rinse with water 4-5 times; the kettle can then be used again.

4.4 If necessary, repeat the above steps.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net/warranty**

Service Support: **support@porodo.net**

Instagram: **porodo**