

porodo



**Porodo**  
**LifeStyle Massage Cushion**

SKU: PD-LSMCS

# Table of Contents

|                                  |    |
|----------------------------------|----|
| Features.....                    | 2  |
| Schematic View.....              | 2  |
| Specifications.....              | 2  |
| Angle Adjustment.....            | 3  |
| Height Adjustment.....           | 3  |
| Usage Conditions.....            | 4  |
| Remote Control Instructions..... | 5  |
| Attention.....                   | 6  |
| Warning.....                     | 7  |
| Usage Prohibitions.....          | 7  |
| Maintenance and Cleaning.....    | 8  |
| Troubleshooting.....             | 8  |
| Package Contents.....            | 9  |
| Warranty.....                    | 10 |
| Contact us.....                  | 10 |


Thank you immensely for choosing our product. Rest assured, this item has undergone rigorous testing and has been confirmed as both safe and reliable. Prior to usage, we urge you to peruse this manual thoroughly to fully grasp the correct methodology for operating this product. Your attention to the significant safety guidelines within these pages is paramount, and we suggest retaining this manual for ongoing reference.

## Features

The device features Shiatsu Kneading on the back section for deep relaxation, with airbag compression available on both the lateral sides and the seating area for enhanced comfort. Additionally, there is a heating function for the back and seating sections to soothe and relax the muscles. For convenience, the back section of the device is designed to fold, allowing for efficient space-saving storage. Versatile in design, it is suitable for use in various environments including the office, your vehicle, and at home.

## Schematic View

- A. Massage Area
- B. Manual Controller
- C. Airbag Massage Assembly
- D. Power Input
- E. Airbag Massage Assembly
- F. Airbag Massage Assembly
- G. Heating Area
- H. Vibration Motor

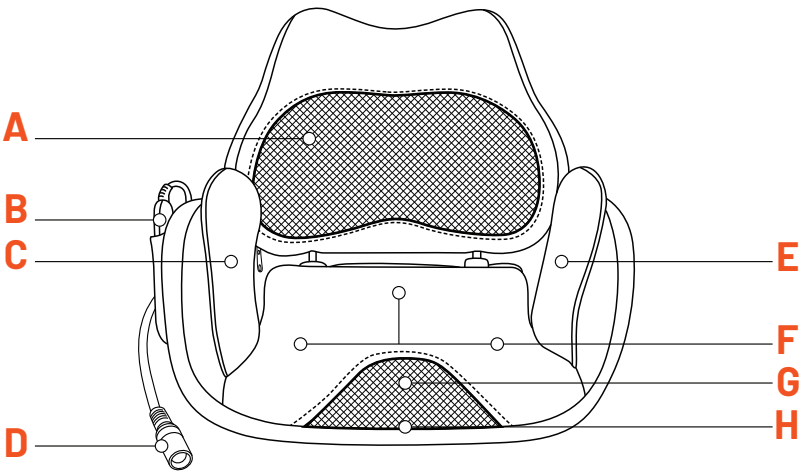


## Specifications


|               |                                  |
|---------------|----------------------------------|
| Product       | Porodo LifeStyle Massage Cushion |
| SKU           | PD-LSMCS                         |
| Rated Voltage | 12V DC                           |
| Rated Power   | 24W                              |
| Dimensions    | 450×210×495mm                    |
| Standards     | GB4706.1-2005 GB4706.10-2008     |

## Angle Adjustment


The waist rest's front and rear angles of the machine offer three adjustable positions for optimal comfort. To alter the forward and backward tilt of the product, press and hold both sides of the waist rest downward to fine-tune the angle to your preference.

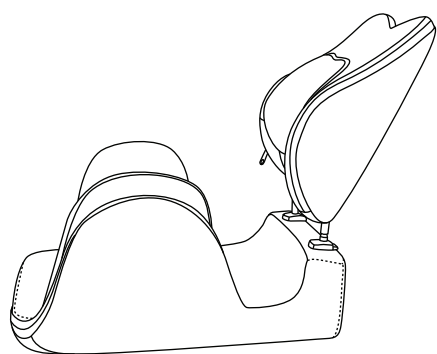


Gear 1

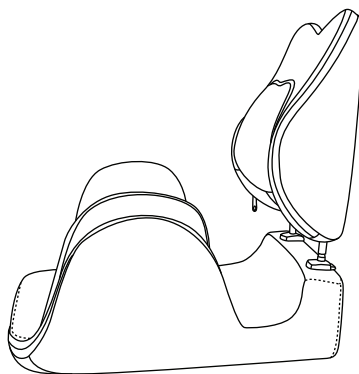

Gear 2

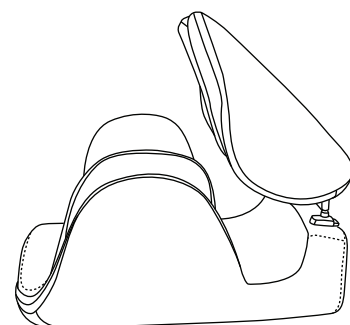


Gear 3

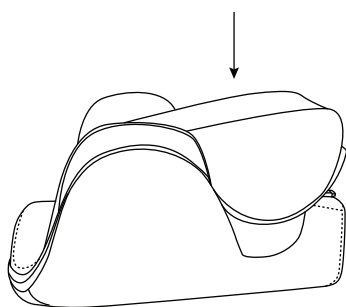


**Note:** Upon unboxing, the product will be in a folded position. To prepare it for use, press the waist rest down first, then elevate it into the desired position.

## Height Adjustment


The waist rest of the machine offers three levels of height adjustment for customized support. To modify the height, firmly grasp both sides of the waist rest with your hands and pull upward. To decrease the height, press and maintain pressure on the limit block. This feature allows customers to fine-tune the height for their optimal comfort.

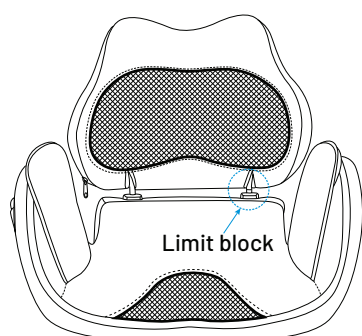


Low Gear

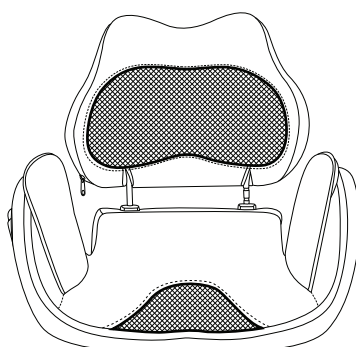

Middle Gear

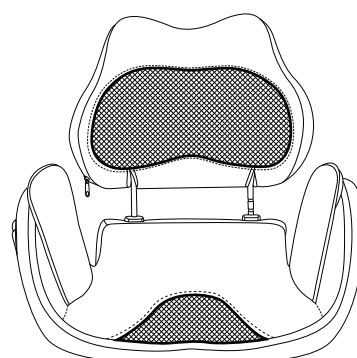

High Gear

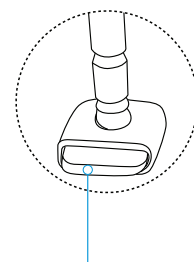

**Limit block:**  
Press here to  
decrease the  
height.

## Usage Conditions



Positioning on Chair



Placement on Sofa




Sitting on the Floor



Compact Storage Mode

## Remote Control Instructions

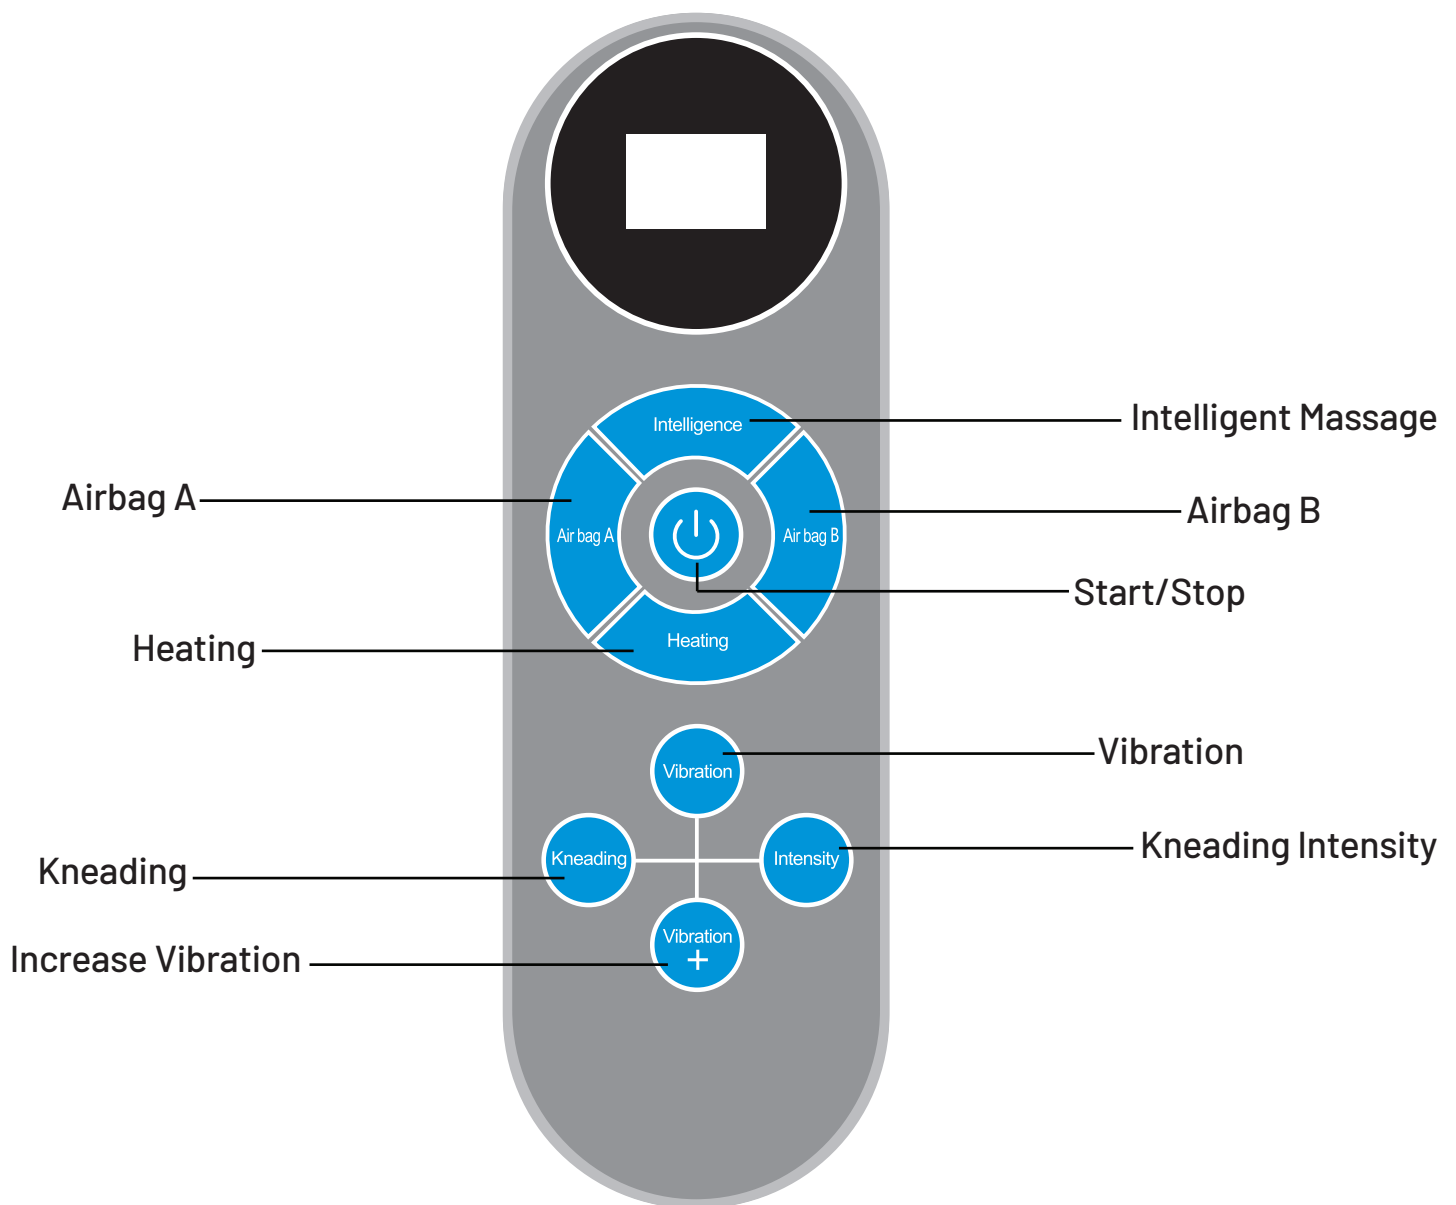

1. Activate the device by pressing the Start/Stop button (🔌). This initiates a 10-minute countdown. Three timing settings are available: 10 ,20, and 30 minutes. Press the button again to power off the device, at which point the digital display will show 'OFF,' and the screen will turn off after a brief delay.
2. Toggle the airbag intelligent mode by pressing the Intelligent key. The digital display will show 'U1' when activated and 'U0' when deactivated.
3. To alternate airbag functions, press the Airbag A key to activate mode A, indicated by 'A1' on the display. Pressing the key again will deactivate it, as shown by 'A0.'
4. Similarly, use the Airbag B key to activate airbag mode B. 'B1' will appear on the display when active, and 'B0' when turned off.

5. Engage the heating function by pressing the Heating key. The system defaults to a medium setting, showing 'E2.' There are three heating modes, displayed as 'E1' to 'E3.' To deactivate heating, press the key until 'E0' appears.
  6. Activate the vibration feature with the Vibration key. There are 9 vibration modes, which will be shown on the display from 'F1' to 'F9.' To turn off vibration, press until 'F0' is displayed.
  7. Adjust the intensity of the vibration using the Vibration Intensity key. The default setting is a medium vibration, indicated as 'H5' on the display. Cycle through the intensity levels, which will be displayed as 'H1' through 'H9.'
  8. Utilize the Kneading key to activate the kneading function, which automatically alternates between forward and reverse rotation massage every minute. On activation, the display shows C1. For reverse rotation, the display indicates C2. To return to kneading in intelligent mode, the display will show C3. Press the key again to turn off the kneading function, and the display will read C0.
  9. Adjust the kneading intensity using the Kneading Strength key. The device defaults to a medium intensity displayed as L2. There are three selectable intensity levels, indicated by the display as L1 through L3.
- Note:** If the machine's buttons are not pressed within 3 seconds, the digital display will begin a countdown.

## Attention

1. The power plug must be unplugged after use and before cleaning.
2. This machine should not be operated in humid environments or bathrooms. Store it in a dry location away from intense light.
3. Avoid using the machine during sleep or allowing it to continuously work on one body area to prevent adverse effects on health.
4. Do not use the massage machine within 30 minutes after eating as it may cause negative reactions due to individual physical differences.
5. If you experience discomfort due to excessive stimulation during use, discontinue use immediately.
6. Ensure that children or individuals who require supervision have a responsible adult present when using this product.
7. It is recommended to drink 50cc of boiled water or warm tea after a massage to aid in the elimination of metabolic waste from the body.

**8.** In the event of power cord damage, consult the factory for a replacement approved for household use or contact the manufacturer. Do not attempt to replace the cord with an unapproved type.

## **Warning**

- 1.** This appliance is not recommended for use by individuals (including children) who have physical disabilities, sensory or neurological impairments, or a lack of experience and judgment, unless they are under the supervision and guidance of a responsible adult.
- 2.** Children should be closely monitored to ensure that they do not treat the appliance as a toy.
- 3.** If the appliance's surface becomes hot to the touch during use, individuals who are less sensitive to heat should be cautious.

## **Usage Prohibitions**

- 1.** Individuals with a frail constitution, including the elderly, those who have been chronically ill, or those confined to bed for extended periods, should seek medical advice before using this product.
- 2.** Use of this product is not allowed for pregnant women and infants.
- 3.** Individuals with blood disorders, a tendency to bleed, acute phases of closed soft tissue injuries, conditions such as purple spot disease, and those with recent fractures should not use this product.
- 4.** Usage of the massager on an empty or full stomach is not recommended. Additionally, it should not be used immediately after consuming alcohol or engaging in vigorous exercise.
- 5.** During the recovery phase following nerve repair surgery or if there's an open vascular injury, use of this device is prohibited.
- 6.** It is not suitable for critically ill patients receiving internal or external medical treatment, particularly those with various types of cancer.
- 7.** The massager is not to be used by individuals with undiagnosed acute spinal injuries.
- 8.** The massager is not advised for individuals with cardiac conditions, gastric ulcers, gastrointestinal bleeding, pulmonary diseases, severe cardiovascular

diseases, liver disorders, cancer, or acute abdominal conditions.

**9.** Use is prohibited for individuals with significant infections, such as advanced inflammatory conditions of the bone or arthritis with pus formation.

**10.** Individuals with any form of tumors should not use the massager on the affected areas.

## Maintenance and Cleaning

### **A. Maintenance**

**1.** Always disconnect the power supply when the product is not in use and store it in a location that is safe, dry, and cool.

**2.** Prevent the product from coming into contact with sharp objects to avoid punctures or other damage.

**3.** Do not store the product in areas exposed to high temperatures, open flames, or direct sunlight to prevent discoloration and damage.

**4.** Refrain from exposing the product and its accessories to harmful chemicals such as benzene, thinners, or any other corrosive liquids.

**5.** When storing the product, do not wrap it with any power cords or wires, nor hang the product with wires.

### **B. Cleaning**

**1.** Ensure that the power supply is turned off before cleaning. Gently wipe the product with a soft, slightly damp sponge or cloth.

**2.** The product must not be immersed in any liquid and should not be directly washed with water or any other liquid.

**3.** Avoid using abrasive brushes, gasoline, kerosene, or any type of furniture polish to clean the product.

## Troubleshooting

| Problem                       | Possible Cause                                                                                                                                                                   | Solution                                                                                                                                                                                                     |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The machine is non-functional | 1. The adapter is not plugged into the power outlet.<br>2. The manual switch is turned on.<br>3. The adapter DC plug is not compatible or is not properly connected to the plug. | 1. Check if the adapter is plugged into the power outlet.<br>2. Ensure the manual switch is turned on.<br>3. Verify that the adapter DC plug is compatible and properly connected to the massager's DC plug. |

|                                  |                                                                                                     |                                                                                                                                                      |
|----------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Excessive noise during operation | The environment is not suitable for use.                                                            | Operate the device on a soft bed, sofa, or place a cushion underneath to reduce noise.                                                               |
| Insufficient massage strength    | 1. Insufficient supply voltage.<br>2. The massager is not correctly positioned on the massage area. | 1. Use a voltage regulator or voltage stabilizer to ensure adequate power supply.<br>2. Adjust your body or the massager to target the correct area. |


If the aforementioned methods fail to resolve the issue, kindly reach out to our local distributors.

**Reminder:**

- 1. In case the massager proceeds to malfunction, please disconnect the adapter.
- 2. Users are prohibited from disassembling or attempting repairs on the massager independently as it may result in personal injury.

**Package Contents**

The package includes a massager device and an adapter.

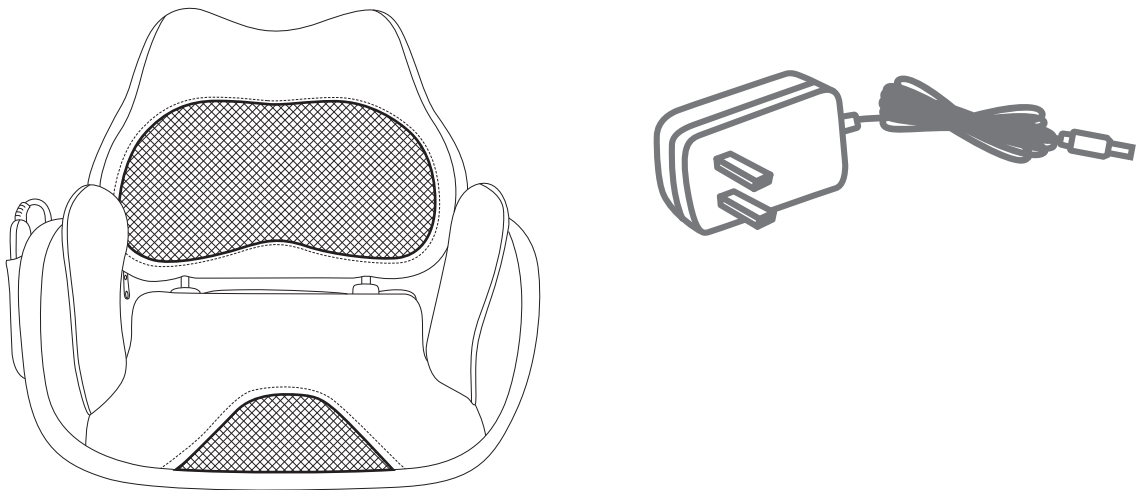

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**<https://www.porodo.net/warranty>**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**