

porodo



2-AXIS GIMBAL STABILIZER


Extension Rod & Built-In Tripod

SKU:PD-ASGMRC


Content

Quick Start	1
Axis Anti-Shake 2 Axis with 1.....	3
Built-in Extension Rod.....	4
LED Instructions	7
Remote Control Instructions.....	9
Gimbal Instructions	12
Specifications	13

Preparing the Gimbal

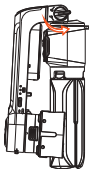


1. Loosen the knob by turning it in the direction of the arrow shown.

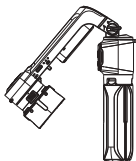


2. Unfold the gimbal to its operational position.



3. Once the gimbal is fully unfolded, securely tighten the knob to ensure stability.

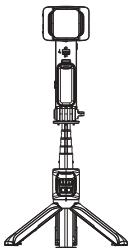


4. Spread the tripod legs apart to open the tripod stand for a firm and stable base.

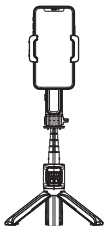

5. Mounting the Smartphone:

- It is recommended to remove the smartphone case for a better fit.
- Place your smartphone securely within the holder to prevent it from slipping out.

Powering the Gimbal On/Off

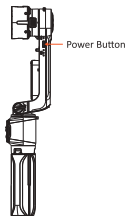


-To switch the gimbal on or off, press and hold the power button.




-When the gimbal lock is positioned to the left, it operates as a gimbal.
-When locked to the right, it functions as a selfie stick.


Axis Anti-Shake 2 One Axis with

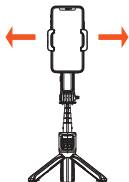


1. The default mode allows the camera to move left/right with lateral movements of the object.
2. For upward/downward camera movements when the object moves up/back, follow these steps:

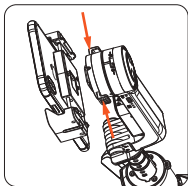


1. Press and hold the buttons on both sides of the motor.

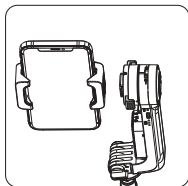

2. Remove the smartphone holder by aligning it with the motor assembly position.
While doing this, continue to hold the buttons on each side of the motor.

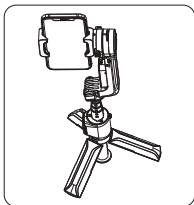

3. After completing the switch, the device operates as a 2-axis gimbal.

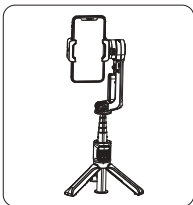


Note: The remote control panel can be rotated to maintain alignment with the smartphone and remote control on the same side.


Built-In Extension Rod

-For photos: The length is adjustable to meet the needs of selfie photography.


-For videos: Suitable for a variety of shooting positions - high, middle, or low.

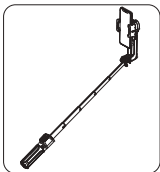

Usage When Tripod is Opened

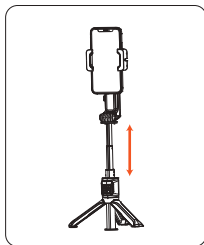


1. With the phone holder in the roll direction, the extension rod can extend up to 5 sections.

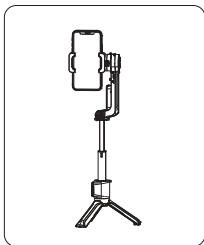

2. With the phone holder in the tilt direction, the extension rod can extend up to 2 sections only.


Specifications

The extension rod has a total of 5 sections and measures 39.6 cm in length.

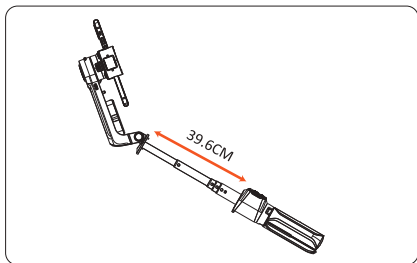


Tips

The extension rod has a designated folding direction. Avoid applying reverse or lateral force to prevent damage.

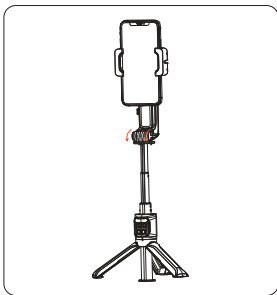

Folding Completion Diagram:

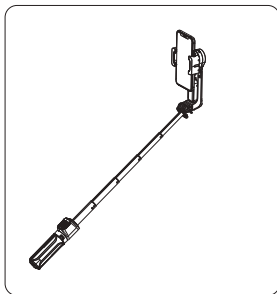

LED Light Instructions

1. Power Button

1-1. Press and hold the power button for 3 seconds to power on/off.

2-1. Single press: switch the light mode and lightness.


LED light mode:

-White light: soft, mid, strong

-Warm light: soft, mid, strong



-Mixed light: soft, mid, strong

3-1. Double press: SOS mode (can be activated in any light mode), single click to exit SOS mode.


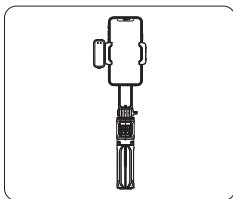


2. Take off and install the LED light


1-2. Push the red button at the top side to take off the LED.

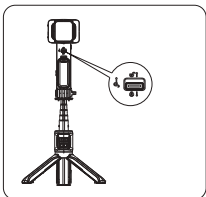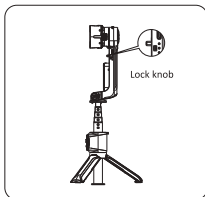


2-2. Align the LED light clip with the phone clip slot to install it.

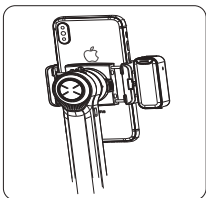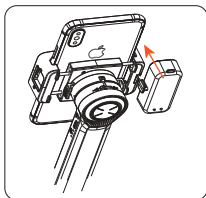

3-2. LED light can be installed by front and rear direction.

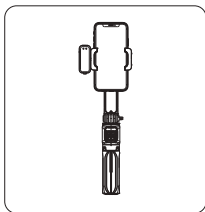

Self Facing

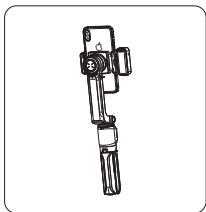


Away Facing


Remote Control Instructions

1. Bluetooth indicator for remote control

- Off: Bluetooth is not connected
- On: Bluetooth is connected
- Flash: Remote control is in sleep mode

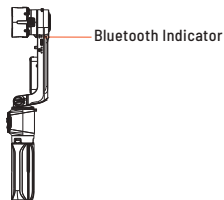


2. Take off/Insert the remote control

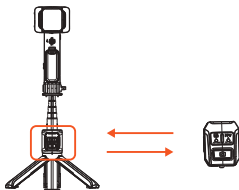

3. Bluetooth Connection Way

The remote control enters sleep mode by default. To activate, press any button, and the indicator light will flash once.

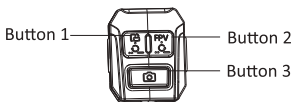

4. Remote Control Instructions

1-4. Button 1 (Left Key):

- Single press to toggle between landscape and portrait modes.
- Double press to initiate clockwise Inception mode; press button 3 twice to exit this mode.
- Press and hold to start and continue clockwise movement. Release to stop.
- Press and hold again to recover. Press button 3 twice to exit.

2-4. Button 2 (Right Key):

- Single press to switch between FPV mode and lock mode.
- Double press to start counterclockwise Inception mode; press button 3 twice to exit.
- Press and hold to start and continue counterclockwise movement. Release to stop, and press and hold again to recover. Press button 3 twice to exit.

3-4. Button 3 (Shutter Button):

- Once Bluetooth is connected for remote control and smartphone, a single press will take a photo or start/stop video recording.

-Pairing Bluetooth


To pair, access the Bluetooth settings on your smartphone and connect to the device named "A10_xxxx."

Gimbal Modes


-In Gimbal mode, all buttons are operational.

-In Selfie Stick mode, buttons 1 and 2 are disabled; however, button 3 can be used to take photos or start/stop video recordings once Bluetooth is connected.


Operating Modes Illustration

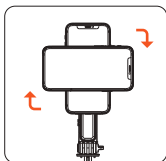

-Landscape to portrait switch


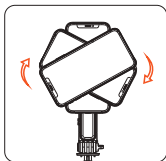


-Clockwise Inception rotation

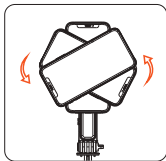

-Anticlockwise Inception rotation.

Gimbal Components

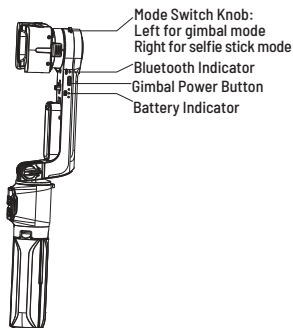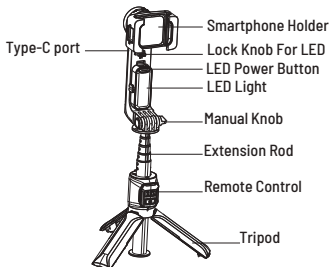

Specifications

Weight	286.5g
Dimension	-Folded: 63.5*86.5*167.5mm -Unfolded: 63.5*68*306.5mm
Battery Type	Lithium
Capacity	-Gimbal: 900mah -LED light: 500mah
Extension Rod Length	39.6cm
Material	ABS
Compatible Smartphones	-Diagonal: $\leq 180\text{mm}$ -Width: 90-50mm -Thickness: $\leq 9.5\text{mm}$
Charging Port	Type-C
Input Voltage	5V
Input Currency	1A
Charging Time	150mins



Caution

1. Ensure the motor rotation is not blocked by external force during and after the stabilizer is powered on.
2. Please do not contact with sea water or corrosive liquid.
3. Please do not disassemble the stabilizer (except for the detachable accessories in the manual).
4. If the motor works continuously for a long time, the surface temperature of the motor may be too high.
5. It is strictly forbidden to drop or collide with the stabilizer, which may damage it and cause abnormal operation.



Storage and Maintenance

1. Please keep this product away from children and pets.
2. It is forbidden to put the product near the heat source (furnace or heater, etc.) and in the car at hot weather.
3. Please store the product in a dry environment.
4. Do not overcharge or discharge the battery; otherwise, the battery cell will be damaged.
5. Do not use the product in the environment with too high or too low temperature.