

3+

AGES

porodo | CHOOSE THE BEST

Kids Print Camera




SKU:PD-KDPNC



Instruction Manual


Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it securely for future reference.

Key Description

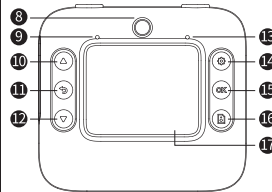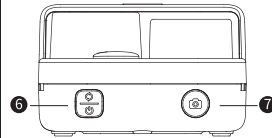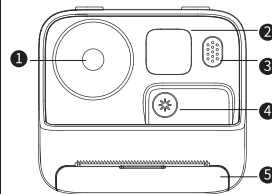

1. Lens
2. Fill Light
3. Speaker
4. Fill Light Switch Key
5. Print Paper Slot
6. On/Off key, Lens Switch Key
7. Shutter Key
8. Lens
9. MIC
10. Up Key
11. Back Key
12. Down Key
13. Indicator Light
14. Set Key
15. OK Key
16. Print Key
17. Screen
18. Lanyard Hole
19. TF Card Slot
20. Type-C Interface
21. Reset Key

Mounting of Print Paper

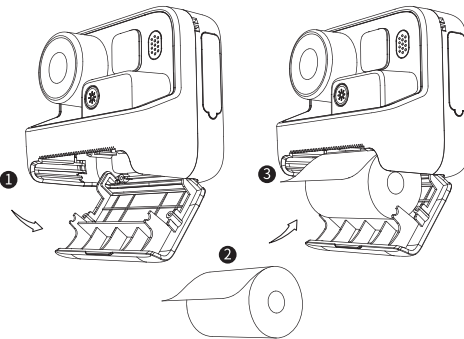

Functional Description

On/Off key, Lens Switch Key:

- Press and hold the to switch the camera on/off.
- Short press for front/rear lens switching.

Photo taking / Time-lapse:

- Short press for shooting mode.
- Press the to enter the setting mode.
- Activate the time-lapse function from the menu.

Filters / Cartoon Frames Shooting:

- In shooting mode, press to switch to cartoon frames.
- Short press to shoot.
- Press to enter filter mode.
- Short press to shoot.
- Long press to zoom in.
- Long press for focusing.

Delete Document:

- In the album screen, select the file you want to delete.
- Press to enter the delete screen.
- Press to delete.

Albums / Back:

- In shooting mode, short press to enter album mode.
- Use the up/down keys to navigate.
- In other modes, short press to return to the previous function.

Video Recording / Playback:

- In shooting mode, press and hold to enter video mode.
- Short press to record video.
- In the album screen, select the video file.
- Press to play the video.

Fill Light Mode:

- Short press the to toggle the fill light.
- Press to enter the setting mode for the fill light.
- Fill light mode options: off, on, constant light.

Menu settings:

- Short press to enter menu settings.
- Set various preferences including print intensity, image size, time-lapse, continuous shooting, date label, sound, fill light, date and time, language, and formatting options.

Print Shooting / Album Printing:

- In shooting mode, press the to initiate print mode.
- Press the to capture a print.
- On the album screen, select the image to be printed.
- Press the again to execute the print command.

Menu Settings:

- To access settings, press the .
- To enter date and time settings, press briefly.
- To scroll through options, use the Up/Down keys. .
- To select a setting, short press the [OK] key.
- To navigate right in the menu, short press the [OK] key.
- To save your settings and exit, press the [OK] key.

Formatting

Formatting will erase all content on the TF card. This action is permanent. To format, press and hold the [Menu], then select the formatting option and confirm with [OK].

Reset

- If the display or buttons are unresponsive, use an ejector pin to press the [Reset] key.
- To reboot the camera, toggle the [ON/OFF] switch.

Charging

- If battery power is low or the camera shuts down, connect it to the adapter to recharge. Note that fast charging is not supported.
- While charging, the indicator light is red and turns off when fully charged.
- The indicator light is permanently blue when the camera is on.

TF Card Installation and Precautions

1. Insert the TF card correctly until it locks in place. To remove, push until it ejects.
2. Use a high-speed TF card (minimum Class 10).
3. Avoid removing or inserting the TF card while the camera is on or connected to a power source.
4. Ensure correct installation of the TF card. Incorrect installation may damage both card and slot.
5. The camera defaults to the TF card as its primary storage. Backup existing data before installing a new card.
6. Should the TF card be incompatible, format it or replace with a compatible one.

Parameters

Name: Porodo Kids Print Camera
Model: PD-KDPNC
Display: 2.0"
Functions: Photo, Video, Print
Paper Size: 57x25mm
Battery: 7.4V / 800mAh, approx. 4 hours usage, 2 hours charge time
Recording: 2.5 hours max
TF Card Max Size: 32GB
Weight: 181.8g
Charging Voltage: 5V/1A
Internal memory stores up to 10 pictures without a TF card.

Safety Precautions for Battery and Charging

1. Inspect the camera regularly. Cease use if damaged and keep away from children.
2. Avoid camera exposure to fire, extreme temperatures, and humidity.
3. Charge the camera if operation is slow or abnormal.
4. After use, switch off the camera.
5. Charge the battery completely before long storage periods.
6. Not for children under 3 years of age.
7. The 7.4V/800mAh battery is not user serviceable. For damages, contact after-sales support.
8. Connect only to 5V power sources; do not use multiple power sources simultaneously.
9. Use the recommended transformer only.
10. Adults should supervise charging. Inspect charger components regularly for damage. Discontinue use if damage is detected.

Maintenance

- Avoid water and humid environments.
- Clean with a dry cloth to ensure dust-free operation.

Warranty

*Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

*When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

Contact Us

If you have any questions about this Privacy Policy, please contact us at: info@porodo.net
Website: porodo.net
Service Support: support@porodo.net
Instagram: [porodo](https://www.instagram.com/porodo)