

porodo | CHOOSE THE BEST



Dual Port Car Charger FM Transmitter

MODEL: PD-FM36WCC-BK

Product:

1. bluetooth、 FM audio transmission
2. Support QC 3.0 QC2.0、 PD、 Huawei FCP、 Samsung AFC、 BC1.2、 Apple 2.4A and other charging protocols
3. Support WMA,MP3,WAV, APE, FLAC music formats
4. Support bluetooth hands-free、 music、 navigation
5. Support output over voltage protection, short circuit protection, over current protection, over temperature protection
6. Battery voltage real-time detection,low voltage flashing alarm
7. Automatic connect
- 8.Support U-disk /TF card peripherals
9. EQ sound can be adjusted
10. Synchronized display of music lyrics
11. Support break-point memory

Product specifications:

- 1.Bluetooth version:5.0
- 2.FM frequency:87.5 Mhz-108.0 Mhz
- 3.Bluetooth effective distance:10m
- 4.QC3.0 port output:5V/3A、 9V/2A、 12V/1.5A

5. PD port output: 5.5V/3A、9V/3A、12V/2.5A


PPS: 3.3V-11V/3A

6. Music port: 5V/2A

7. Input voltage: 12V-24V


8. U-disk/TF card capacity :MAX 32GB

Product Diagram:

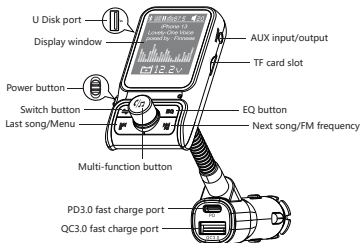

Operation instructions:


1. Insert the product into the cigarette lighter of the car after vehicle start

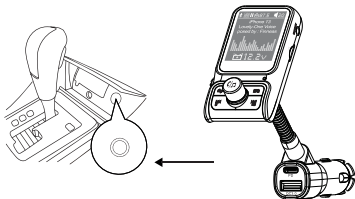


2. Turn the device switch to the ON position

3. Turn on the car FM radio, and choose the blank FM channel


4. Adjust the product frequency same as your car radio

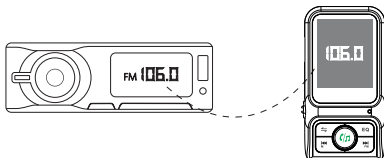

5. Open the Bluetooth of smart device and search for the "BC85" and click connect

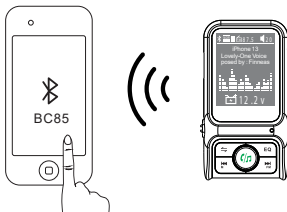

6. After the connection is successful, you can play music, navigate or make/answer calls

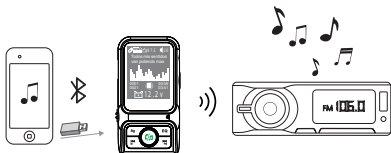

FM frequency adjustment:

Long press "  "button to enter FM mode, the display frequency flashing, rotate "  " to adjust frequency, clockwise +, counterclockwise -; also can press "  " and "  "

button to adjust frequency, wait for 5 seconds to automatic confirm and save the current frequency, or click “” button to confirm.

Volume control:


Rotate “” button clockwise volume +, counterclockwise volume -

Music control:

1. Pause/play—click “” button
2. Last song—click “” button
M
3. Next song—click “” button
FM

EQ Adjust:

Click “EQ” button to enter the tuning interface, press “” and “” button to choose Bass/Treble, rotate the “” to make adjustment; click “” button to save and exit the interface.

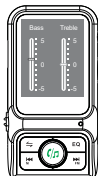

Dial/answer call:

1. Answer a call: click "  "
2. Hang up a call: click "  "
3. Reject a call: long press "  "
4. Call back: double click "  "

Play source switch :

U-Disk/TF Card/AUX IN, post insertion priority play


When the machine is connected to bluetooth/U disk/T card/AUX IN, click  button to switch between these mode

AUX mode:

Plug in the audio cable to enter the AUX MODE


1. Audio output mode

Enter this mode, need click" ⇔ "button to switch (TF card/U disk/bluetooth play)

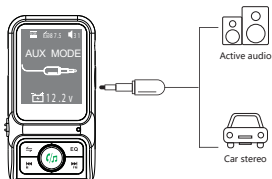

2. Audio input mode

Enter this mode, play music directly after connect device (If you switch to TF card/U disk/bluetooth play at the same time, there will be sound mixing.)

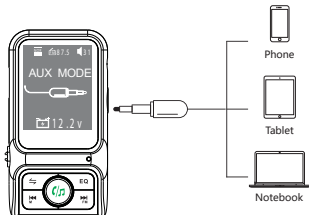

Cycle mode selection:

When playing music with TF card or U disk, can long press “ ⇐ ” button to switch between single loop, all loop, sequence loop, Random Mode.

Only support U disk/TF card play mode

Menu Selection:

Long press “ ⏮
M ” to enter Menu



Language option、 U disk directory、 TF card directory、 Restore factory set (Only U disk directory/TF card directory can choose this option)

Click “ ⇐ ” to exit menu

Voice assistant wake up:

After bluetooth connection, long press the “ Ⓢ ” button for 2 seconds to activate SIRI/voice assistant, short press to exit voice assistant.

Low Power Mode :

When the battery voltage is less than 11V, the display flashes. If it continues to flash for 10 minutes without any operation, the bluetooth will enter the low-power mode automatically. (This function is to protect the car battery. Some cars after turned off and locked, the cigarette lighter is not powered off)

Warm tips:

1. Do not turn the radio volume too high (usually 18 or below) to avoid the increase of the sound back noise.
2. Although the transmission power of this product is relatively strong, you'd better skip the frequency with strong signal in local to get a better sound quality
3. Do not use this product in a dusty and humid environment with extremely high and low temperatures.
4. Do not drop the product to avoid surface damage or breakdown.
5. Do not disassemble the product, if you have any questions, please contact your dealer.
6. Due to continuous improvement and enhancement of technology, changes in product performance and functionality are subject to change without notice.

Troubleshooting:

Power is not responding or not displayed	1. Check if the machine is in good contact with the cigarette port, and the cigarette holder is not seriously rusted. 2. Unplug and re-try again 3. Check if the cigarette holder is powered normally
Can't play	1. Check if the USB device is connected to the player or not, or you can try another USB device. 2. Please make sure that there is copy of the file in the USB device that can be supported by the product. 3. Please make sure the volume is not set to 0
There is noise but no sound	1. Whether the product player is in a pause state 2. Is the volume adjusted to 0 or small?
The audio of car can't receive sound	1. Make sure that the product FM launch has been turned on. 2. Is the transmission frequency of the product the same as the reception frequency of car's?

The launching effect is not good, there is noise	1. Make sure that there is no strong signal station at the frequency of the current transmission. When using it, adjust to the frequency of no radio station to get better sound effect. .
--	--

Packaging accessories

1. Main device
2. Manual

www.porodo.net

 /porodo  /myporodo

Made in China

