

porodo




Aluminium Tripod

SKU:PD-TRPBAL


1. Tripod Details

1.1 Twist Lock Tripod Diagram

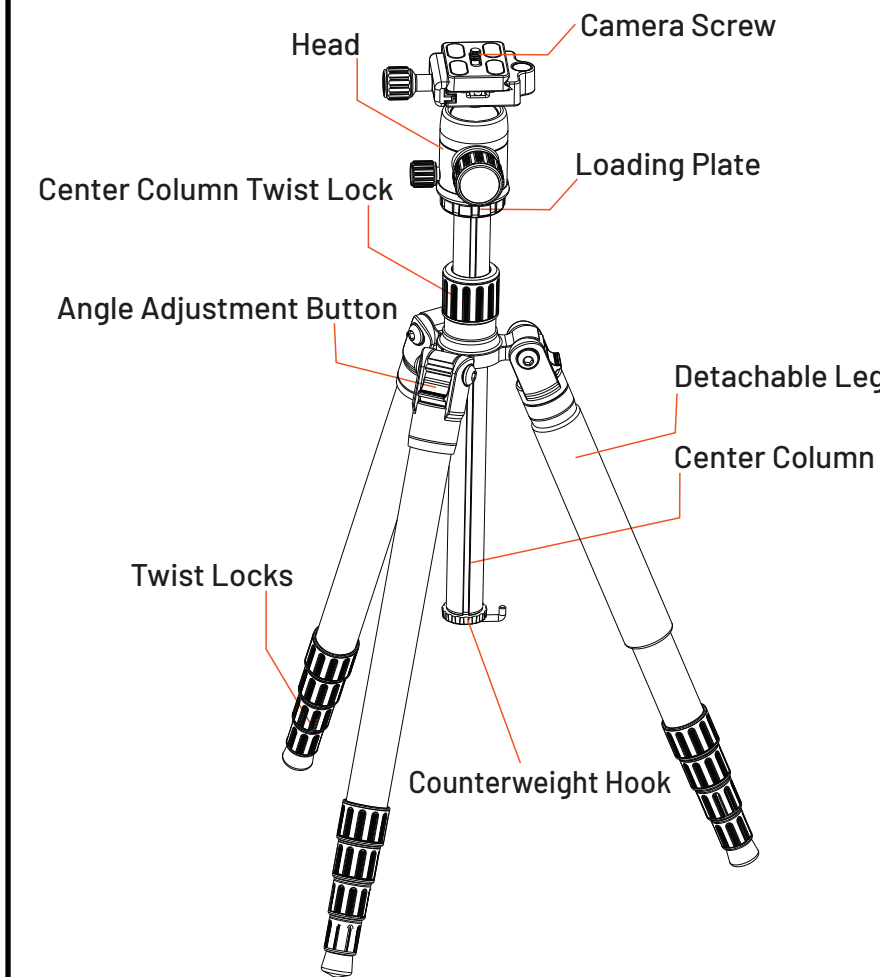

1


1.2 Flip Lock Tripod Diagram

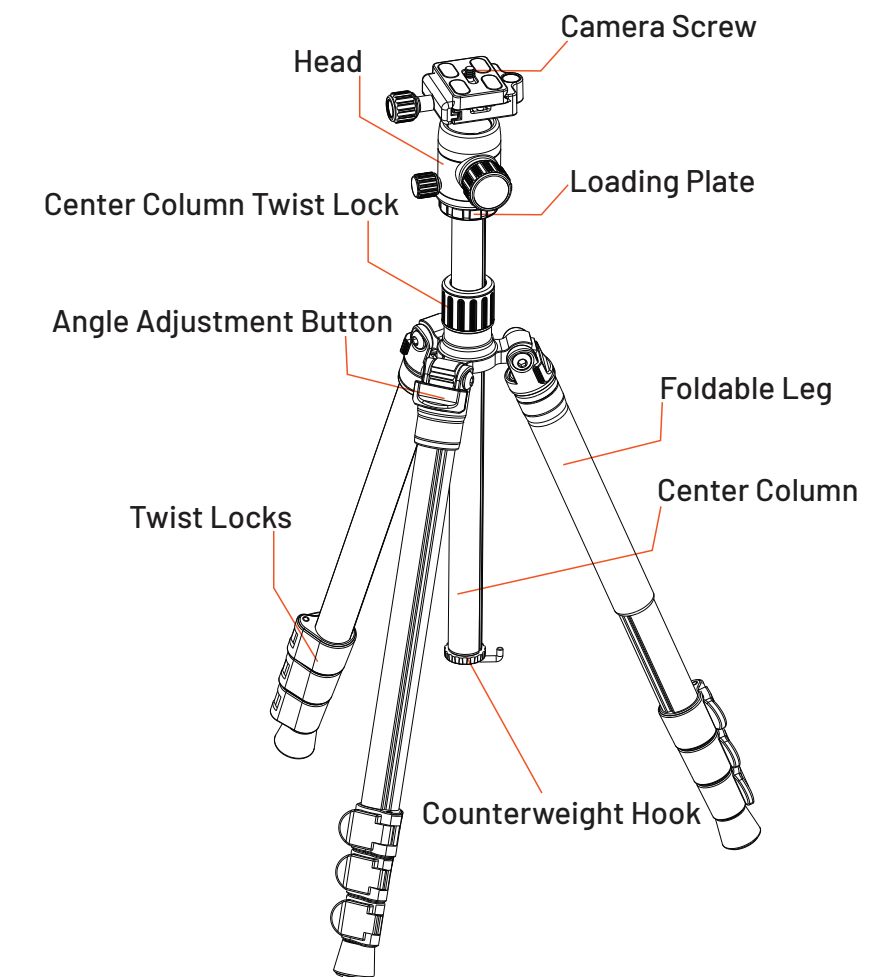

2


2. Using the Angle Adjustment Button

2.1 For a Flip Lock Tripod: Pull out the angle adjustment button to select a different angle. Ensure the button is pulled back after setting the desired position.

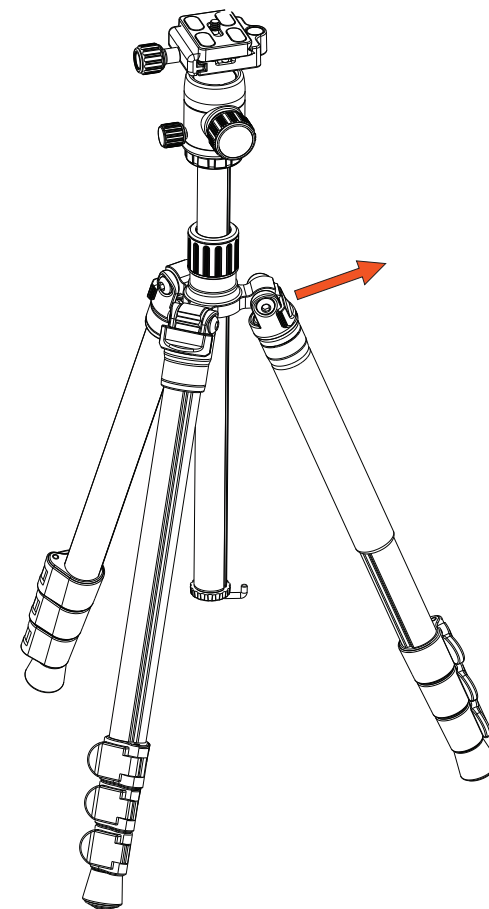


3

2.2 For a Twist Lock Tripod: Press the angle adjustment button to select the angle. Refer to Illustration for high, middle, and low angles.

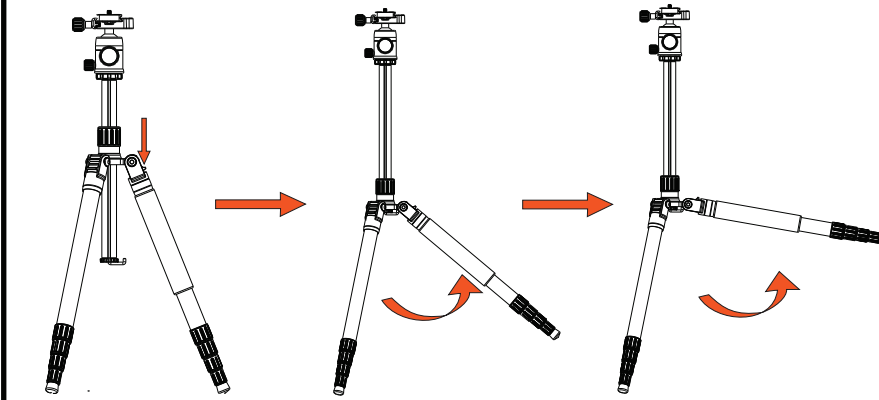


2.3 For a 180-degree folding tripod, see Illustration.

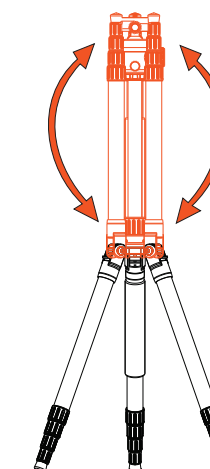

4

3. Adjusting the Center Column


3.1 To lock the center column, turn the twist lock clockwise. To adjust the height, turn the twist lock counterclockwise.

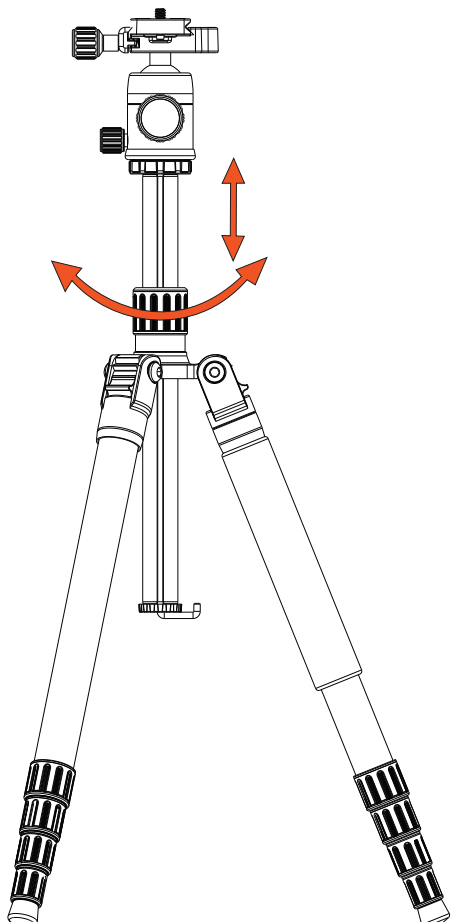


5

4. Leg Folding and Extension

4.1 Twist Lock Type: Turn the twist lock to release or secure the leg, adjusting the height as needed.

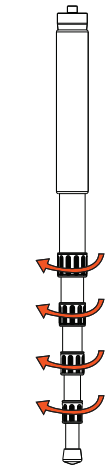


4.2 Flip Lock Type: Open the flip lock to adjust the leg to the desired height and close the flip lock to secure.

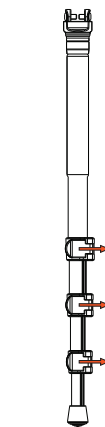

6

5. Spring Hook


Use the spring hook for hanging items like sandbags or backpacks to enhance stability.

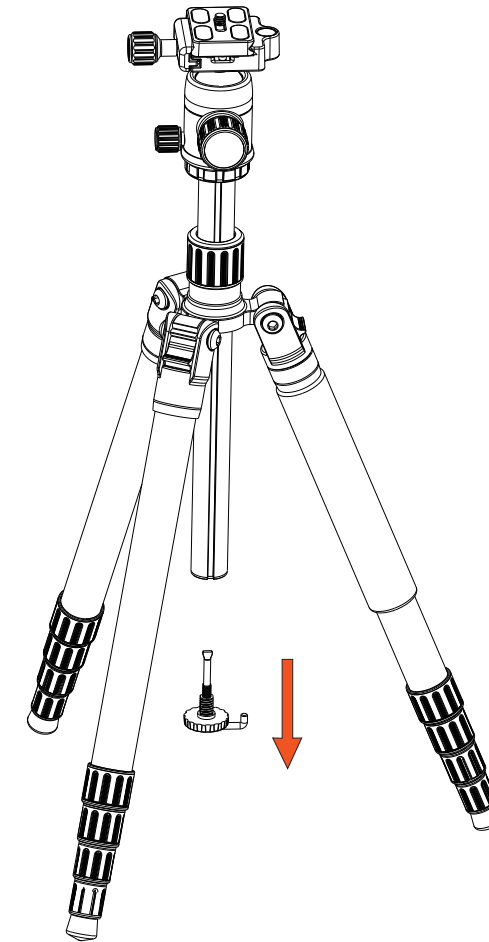


7

6. Converting the Tripod to Monopod Mode

6.1 Unscrew the detachable leg by turning clockwise. Remove the spring hook as demonstrated in Illustration.

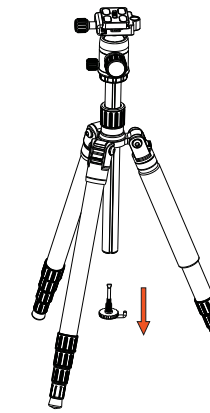


6.2 The detachable leg and center column combined create a monopod.

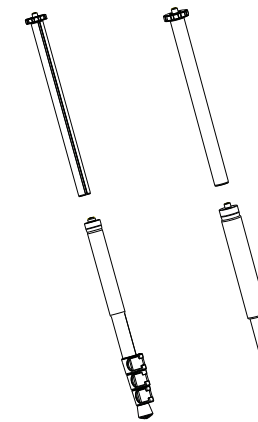

8


7. Head Details

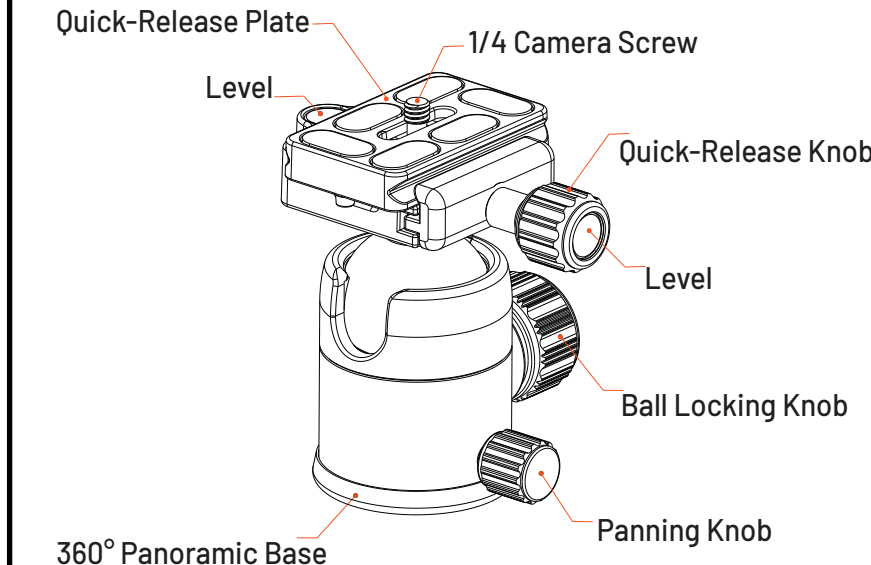

9

8. Mounting the Ball Head and Camera


-Mount the ball head onto the tripod and rotate clockwise until secure.
-To attach the camera, place the quick-release plate onto the screw and tighten. Ensure the plate is secure by rotating the quick-release knob clockwise.
-To mount the camera onto the ball head, secure the plate by tightening the quick-release knob.

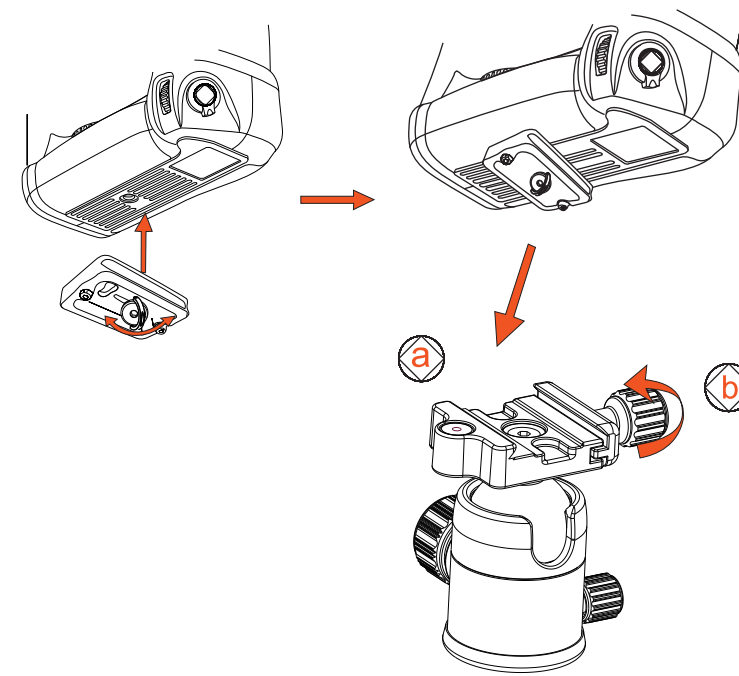


10

9. Ball Head Operation

9.1 To adjust the ball head, rotate the main locking knob counterclockwise. -Tighten the knob clockwise to secure the camera at the desired tension.

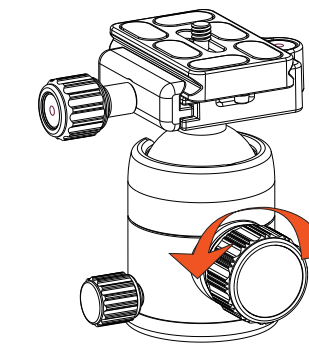

9.2 For panning, rotate the base knob counterclockwise to unlock, then clockwise to secure at the desired tension.

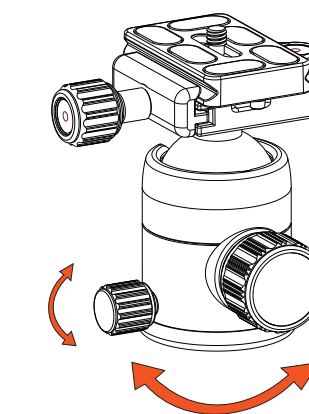

11

Warnings

- Do not exceed the head's maximum load capacity.
- Ensure the ball head is locked in place.
- Avoid using the ball head in extreme temperatures below -20°C or above 70°C . It is not advisable to operate in saltwater.
- Do not expose the ball head to prolonged sunlight or place it against a car window for extended periods.
- Be cautious when leaving the ball head in public or potentially hazardous areas.
- Always remove the camera from the ball head when moving or transporting the equipment.
- Lubrication is not required under normal circumstances. Only apply standard lubricant or grease if necessary.
- For safety reasons, keep the equipment away from power sources.

12

Warranty

*Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

*When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at info@porodo.net
Website: porodo.net
Service Support: support@porodo.net
Instagram: [porodo](https://www.instagram.com/porodo)

13