



 
Bluetooth **Soundbar System**

100W – 2.1CH | SKU:PD-STBS100W

Important Safety Instructions

Thank you for choosing our product. For your safety and product longevity, please review this manual carefully and retain it for future reference.

Warning

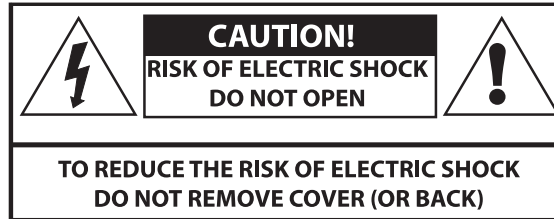

Caution

To reduce the risk of electric shock:

- Do not disassemble the product.
- Avoid exposing the device to rain or moisture.
- There are no parts inside serviceable by users. Repairs should only be done by qualified technicians.

 The presence of the lightning bolt inside a triangle warns of uninsulated voltage within the unit that could be significant enough to pose a shock hazard.

 The exclamation point within a triangle indicates that it's essential to read and heed the important warnings and instructions in this manual.

Notice

1. This appliance is not suitable for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are under the supervision of a person responsible for their safety or they have been given supervision or instruction concerning use of the appliance.
2. Children should be supervised to prevent them from playing with the appliance.
3. To avoid potential hearing damage, refrain from listening at high volume levels for prolonged periods.
4. Never operate the device without supervision. Always turn it off when not in use, even briefly.

5. The appliance must not be controlled by external timers or separate remote control systems.
6. If the power cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to prevent any risk.
7. Prior to operating the system, check the voltage of the system to ensure compatibility with your local power supply.
8. Ensure the unit's ventilation is unobstructed; avoid covering with items such as newspapers or curtains, leaving at least 20 cm of clear space around the unit.
9. Do not expose the product to liquids or place it near objects filled with liquids, like vases.
10. To avoid fire or shock risks, do not expose this equipment to direct heat, rain, or dust.
11. Do not position the unit near any water sources or on surfaces that are not stable and dry.
12. Avoid placing this unit close to strong magnetic fields, amplifiers, or receivers.
13. Do not place the unit in damp areas, as moisture can shorten the lifespan of electronic components.
14. Do not use chemical solvents to clean the unit; wipe with a dry or slightly damp cloth.
15. Remove the power plug from the outlet by pulling the plug, not the cord.
16. Interference from a TV broadcast can cause lines on the LED TV; keep this unit away from the TV.
17. Use the main plug to disconnect the device, which should remain easily accessible.

Important Safety Instructions

1. Read and follow all instructions and warnings.
2. Do not use near water and clean only with a dry cloth.
3. Ensure ventilation openings are not blocked and install as per manufacturer's guidance.
4. Do not place near heat sources like radiators or heaters.
5. Protect the power cord from being walked on or pinched, particularly at plugs and where it exits the unit.
6. Use only attachments/accessories specified by the manufacturer.
7. Unplug during lightning storms or when unused for long periods.
8. All servicing should be performed by qualified service personnel. Service is necessary if the device has been damaged in any manner, such as if the power-supply cord or plug is damaged, liquid has been spilled, objects have fallen into the device, the device has been rained on or dropped, or it does not operate normally.

Preparation for Use

Unpacking and Set Up

1. Extract the Soundbar from its packaging and remove all materials provided for transit protection. Retain the packaging for future transport or servicing needs, as it's designed to safeguard the device.
2. Detach any descriptive labels or stickers from the unit's housing, except those on the back or base that provide operational information.
3. Position the Soundbar on a stable, level surface away from direct sunlight and free from excessive heat, dust, moisture, or vibrations.
4. Fully uncoil the power cord to connect the AC adapter, ensuring it reaches its maximum length for proper setup.

Protect Your Furniture

*The Soundbar includes non-slip rubber feet to secure it in place during use. These feet are crafted from a special material to prevent marks on furniture. Yet, certain finishes or care products may cause the feet to soften, potentially leaving marks or residue.

*To safeguard your furniture, it's advisable to apply self-adhesive felt pads, widely available at hardware stores. Place these pads on the underside of the Soundbar's rubber feet before positioning the unit.

Important Notes


1. This soundbar is specifically designed for use with LED/LCD/Plasma TVs and is not compatible with CRT (Cathode Ray Tube) TVs to prevent image interference.
2. Retain the safety and operating instructions for future reference.
3. Do not expose the soundbar to dripping or splashing, and do not place it in humid environments like bathrooms.
4. Avoid installing the soundbar in locations subject to direct sunlight, near radiators, in dusty areas, on top of heat-generating devices, in vibration-prone areas, or in excessively moist conditions.
5. Do not position the soundbar near open flames.
6. Follow all operational instructions as per the manual.
7. Ensure the soundbar is connected to a power outlet before switching it on.
8. For safety reasons, refrain from removing any covers or trying to access the soundbar's internals. There are no parts inside serviceable by consumers. All servicing should be conducted by qualified service personnel.

Specifications

Model	PD-STBS100W
Technology	Bluetooth/AUX/USB/Optical/HDMI(ARC)
Drivers	(50x90) * 5.25 ± 2 inch
Audio Output Power	25W * 50 + 2W = 100W R.M.S
Frequency Response	20KHz-55Hz
Signal-to-Noise Ratio	72dB
Impedance	6Ω+2*4Ω
Power Input	SMPS 110V-240V~50Hz/60Hz
Bluetooth Operating Range	Version 5.0+EDR
Dimensions	Soundbar: 62H*73D*750L mm Subwoofer: 135W*360H*210D mm


Product Diagram

 - 1: LED Volume Indicator
- 2: LED Mode Indicator
- 3: AUX
- 4: OPTICAL
- 5: HDMI(ARC)
- 6: USB
- 7: DC IN
- 8: SW OUTPUT
- 9: Power/Standby
- 10: VOL-
- 11: VOL+

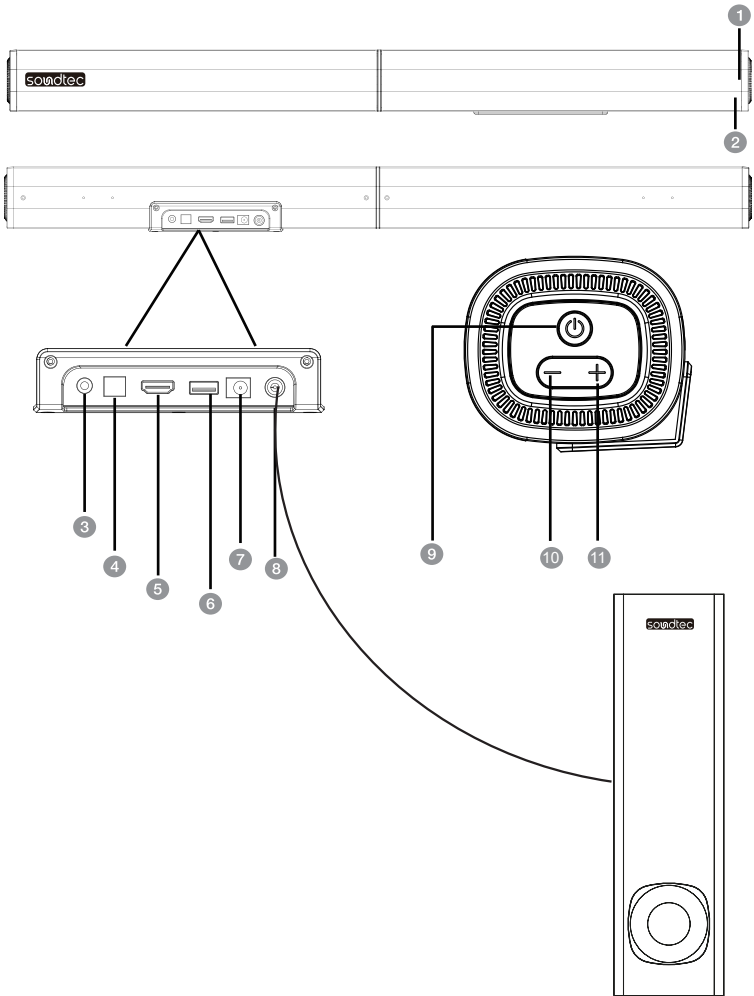


Remote Control Functions

 
1. Power Button: Toggle the soundbar on/off or to standby mode.
2. Pair Button: Hold for more than 2 seconds to pair or unpair the last connected Bluetooth device.
3. Volume Up: Increase volume.
4. Previous Track: Skip to the previous track in Bluetooth mode.
5. Volume Down: Decrease volume.
6. Music Button: Select and activate the Music EQ effect and mode.
7. Treble Up: Increase treble.
8. Treble Down: Decrease treble.
9. Mute Button: Mute/unmute the sound.
10. Source Input: Choose the audio source:
 - HDMI (ARC): Audio from HDMI ARC device.
 - Bluetooth: Audio from Bluetooth device.
 - USB: Audio from USB drive.
 - Aux: Audio from Aux line-in.
 - Optical: Audio from an optical device.
11. Next Track: Skip to the next track in Bluetooth mode.
12.
 - Play/Pause: Play or pause playback in Bluetooth mode.
 - Reset Button: Press and hold for more than 2 seconds to reset to factory settings.
13. Movie Button: Select and activate the Movie EQ effect and mode.
14. News Button: Select and activate the News Voice EQ effect and mode.
15. Bass Up: Increase bass.
16. Bass Down: Decrease bass.
17. 3D Button: Select and activate the 3D sound effect and mode.

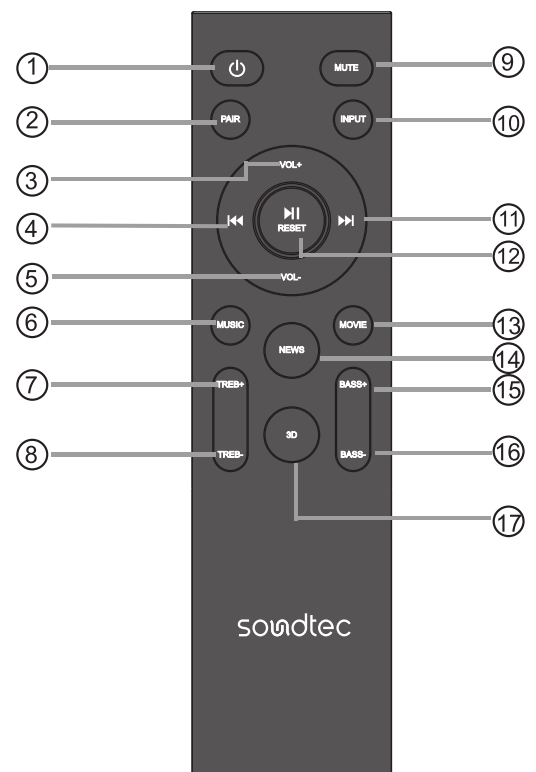


Remote Control Battery Replacement

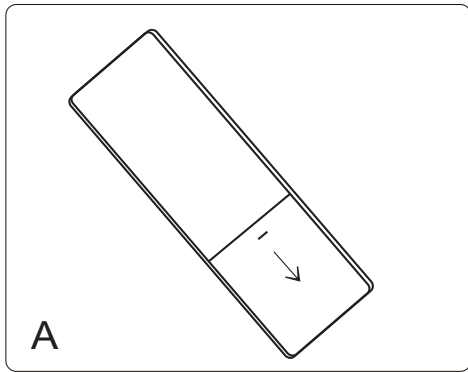 

A: Slide off the battery cover.

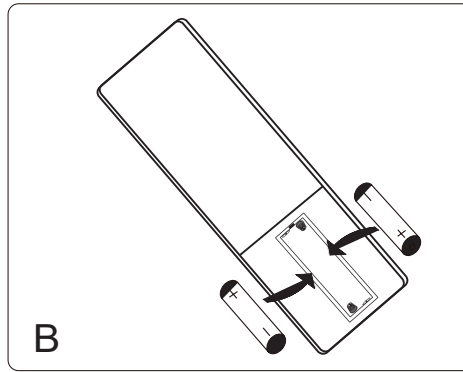 

 B: Insert two AAA batteries, aligning them with the correct polarity as indicated.

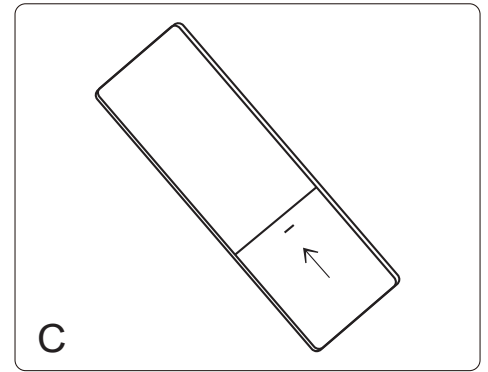

C: Replace the battery cover.



CAUTION

Risk of explosion if the battery is replaced with an incorrect type.

Handling the battery

- Misuse of batteries may lead to corrosion or leakage and cause fire, injury, or damage to property.
- Use only the battery type specified in this manual.
- Do not combine new and used batteries or different battery types.
- Dispose of batteries responsibly, in line with local regulations, not as household waste.

 
Handling the Remote Control

- Avoid dropping the remote control.
- Protect the remote control from impacts.
- Keep the remote control dry and do not expose it to liquids.
- Avoid placing the remote control on wet surfaces.

- Protect the remote control from prolonged sun exposure and heat.
- Remove the batteries if the remote control will be unused for extended periods to prevent corrosion or leakage.
- If the batteries are depleted, the remote control will cease to function.

Operating range of the remote control


- When using the remote control for a wall-mounted unit, aim it at the sensor on the front panel for proper functionality.
- The remote control has an effective range of 8 meters (26.2 feet). Performance may be hindered by obstacles between the remote control and the unit.
- Operating the remote control in the vicinity of devices emitting infrared rays or other remote controls may result in operational errors. This interference may affect both the remote control and the other devices.

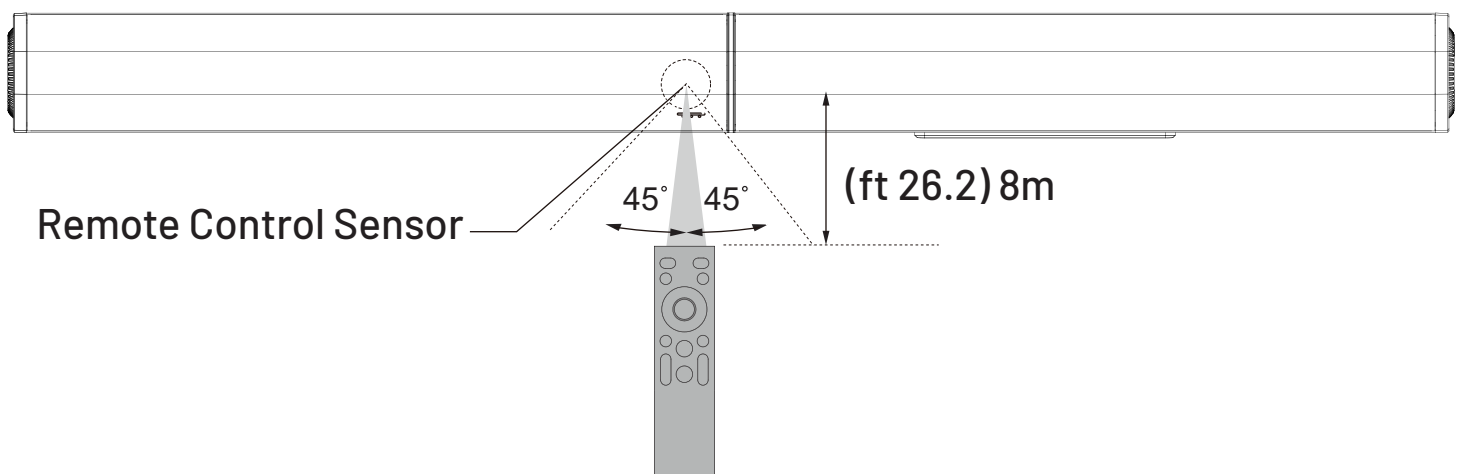

Positioning the Sound Bar

Table Placement

 - Position the sound bar horizontally on a stable surface, such as a TV cabinet or shelves, and align it with the center of the TV for optimal audio distribution and ventilation.
- For the best acoustic performance and to maintain proper ventilation, follow the illustrated guide for sound bar placement.




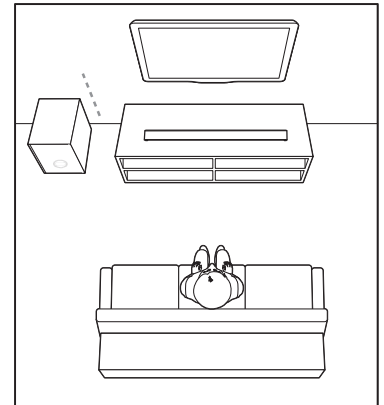


Steps for Wall Mounting

1. Affix two pieces of EVA foam with pre-cut holes onto the wall brackets, matching them to the bracket's hole pattern.
2. Secure the sound bar to the wall by inserting and tightening screws through the unit's rear housing into the wall bracket holes with the EVA foam aligned.
3. Mark the wall at the bracket hole positions, drill pilot holes, insert wall anchors, then attach the brackets using the provided screws.
4. Adhere the second set of EVA foam without holes to the wall brackets, position the brackets over the anchors, and secure the sound bar in place.

Please Note

    - Clean the sound bar's surface to remove any oil or dust before attaching adhesive parts.
- Ensure the adhesive bonds firmly to the surface.
- Handle the double-sided tape with clean hands to avoid contamination and be aware that its adhesive quality can deteriorate over time due to storage conditions.

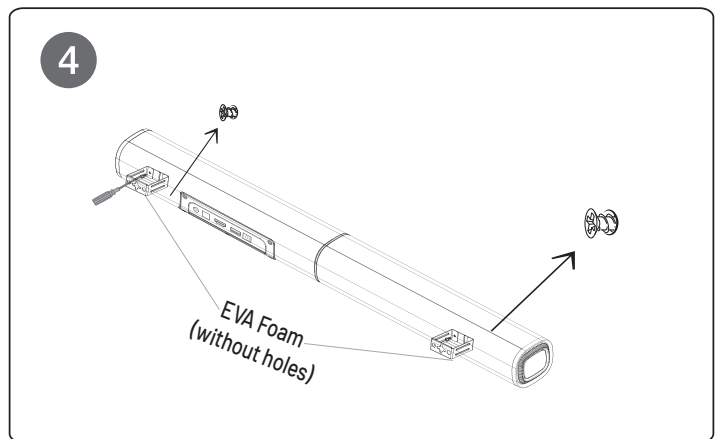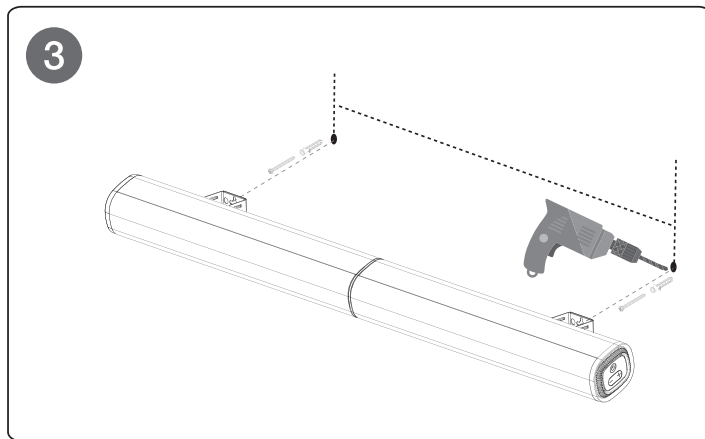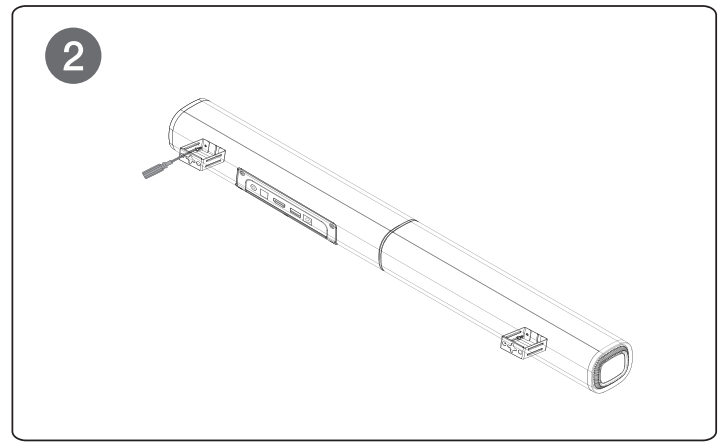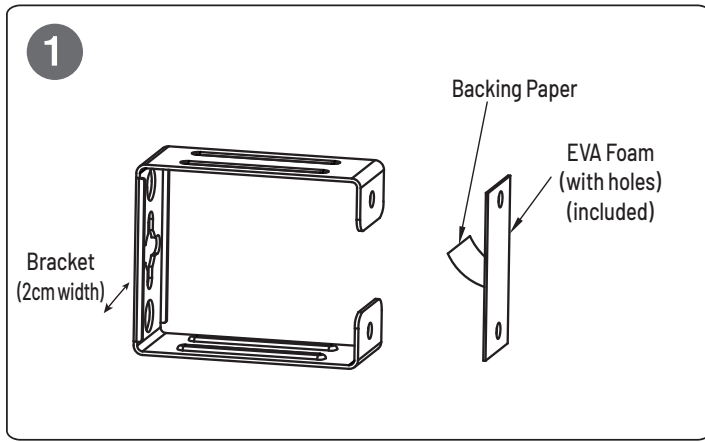


Mount the Unit on a Wall

CAUTION


- Ensure all wall mounting steps for the soundbar are executed correctly to prevent accidents. Improper installation could result in damage or injury.
- Secure the soundbar to a stable, structurally sound wall to prevent it from falling.
- Use only screws that are suitable for the weight and specifications of the soundbar to ensure a safe installation.
- Organize cables to prevent them from becoming a trip hazard or causing the soundbar to dislodge.
- Do not exert excessive force on or lean against the soundbar; this may lead to damage or injury.

Soundbar Assembly Details

 
1. Connect the left audio cable to the right audio input.

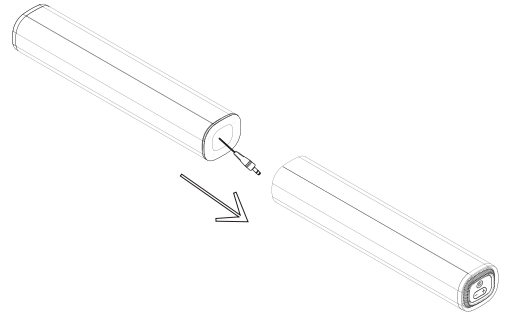

 2. Secure the connection by holding the convex interface of the soundbar and rotating the other interface approximately 20 degrees to lock it in place.

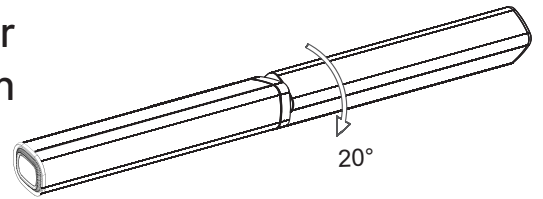

 3. Place the soundbar on furniture; it is now ready for use.

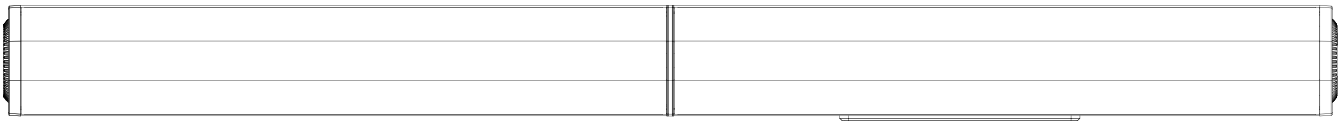

Operating Instructions

Setting the Soundbar

1. Connect the adapter cord; the LED will indicate power on.

2. The sound mode can be changed with the STANDBY button or the INPUT button on the remote. Modes and connections such as Bluetooth, Optical, HDMI (ARC), Auxiliary, and USB can be selected, each represented by a different LED color:

- Blue: Bluetooth Mode
- Green: AUX Mode
- Cyan: HDMI (ARC) Mode

- Orange: Optical Mode
- Red: Standby Mode
- Pink: USB Mode

3. When the mode indicator is lit, turn the soundbar off by pressing the Standby or Power button. If the indicator light is off, activate any button on the remote to turn it on.

4. The soundbar's volume ranges from 32-0, with a default setting of "10." It retains the last volume setting used. Volume changes are visually indicated by a flickering and scrolling light.

 
5. Activate Treble/Bass/EQ modes with the remote; the mode indicator will flicker once.

Powering On/Off

1. Connect the soundbar to a power source; it will default to standby mode, and the LED indicator will glow red.

2. To power on, press the STANDBY button on the soundbar or the POWER button on the remote, then select input modes using the INPUT button. To return to standby, press the STANDBY button on the soundbar.

3. To power off, hold the STANDBY or POWER button on the remote for 2 seconds. The soundbar will switch to standby mode, and the LED indicator will turn red. Then, disconnect the soundbar from the power source.

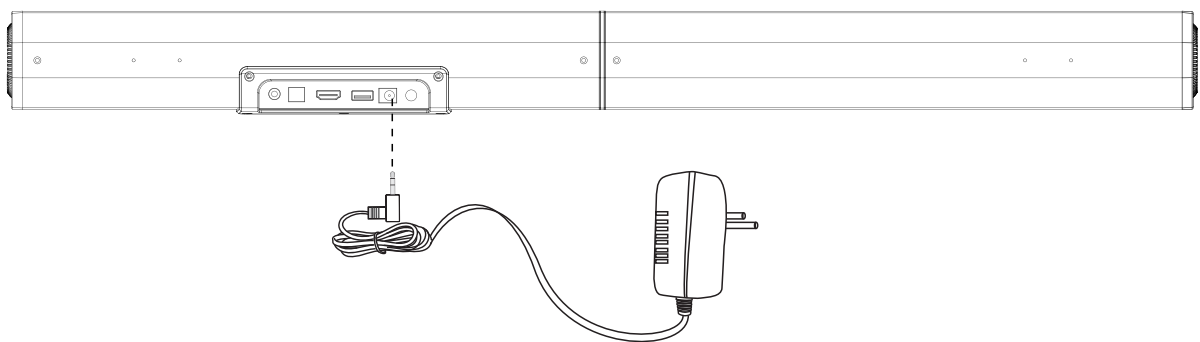

Playing Audio via Bluetooth Connection

 
1. Activate Bluetooth mode using the Power/Standby button on the soundbar or the "INPUT" button on the remote.

2. Enable Bluetooth on your device, search for "PD-STBS100W" in the list and connect.

3. Successful pairing is confirmed by a tone, and the blue LED indicator remains on.
4. Adjust the volume using the soundbar or remote control.
5. The remote includes Bluetooth playback controls. To disconnect or reconnect the last Bluetooth device, hold the PAIR button for more than two seconds.
6. Adjust audio settings as desired using the remote-control buttons.


Notes:

1. In Bluetooth mode, the remote can control music playback such as play/pause or navigate through tracks with the PREV/NEXT buttons. These buttons are operational only in Bluetooth mode and do not function in other modes.
2. Once paired, the device does not require the pairing procedure to be repeated with the same device.
3. Should the connected device be switched off or manually disconnected, the soundbar will enter pairing mode automatically.
4. If the connected device moves out of wireless range (up to 10 meters) from the soundbar, it will disconnect. However, it will reconnect once the device is back within Bluetooth range. Repeat the pairing procedure to connect to additional devices.
5. If a Bluetooth device has previously been connected, the soundbar will reconnect to the most recently connected device. To pair a new device, the previous connection must be unpaired.
6. The soundbar does not shut down automatically while in pairing mode. If no device is paired, remember to turn off the soundbar.

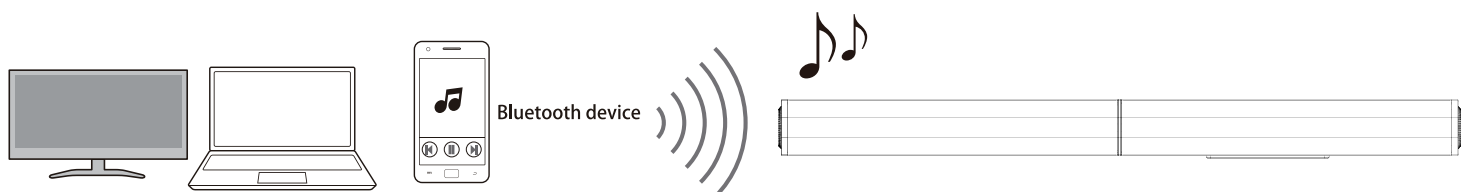

Audio Input (AUX) Connection

 1. Connect a 3.5mm to 3.5mm audio cable (not included) from the PC, tablet, smartphone, or TV's headphone socket to the AUX input on the soundbar. Alternatively, use the provided RCA to 3.5mm audio cable to connect a Blu-Ray DVD Player or TV's audio output to the soundbar's AUX input.
2. To enable AUX mode, press the POWER/STANDBY button on the SoundBar or the "INPUT" button on the remote. A green LED indicator will illuminate to show AUX mode is active.
3. When in AUX mode, playback controls such as play/pause, track selection, and pairing cannot be adjusted through the Soundbar remote. Other playback functions can be controlled from the Soundbar itself. In this mode, playback control is primarily through your connected device.

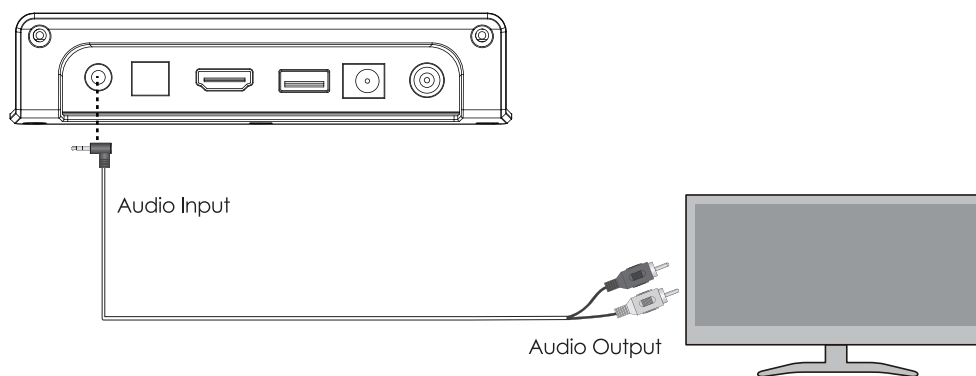

Playing Audio via USB Port

When the USB flash drive is plugged in, the sound bar automatically switches to USB input mode. A Pink LED indicator will signal that USB mode is active. This mode cannot be selected on the sound bar or remote control unless it is connected to a USB flash drive.

1. Ensure that your USB flash drive contains MP3 audio files (other file types are not supported).
2. Connect the USB flash drive to the USB port on the sound bar (or use your own USB extension cable connected to the USB port); music will automatically play.
3. The remote control includes USB input mode playback controls.

Optical Mode

*Remove the protective cap from the optical cable (retain the cap for future use) and ensure the correct orientation of the plug. Connect the sound bar and TV with the optical cable.

 
*Use this mode to play music from a TV with an optical digital output on the sound bar. In your TV's sound settings, select the sound bar optical connection (output for audio). When the optical cable is connected, the TV audio output is to be set to PCM format.

*Your TV must have an optical digital output. Use the provided optical cable to connect as follows:

1. Connect the optical cable to the optical digital output of your TV.
2. Connect the other end to the optical digital input of your sound bar.
3. On your TV settings, set the sound output to "PCM Stereo". This configures the audio output mode to [automatic] or [decoded output as PCM state].
4. Begin playback on the TV.
5. To select optical input mode, press the "INPUT" button on the remote control or the "STANDBY" button on the sound bar. The LED mode indicator will illuminate in orange.
6. Adjust the volume using the volume buttons on the sound bar or the remote control to meet your preferences.
7. You can also modify the audio settings with the relevant buttons on the remote control.

Notes:

1. When connecting a device such as a TV/set-top box/DVD/game console with an optical cable, adjust the audio output mode of the device to PCM mode (digital optical output).
2. Avoid bending the optical cable, as this could damage the internal cable.

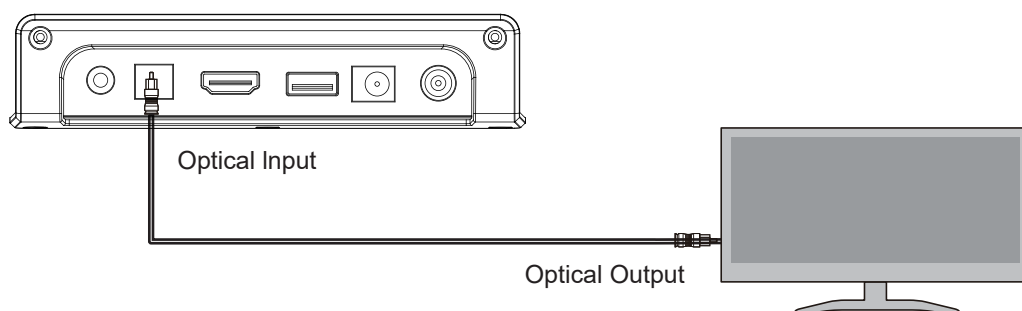


HDMI (ARC) Mode

1. The sound bar supports HDMI(ARC) with audio return channel (ARC), allowing the TV audio to be heard through the sound bar with a single HDMI(ARC) cable, provided that your TV is ARC compatible.
2. Connect the sound bar to your TV using a high-speed HDMI(ARC) cable. Insert one end into the HDMI(ARC) port on the sound bar and the other into the HDMI(ARC) connector on the TV. The HDMI(ARC) connector on the TV might have a different label. Refer to your TV's user manual for specific details.
3. Once HDMI(ARC) is active, set the TV sound output to "sound output" mode, selecting "external PCM Stereo" for audio output. Additionally, the TV digital audio output should be configured to "PCM" format to match the sound bar's requirements. Begin playback on the TV after these settings are applied.
4. To activate HDMI (ARC) mode on the sound bar, press the "INPUT" button on the remote control or the "STANDBY" button on the sound bar. The mode indicator will light up in Cyan, indicating the selection. TV settings may vary; consult your TV's user manual for precise instructions.
5. Adjust the volume to your preferred level using the volume buttons on the sound bar or the remote control.
6. Audio settings can be fine-tuned by using the appropriate buttons on the remote control.

Notes:

 1. When connecting a device with HDMI(ARC) capability, such as a TV/set-top box/DVD/game console, set the device's audio output to PCM mode to enable HDMI (ARC) output.
2. The setup menus may differ across various TVs connected to the sound bar via an HDMI(ARC) port, but the general operation remains consistent.
3. If there is a need to connect a set-top box simultaneously, connect the HDMI(ARC) cable to the sound bar first, then to the set-top box to ensure proper pairing and function.

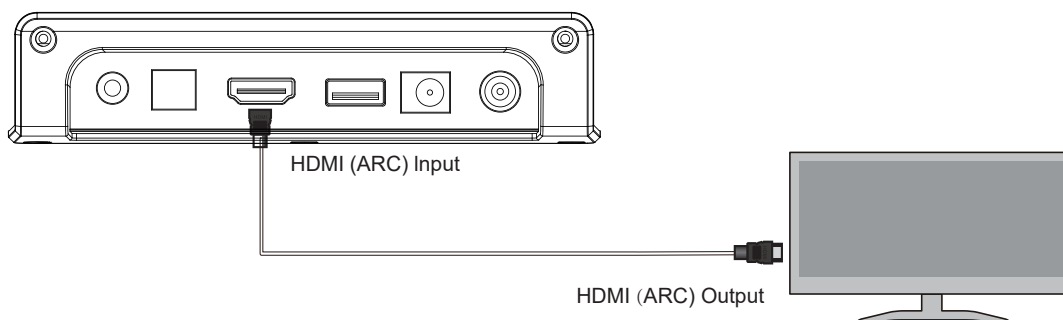

TROUBLESHOOTING

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from soundbar.	Another input source is selected.	Select the correct input source.
	The mute function is activated.	Deactivate the mute function.
	The volume of sound bar or TV/another device is set too low.	Increase volume levels on sound bar or through the TV/remote control.
	The power cable of the unit is not connected properly.	Secure the power cable connection to an AC wall outlet.
	Input jacks on a playback device are connected.	Ensure input jack on sound bar and output jack on the device are properly connected.
Note: Choose the appropriate audio input and output when using an audio cable to connect the soundbar to a TV or other device via the TV (ARC) port output. Verify that the playback device's digital audio output is configured to PCM format. If the soundbar is utilized, the TV or other devices' decoding format will be changed to PCM as the soundbar has a PCM output format.		
The sound is distorted or echoed.	TV volume is not muted.	Mute the TV's speakers if audio is played through the sound bar.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when turned on.	Adjust the volume settings as required after the unit is powered on.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Relocate these devices further from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Operate the remote control within the designated range.
	The batteries are weak.	Replace with new batteries.
	The remote-control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the sound bar's position or lighting conditions.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote-control sensor.	Reposition the sound bar to avoid blocking the TV's sensor.
A device cannot connect the soundbar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Reinitiate the Bluetooth pairing process and ensure proper connection.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source on the unit.
	The unit is connected to a different Bluetooth device.	Disconnect from the current device and pair with the intended Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the unit closer to the Bluetooth device for a stable connection.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Avoid using the unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a compatible Bluetooth device that adheres to the required protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Remove the Bluetooth device profile and reconnect to ensure proper functionality.

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Relocate the device closer to the sound bar, ensuring there are no obstructions between them.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Increase the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Set Bluetooth as the selected input source.
	Playback on the device has not been initiated.	Initiate playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Set this unit as the output device on the Bluetooth settings.
	The connection to the Bluetooth device was interrupted.	Re-establish the connection with the Bluetooth device.
	The unit may be too distant from the Bluetooth device.	Position the Bluetooth device closer to this unit.
	A device generating electromagnetic interference is nearby.	Avoid using the unit in the vicinity of devices that emit electromagnetic waves.
There is no sound from soundbar - HDMI TV (ARC) Mode	1. An incompatible HDMI cable is used, disrupting the signal. 2. Incorrect input mode is selected.	1. Confirm that a 1+19 pin HDMI cable is used and that both the TV and sound bar are ARC compatible. 2. Set the TV to HDMI ARC (CEC) and adjust the audio output of the TV to PCM format. For detailed guidance, consult your TV's user manual.
There is no sound from soundbar (OPTICAL Mode)	1. The OPTICAL cable may be damaged, resulting in signal loss. 2. Incorrect operation mode is selected.	1. Replace the damaged OPTICAL cable with a new one to establish a connection. 2. Ensure the TV audio output is set to PCM format. For further information, please refer to your TV's user manual.
Disconnected between subwoofer and soundbar	The connection between the subwoofer and soundbar is not established.	1. Disconnect and then reconnect the sound bar and subwoofer by removing the adapter from the socket. 2. Ensure both units are powered and attempt to connect again. 3. Press and hold the subwoofer's WPS button to reset the connection, then try to reconnect.

Warranty

*Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

*When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

Contact Us

If you have any questions about this Privacy Policy, please contact us at: info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](https://www.instagram.com/porodo)