

soundtec

BY PORODO

Aktiv

AIR CONDUCTION NECKBAND

PD-STF03N



SPECIFICATIONS:	
Bluetooth Version	EDR + 5.2
Support	A2DP1.3, HFP1.6, HSP1.2, AVRCP1.6, D11.3
Bluetooth Frequency	2.4GHz
Bluetooth Range	10m
Charging Case Battery	70mAh
Charging Time	1.5 Hours
Playing/Talking Time	3-4 Hours
Charging Port	Type-C

1

Product Schematic Diagram



MFB

Type-C Charging Port

2

PRODUCT INSTRUCTIONS

First time use:
For an optimal experience, please charge the earphone before first use.

Power On: Press and hold the MFB (Multi-Function Button) for 3 seconds.
Power Off: Press and hold the MFB for 5 seconds.

Connect with your mobile:
-Press and hold the MFB until the red LED flashes, indicating the earphone is in pairing mode.
-Activate the Bluetooth on your device, search for the Earphone's name and select it to pair.

Note: Keep the earphone and your device within 1 meter during pairing to ensure a successful connection.

Charging LED Indicators:
While charging: red LED remains on.
Fully charged: red LED turns off.
Low battery: red LED flashes.

3

Product Operation Instructions	
Previous Song	Tap MFB twice
Next Song	Tap MFB 3 times
+ Volume	Tap MFB 4 times
- Volume	Tap MFB 5 times
Play/Pause	Tap MFB once
Answer/End Call	Tap MFB once
Siri Voice Assistant	Press MFB for 2 seconds

4

PRECAUTIONS

1. Store the earphones in a dry and well-ventilated area to prevent damage from oil , water, moisture, and dust.
2. Avoid using stimulants, organic solvents, or any substance containing these ingredients to clean the earphones.
3. Follow the correct usage guidelines to ensure the earphones perform well, considering the environmental impact on the device.
4. Maintain a connection distance within 10 meters between your earphones and Bluetooth-enabled devices.
5. If the earphones fail to connect or exhibit poor connection, do not attempt to disassemble the earphones or accessories on your own as this may void the warranty.
6. Use the standard USB cable provided by our company to charge the earphones. Do not use a cable with a sharp or pointed charging cable tip.
7. For continuous performance, ensure the earphones are adequately charged.

5