

soundtec
BY PORODO

BASH

Party Speaker



200W

Model: PD-BASH-BK


What's in the Box?

Check to make sure you
have everything below

- 1 AC Charging Cable
- 1 Quick Start Guide
- 1 Wireless Party Speaker




Quick
Start Guide

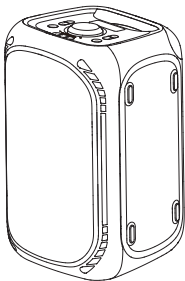

*Playtime is measured under test conditions
using pink noise at 50% volume.


Get to Know Your Party Speaker

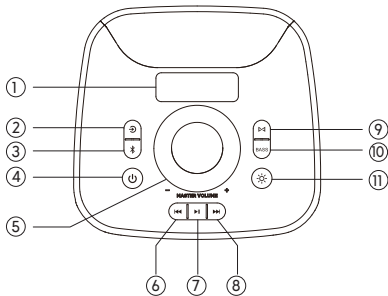

- 1. LED screen
- 2. Source
- 3. Bluetooth
- 4. Power
- 5. Master volume control
- 6. Previous track

- 7. Play/Pause
- 8. Next track
- 9. Party sync
- 10. Bass boost
- 11. Party light


Get to Know Your Party Speaker

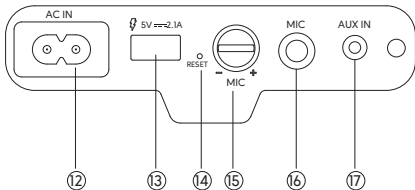


- 12. AC charging port
- 13. USB-A - charging port for mobile devices
- 14. Reset

- 15. Microphone volume control
- 16. 1/4" Microphone/ Guitar port
- 17. 3.5 mm AUX input


Press & hold  to power on/off the speaker.

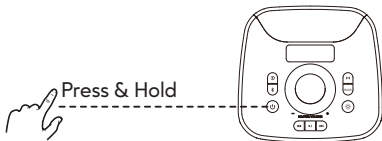


Connect to your device through Bluetooth® wireless technology, search for the entry "Party Speaker M".

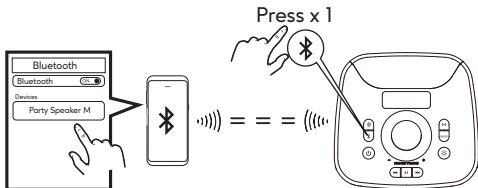

1. If you have 2 wireless party speakers, power on both speakers, press  of each speaker to enter Party Sync Mode.
2. When two speakers are connected, you will hear “left channel, right channel”.
3. Use your mobile device to pair with the party speaker through Bluetooth wireless technology.
4. Press  again to disconnect Party Sync Mode.

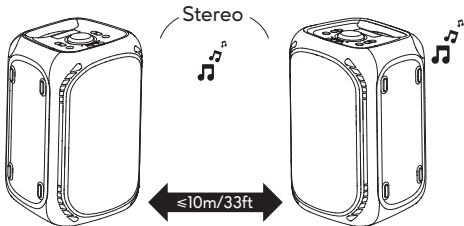


1. Use a 3.5 mm Aux cable (not included) to connect the speaker to your audio source.
2. In AUX mode, ⏮ ⏭ ⏪ can't be controlled on speaker, you can ONLY control them by your audio source device.

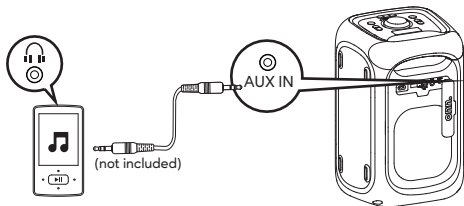

1. Press  to select FM mode.
2. Press  or  to scan and select FM stations channel by channel.
3. Press & hold  or  to seek (jump to the next available station).
4. In FM mode, press and hold  to assign a preset number for the current station, and press  to save, the LED screen will show "SAV" which means the station has been saved successfully. The preset number can be changed by pressing  and . In FM mode, press  repeatedly
5. to select a preset radio station.



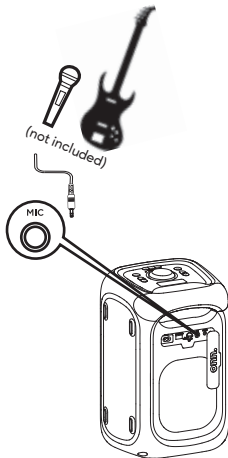


1. Connect your Microphone or Guitar to the MIC/Guitar port.
2. Play Guitar through the speaker.
3. Singing through Microphone when music playing in Bluetooth/AUX/FM mode.
4. Adjust the Microphone or Guitar volume through MIC knob.

1. Press & hold ☀️ to turn on/off the party light.
2. Quick press ☀️ to switch between 6 different multicolor lightings.

Tips:


- Always keep the charging port dry before connecting to AC power.
- To ensure it is waterproof, always close the protective cover securely.

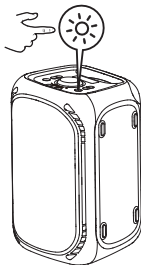

The battery icon will flash when charging, it will remain solid white once fully charged.

More tips:

- USB-A charging port with emergency power can charge your other smart devices (5V $\overline{\text{---}}$ 2.1A output), when this Party Speaker is powered on.
- Do not sit on the speaker to avoid possible damages.
- Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place.
- Recommend to charge it at least one time for every 6 months, in order to keep the

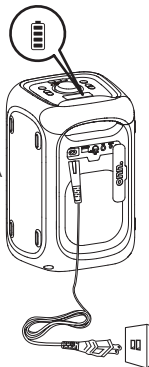

battery performing well. A prolonged empty battery may result in fewer hours of usage between charges.