



Eclipse WIRELESS HEADPHONES

Models:

PD-STWLEP011-BK, PD-STWLEP011-RD, PD-STWLEP011-GN




50 HOURS
PLAYTIME

Specifications:

- Bluetooth: Version 5.3 + EDR
- Driver Size: 40mm
- Impedance: 32 Ohm $\pm$ %15
- Sensitivity: 97dB $\pm$ 3dB at 1kHz
- Frequency Response: 20Hz-20kHz
- Battery Capacity: 400mAh
- Play Time: Up to 57-55 hours at %50 volume
- Charging Time: 2 hours for a full charge; -Quick Charge: 10 minutes for 10 hours of playtime
- Standby Time: Up to 300 hours
- Wireless Range: 10m (without obstacles)

Included:

- 1x Wireless Headphone
- 1x USB-C Charging Cable
- 1x 3.5mm Audio Cable
- 1x Instruction Manual

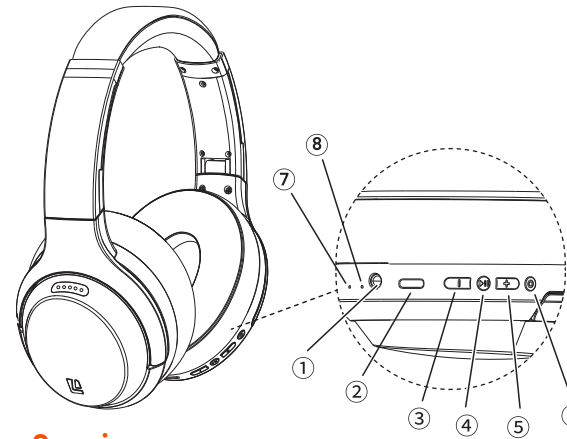

:Overview

- 3.5 .1mm Audio Port
- USB-C Charge Port
- Volume Down, Previous Track
- Multifunction Button - Play/Pause, Answer/End/Reject Call, Activate Voice Assistant
- Volume Up, Next Track
- Power On/Off, Mode Change
- Microphone
- LED Indicator

Battery Charging

- This headphone is powered by a rechargeable Li-ion battery. A low battery alert will sound when it's time to recharge.
- Plug the provided USB cable into a compatible USB port to charge.
- Connect the cable to the USB-C port on the headphone.
- The LED light turns red during charging and switches off when fully charged.
- A full charge takes approximately 2 hours.

Fast Charging

Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim ad minim veniam, quis nostrud exerci tation ullamcorper suscipit lobortis nisl ut aliquip ex ea commodo consequat. Duis autem vel eum iriure dolor in hendrerit in vulputate velit esse molestie

Bluetooth® Pairing

- To pair, turn off the headphones, then press and hold the power button (6) until the LED (8) blinks blue and red, accompanied by a "Pairing Mode" voice prompt.
- Search for "Por HP Gen2" on your device to pair. The LED will turn off and you'll hear "Connected" once successfully paired.
- The headphones will reconnect to the same device automatically when turned on again.

Wired Connection

- For wired use, connect the 3.5mm audio cable to the headphone (port 1) and your audio source.
- No need to power on the headphones in wired mode; audio is managed directly from the source.

®Playing Music via Bluetooth

- To play music, press the Multifunction (MF) button (4). Press again to pause the music.
- Hold the "Volume+" button (5) to skip to the next track.
- Hold the "Volume-" button (3) to rewind to the previous track.
- Press the "Volume+" button (5) to raise the volume. A voice prompt will signal when the maximum volume is reached.
- Press the "Volume-" button (3) to lower the volume.

Answering/Ending Calls

- Press the MF button (4) to answer an incoming call, and press again to end the call.
- To reject an incoming call, hold the MF button (4) for 2 seconds.
- The built-in microphone is located on the headphone (7).

Voice Assistant

- When the headphones are on and not in a call, hold the MF button (2) for 2 seconds to activate your phone's voice assistant.
- Activation pauses any music playback, allowing you to interact with the voice assistant.

Modes – Gaming/Music

- The headphones feature dual modes: Gaming and Music.
- To toggle between modes, double-press the Power button (6). An audible voice prompt will indicate the selected mode.
- Gaming mode offers reduced latency, while Music mode emphasizes sound quality.

Cautions

- Avoid placing the product in damp, dusty, smoky, or steamy environments, and do not expose to sunlight for long periods. Avoid leaving in a vehicle for extended times to prevent malfunction.
- Clean with a soft, dry cloth. Avoid harsh rubbing that could damage the paint.
- Do not submerge the headphones in water; they are not waterproof.
- Listening at full volume for prolonged periods may risk hearing damage.
- Charge the headphones with the provided USB cable. Using a non-adaptive fast charge cable may damage the battery.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under license. Other trademarks and trade names are those of their respective owners.

- WARNING:** Do not dispose of the unit in fire or water.
- Never attempt to disassemble and reassemble.
 - Waste electrical products should not be disposed of with household waste; please recycle where facilities exist.
 - Consult your local authority for recycling advice.
 - Keep your device and all accessories out of the reach of children and animals to prevent choking or serious injury if swallowed.
 - Avoid exposing your device to extreme temperatures, either very cold (below 0°C) or very hot (above 45°C), as it can deform the device and reduce battery life and charging capacity.
 - Do not expose your device to wet conditions; liquids can cause serious damage.
 - Handle your device with dry hands to ensure safety.