

porodo
LIFESTYLE

PORTABLE ELECTRIC MEAT CHOPPER

EMULSIFY | WHISK EGGS | PURÉE



Please read the instructions carefully before use

FEATURES

1. Visual operation, easy to observe the chopping process.
2. Two containers' design , USB wireless and portable.
3. The blade adopts SUS 420 stainless steel , which has high hardness, durability and sharpness.
4. Double start switch design, more safety protection.
5. Multifunctional used in chopping meat, vegetable, whisking the egg whites, peeling garlic, etc.

INSTRUCTIONS FOR USE (LARGE CONTAINER)



1. When installing a large container, align the triangular signs neatly and put in the large blade.



2. Put the food into the container.



3. Close the cover and rotate to align the triangular logo.



4. Press and hold the start switch for 2 seconds to boot.



5. Press the handle switch to start working.



6. Release the switch and chopping ready.

INSTRUCTIONS FOR USE (SMALL CONTAINER)



1. Install small container and small blade.



2. Put the ingredients in small container.



3. Close the upper cover and rotate it in place.



4. Press and hold the start switch for 2 seconds to boot.



5. Press the handle switch to start working.



6. Release the switch and chopping ready.



PRODUCT SPECIFICATIONS

Product model	MDR1	Product size	209mm*158mm*200mm
Product weight	about 1300g	Rated voltage	7.4V 
Rated current	12A	Rated power	88W
Charging method	USB	Charging requirements	5V  1A

CLEANING AND MAINTENANCE

1. Please clean the container, blade, food mixer stick, garlic peeler stick immediately after using.
2. The main body is forbidden to be washed, and the rest can be washed directly or wiped with a damp cloth.
3. You can put a proper amount of detergent during cleaning. Warm water cleaning is better.
4. The blade is very sharp, please don't touch the blade directly with your hands to avoid injury.
5. Use the detergents when cleaning.
6. High temperature disinfection of all parts of the product is strictly prohibited.
7. After cleaning, wipe all parts dry, then assemble and store.
8. When not in use for a long time, please charge the product every three months.

ATTENTION

1. This product is an electric meat grinder. Please charge this product before using it for the first time.
2. The motor is forbidden to wash, and it is strictly forbidden to use the product with overload.
3. Do not place the containers in a microwave oven or freeze it in the refrigerator.
4. Do not put the parts of this product in the dishwasher for cleaning.
5. This product cannot be used to process hard foods, such as coffee beans, soybeans, donkey-hide gelatin, rice, ice cubes or frozen food.
6. When the product is working, it is strictly forbidden to touch the detachable parts such as blades and motors to avoid injury or damage to the product.
7. The continuous working time of this product cannot exceed 30 seconds. After continuous working for 30 seconds, take a 2 minutes break Working for 30 seconds then take 2 minutes break as a cycle. After continuous working for 3 cycles, the product should be cooled for 30 minutes to ensure product life.
8. This product should be stored in a place out of reach of children. Do not let people (including children) who lack relevant experience and knowledge use or play with this product.
9. This product is only suitable for personal or family use, not suitable for commercial use.

FAILURE ANALYSIS

If you may have some faults while using this product, please confirm the following points before requesting us for repair		
Phenomenon	Reason	Approach
Not working	1. The equipment is not assembled 2. The battery power is exhausted	1. Assemble the equipment according to the instructions 2. Please charge in time
Suddenly stop during operation	1. Put too much ingredients 2. The battery power is exhausted 3. The ingredients put in are too hard and cause the product to jam	1. Reduce the amount of ingredients 2. Please charge in time 3. Take out the harder ingredients
Abnormal noise	1. The accessories are not installed properly 2. Place the product on the unsmoothed position 3. There is a lot of noise when cutting ingredients	1. Stop the machine and check if the accessories are installed correctly and in place 2. Please place the product in a flat area for use 3. Confirm whether the machine is well assembled, if the assembly problem is ruled out, stop using it
Food spills after using the product	1. Handling some ingredients with high moisture content, or placing too much 2. Confirm whether the upper cover is well closed or not	1. It is normal 2. Install the upper cover correctly
Indicator light: 1. The red light flashes for 10 seconds 2. The red light flashes for 5 seconds 3. The white light flashes for 3 seconds 4. The indicator light does not light up when charging	1. The battery power is exhausted 2. The motor is blocked 3. Press the handle switch directly without turning on the start switch in advanced 4. The charging cable is not well connected	1. Please charge in time 2. Take out the ingredients and remove the blocking 3. Turn on the startup switch 4. Connect the charging cable well

GUIDES TO CHOP AND STIR FOOD

Food	Weight	Time(about)	Tips
Pork	300g	30s	Meat needs to be skinless, boneless, and tendon removed. For non-meat, it is recommended to cut into chunks with a size of no more than 2x2x2cm. Meat and vegetable ingredients should not exceed the specified scale.
Beef/Lamb	300g	30s	
Garlic	300g	15s	
Chili	200g	15s	
Carrot	300g	15s	
Sweet potato	300g	20s	
Potato	300g	20s	
Vegetable	150g	15s	

ACCESSORIES (WHISK EGG WHITE AND PEEL GARLIC)

Install garlic peel and whisk egg white stick accurately on the central shaft of the container.



Whisk egg white--handle switch control button can continue to work until the egg white reaches the effect you want, and release the button will end the work.



Warm tips for peeling garlic:

1. It's suitable for dry garlic only.
2. It's suggested to cut off the garlic bottom before start peeling.
3. The suggested working time is 20 seconds.
4. The experimental effect is 60% done, so you can try another time as you like.

Attention: The accessories varies depending on the package you buy.