

soudtec

BY PORODO

120W

MODEL: PD-RUSH-BK



RUSH

EUPHORIC BASS
PORTABLE SPEAKER

Features:

- 2.2CH Superb Portable Outdoor Boombox
- Amazing Sound all around and Punchy Bass beating
- Excellent Build Quality with hard strong handle
- Three modes of RGB light activity makes perfect for disco party
- IPX6 Water Resistance, perfect for the beach, poolside and boating
- Google Assistant and Siri voice control optimized
- Multiple Link Function, multiple links of unlimited numbers achieving enhanced sound
- USB port compliance with power bank and USB disk playing function
- Dedicated with Hands-free Mic for easy picking up the call
- Line-in function, suitable for PC, MID, TV and other audio devices

Specifications:

Bluetooth version: V5.3

Tweeter Size: 1.5 inch*4 ,2Ω

Subwoofer Size: 3 inch*4 ,2Ω

RMS power output: Tweeter 10W*2+Subwoofer 20W*60 =2W in total

Peak power output: Tweeter 20W*2+Subwoofer 40W*120 =2W in total

Battery Capacity: 7.4V, 5400mAh

Play time: 2.5 hours at maximum volume & 8 hours at %50 volume

Frequency Response: 80HZ-20KHZ

 
Bluetooth connecting range: 15m

Product size: 377(L)*157(W)*180(H)MM

Package Contents:

- 1xPortable Bluetooth Speaker
- 1xType-C Charging cable
- 1xAudio cable
- 1xUser manual

Product Details:



1. Backward/Volume Down
2. Forward/Volume Up
3. RGB Light
4. Built-in Mic Hole
5. Power On/Off
6. Multiple Link Button

7. Play/Pause
8. Mode Button
(turn among Bluetooth, USB disk and AUX-IN)
9. AUX socket
10. Reset Jack
11. Type-C Charging Jack
12. USB socket/Power bank socket

To ensure correct operation and avoid damage,
please read this user manual carefully before using this product.

Power On/Off:

Long-press the Power button to turn the speaker on and off.

Bluetooth:

- Turn the power button to “ON”. The speaker enter Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name “ES244A” then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button to select songs.
- Short-press Forward or Backward button to adjust volume up and down.
- Short-press Play/Pause button to play/pause the music.
- Long-press “Multiple Link” Button to disconnect the Bluetooth connection with the mobile device.

Note: If your smartphone is disconnected from speaker due to shutdown or switching mode, the speaker will automatically reconnect your smartphone when it is turned on again or switched back to Bluetooth mode.

Multiple Link Function:

Prepare all speakers (Infinite quantity but they must be same BT pairing name) you need to connect by Multiple Link, choose 1pc as master speaker and follow below steps.

Steps	Operation/Status		Power indicator (white LED)		Multiple Link indicator (white LED)	
1	Master Speaker	Turn on and connect to external devices (connected to smartphone /USB player /AUX player). Short-Press "Multiple Link" button to make it ready for Multiple Link connection of Slave Speakers.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
2	Slave Speakers (Infinite quantity)	Turn on and make it in BT disconnected state. Short-Press "Multiple Link" button to search Master Speaker, it will automatically start to get connected by Multiple Link.	Slave Speaker	Blink slowly	Slave Speaker	Lighting constantly if Slave Speaker connected successfully.
			Slave Speakers	Blink slowly	Slave Speakers	Light off if if Slave Speaker fail to connect in one minute.
3	Master Speaker	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Blink slowly(but if it was sitll connected to your smartphone, then indicator would light constantly.)	Master Speaker	Light off
			Slave Speakers	Blink slowly	Slave Speakers	Blink slowly (searching status), then light off if fail to connect to master speaker in one minute.
4	Slave Speakers	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
			Slave Speakers	Blink slowly	Slave Speakers	Light off

Playing music from USB disk:

- Turn the Power button to “ON”.
- Insert USB flash disk into USB socket, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

Note: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

Power Bank Function:

- Turn the speaker on.
- Connect other device to the 5V 1A out port via a charging cable.

AUX-IN:

- For other compatible music devices, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.

EQ Introduction:

This unit offers 2 kinds of sound effects, long-press Mode button to change the EQ modes.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to turn the three different light modes and turn it off.

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on mobile phone to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the Reset Jack with a small round pin to reset the speaker.

More Remarks:

- Default volume is at %50 status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

- When battery voltage low, the speaker will make prompt sound, Red LED indicator will blink. Please Recharge In Time.
- The charger is not included in the package, please charge this speaker via a rated 5V/2A charger or via a PC. Fast charger (rated 9V/3A) is supported as well.
- After inserting charging cable and start charging, the Red LED indicator will keep lighting without blinking.
- Charge time should be 6-4 hours. Once the speaker is full charged, the red Power LED indicator will switch off.
- To protect the battery, please do not use the speaker while it is charging.

Warning:

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fair.

Made in China

