

porodo
LIFESTYLE



IPX6 Electric Spin **Scrubber Cleaning Kit**

P D - L F S E S C - W H

Before installing and using the product, please carefully read this
User Manual to guarantee correct usage.

Package Contents



Dome Brush



Corner Brush



Large Flat Brush



Brush Base



Sponge Brush



Fiber Brush



Cloth Brush



USB Cable



Parameters

Color	White
Handle Material	Stainless steel
Material	ABS
Adaptor	5V/1A
Batteries	2500mAh 3.7V
Charging Type	Type-C Charging
Charging Time	About 2.5 hours
Working Time	30 - 60mins
Waterproof Level	IPX6
Special Feature	Adjustable, Cordless

Function of Brush and Accessories



Large Flat Brush:

Optimized for efficient cleaning, ideal for concave areas such as showers, tubs, sinks, baseboards, or toilets.



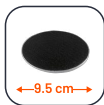
Dome Brush:

Designed to clean large flat surfaces, including floors, tiles, walls, doors, windows, furniture, pools, stoves, carpets, and ceramics.

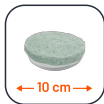


Corner Brush:

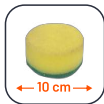
Suitable for cleaning grout, edges, corners, and tight spaces.

**Brush Base:**

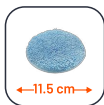
Compatible with fiber, sponge, and cloth brushes, which can be interchanged as needed.

**Fiber Brush:**

Effective for removing oil stains on stoves and kitchen appliances.

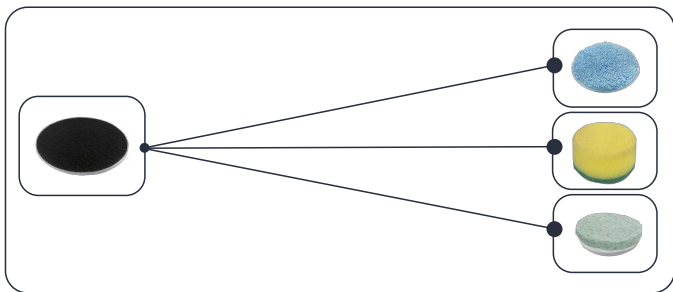
**Sponge Brush:**

Ideal for cleaning windows and vehicles.

**Cloth Brush:**

Perfect for cleaning windows and glass surfaces.

Attaching Brushes to Brush Base



Power On & Off Operations

Activate the electric spin scrubber by pressing the power button, which also serves as the selector for the first gear (Default gear). To switch to the second gear (Maximum gear), press the power button again. The device will cease operation upon a third press.

Battery Indicator

A fully charged battery is indicated by 4 illuminated lights, roughly 100%. Three lights denote approximately 75% charge, two lights indicate about 50%, and one light represents roughly 25% charge remaining. If all four lights are flashing, the battery is critically low and may shut down at any moment.

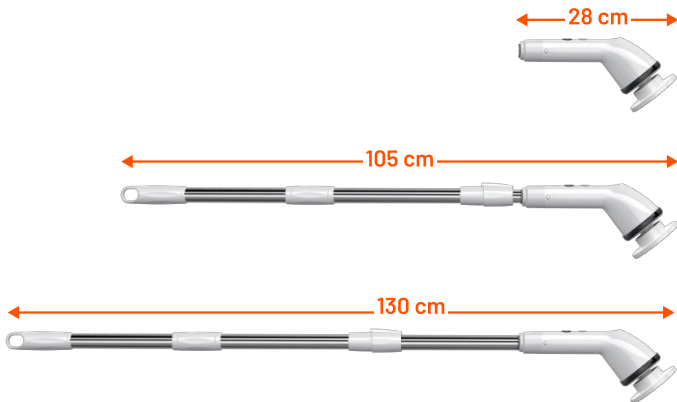
Note

For charging, use a USB 5V power supply and the provided Type-C charging cable. Charge for no less than 2 hours until the battery is fully charged.

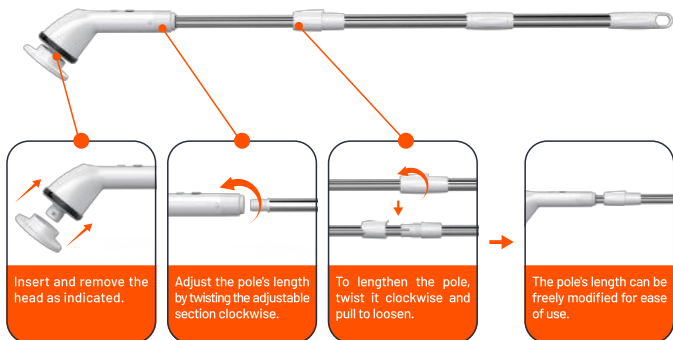
Avoid using the electric spin scrubber while it's plugged in and charging.

To maintain the product's longevity, particularly if unused for over 6 months, ensure a complete charge at least every 6 months.

Production Size & Structure



How to Use Electric Spin Scrubber



Cleaning and Maintenance

1. Ensure the charging port is sealed during cleaning.
2. Avoid using metal objects like steel wool on the brush heads or surface, which can cause damage.
3. Do not clean with gasoline or acetone as these can degrade the brush heads.
4. After use, rinse the brush heads with clean water and dry with a cloth before hanging for storage.

Environment Protection

1. Do not expose brush heads to temperatures above 60 degrees Celsius.
2. Dispose of the product responsibly, avoiding general waste. Recycle where possible.
3. Before disposal, remove the battery to ensure environmental safety.

Warranty

Exclusion

- Porodo doesn't cover any damage caused by the normal use of the product over time during the warranty period.
- The Porodo warranty doesn't include coverage for improper use, deliberate damage, accidents, theft, carelessness, or any repairs done by unauthorized service centers.
- The power needs for each product are clearly stated on their packages. Please check these requirements against those of your country before buying. Porodo won't be responsible for any problems related to this.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](https://www.instagram.com/porodo)