



## Package Content



Headset X2



Charging Case X1



Type-C Charging Cable X1



Instruction Manual X1

## User Guidelines:

Avoid disassembling or replacing any components, unless specified in the manual.  
The product is not waterproof. Do not immerse in water or any other liquids.  
If the device comes into contact with any liquid, disconnect and remove immediately.  
Ensure your hands are dry when handling to prevent electric shocks.  
Keep the product away from direct heat sources and fire.  
Avoid using in areas with strong electromagnetic fields as it may cause the product to malfunction.

## Product Specifications:


Bluetooth Version: V5.3  
Transmission Range: ≤10M  
Playtime: Approximately 4 hours  
Standby Time: Approximately 90 hours  
Speaker Size: φ 13mm  
Earbud Charge Time: Around 1.5 hours  
Battery Capacity (Earbuds): 30mAh  
Power Input (Earbuds): 5V $\overline{\text{---}}$ 30mA

## Charging Case Specifications:

Battery Capacity: 200mAh  
Charge Time: Roughly 2 hours  
Battery Voltage: 3.7V  
Standby Current: 20uA  
Power Input: 5V $\overline{\text{---}}$ 160mA  
Note: Actual technical performance might vary.

## Charging Instructions:

Connect the Type-C cable to the charging case and a 5V power adapter. If the earbud battery drops below 3.3V, a voice prompt will alert you ("Battery Low") and the indicator will flash red five times at one-minute intervals. Please charge promptly.

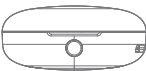

Rated Input: 5V $\overline{\text{---}}$ 30mA (Headset)



Rated Input: 5V $\overline{\text{---}}$ 160mA (Charging Case)

## LED Indicator Status for the Earbuds:

|                          |                                              |
|--------------------------|----------------------------------------------|
| Power On                 | A blue light flashes three times             |
| Power Off                | A steady red light is displayed for 1 second |
| Pairing Mode             | Flash alternately in red and blue colors     |
| Charging the Headset     | Indicated by a continuous red light          |
| Charging Case Status     | Indicated by a steady blue light             |
| Clearing Matched Devices | A red light for 1 second before turning off  |

## Instructions for Operating the Earbuds:

### Turning On Earbuds:

-Place in charging case and open lid to turn on automatically.  
-Or press and hold touch control on either the left or right earbud for 3 seconds for manual power on. Confirmed by an audio cue saying "power on."

### Turning Off Earbuds:

-Return to charging case to power off automatically.  
-Or press and hold the touch control on either earbud for 5 seconds for manual power off. You'll hear an audio cue saying "power off."

### Pairing Earbuds:

-Turn on earbuds; they'll connect to each other and enter pairing mode. This mode is signaled by an audio prompt saying "pairing."  
-In your device's Bluetooth settings, find and connect to the earbuds.

Tip: For connection issues, reset by placing earbuds in the charging case, then remove to re-enter pairing mode.



## Touch Operations for the Earbuds:

### ■Normal Mode



Turn on/off: Press and hold left earbud for 2 seconds (audio cue: "dong").  
Increase volume: Single click right earbud.  
Decrease volume: Single click left earbud.

### ■Music Playback Mode



Play/Pause: Double-click either earbud.  
Previous Track: Triple-click left earbud.  
Next Track: Triple-click right earbud.

### ■Call Mode



Answer Call: Double-click either earbud.  
End Call: Double-click either earbud.  
Reject Call: Press and hold either earbud for 2 seconds.

### ■Mode Switching



Music Mode: Press and hold right earbud for 2 seconds (audio cue: "music mode").  
Game Mode: Long press right earbud for 2 seconds (audio cue: "game mode").

## Reset Pairing:

Clear pairing data: Click five times on either earbud, turning them off and erasing pairing data.

## List of harmful substances in the earbuds

| Part Names                                                                                                                                                                                                                                                                                                                                                               | Harmful Substances in Earbuds |    |    |        |     |      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|----|----|--------|-----|------|
|                                                                                                                                                                                                                                                                                                                                                                          | Pb                            | Hg | Cd | Cr(VI) | PBB | PBDE |
| Printed circuit assembly                                                                                                                                                                                                                                                                                                                                                 | ○                             | ○  | ○  | ○      | ○   | ○    |
| Small structural parts (e.g., shell)                                                                                                                                                                                                                                                                                                                                     | ○                             | ○  | ○  | ○      | ○   | ○    |
| <p>Note:<br/>This chart adheres to the SJ/T 11364 standards.<br/>○ indicates that the hazardous substance in all parts is within the acceptable limits set by GB/T 26572.<br/>X denotes that a certain material exceeds the limits specified in GB/T 26572. Components marked with an "X" have unavoidable harmful content due to current technological constraints.</p> |                               |    |    |        |     |      |
| <p>Additional Information:<br/>Printed circuit board components include boards, electronic parts, and related items. The earbuds you buy might not have all these components.</p>                                                                                                                                                                                        |                               |    |    |        |     |      |
| <p> Electronic and electrical items sold under the 'People's Republic of China' mark have a number representing their standard environmental protection lifespan.</p>                                                                                                                                                                                                    |                               |    |    |        |     |      |

## Warranty Statement

Disclaimer:  
The user manual is for reference only with no guarantees. Specifications and information are subject to change.  
Warranty:  
Coverage: Defects within 12 months of purchase will be repaired or replaced for free.  
Replacement: Provided if the product can't be repaired and is confirmed by the manufacturer.  
Duration: Warranty benefits last for the warranty period or the time left on it.  
Sale Items: Warranty is the shorter of the sale period or 12 months, but not less than 30 days.  
Unknown Purchase Date: Warranty extends to 13 months.  
Claims: Contact the product service hotline and follow instructions; present proof of purchase.  
Exceptions to the Warranty:  
The warranty does not cover the following situations:  
-If the product is used beyond its validity period or the three included packs.  
-If the physical appearance of the used product does not match its original structure.  
-Damages caused by misuse, abuse, improper transportation, handling, maintenance, or external obstacles.  
-Damage resulting from force majeure events such as earthquakes, wars, or other unforeseen catastrophic events.  
-Damages to the zipper or buckles caused by undue force.  
-Disconnections caused by an excessive load.  
-Any damage by sharp objects.  
-Evidence of flooding or burning.  
-Products displaying unauthorized disassembly.  
-Signs of discoloration, abrasion, rupture, or other damages occurring during the normal use of the product.  
-Altering or damaging the original identification label of the product.  
Limitations:  
The warranty may not cover all parts of the product; customers are advised to check the product at the time of purchase.  
General Provisions:  
The provided warranties are exclusive and comply with legal standards to protect consumer rights.  
Service Support: support@porodo.net