


porodo
LIFESTYLE



**Powerful Handheld
Garment Steamer**
SKU: PD-LSCPSCI

Steamer Parts

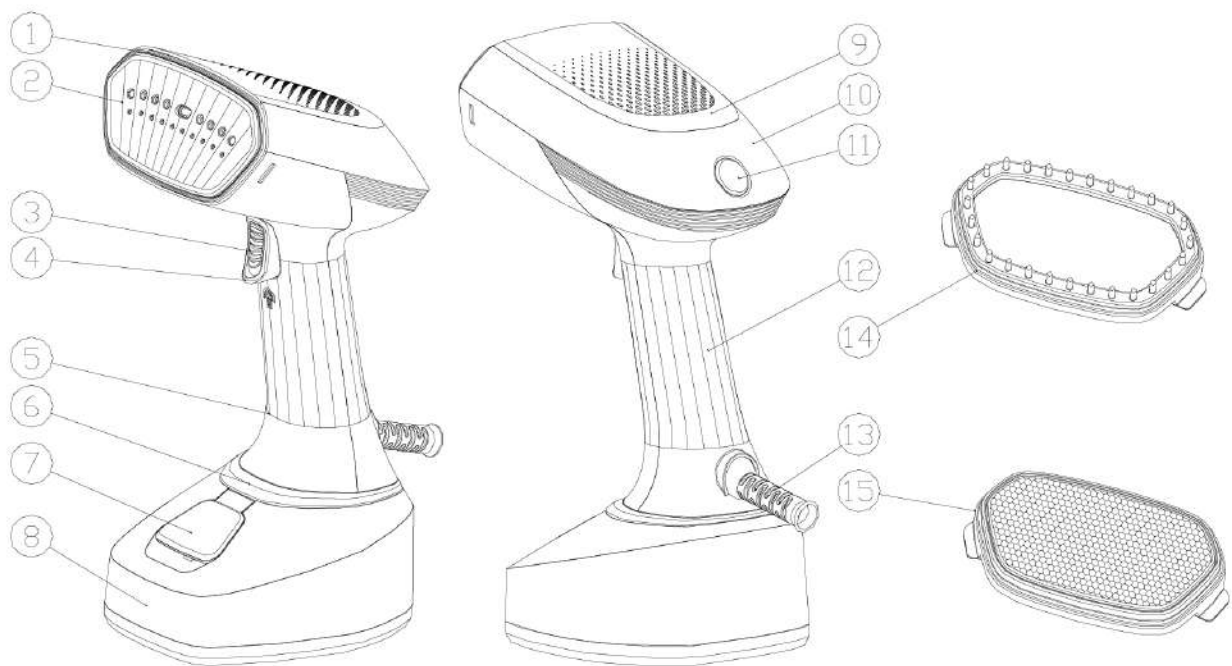

- | | | |
|----------------------|------------------|-----------------|
| 1. Panel Bracket | 2. Panels | 3. Lock Button |
| 4. Buttons | 5. Lower Cover | 6. Ornament |
| 7. Water Inlet Cover | 8. Tank | 9. Head Cover |
| 10. Lamp Cover | 11. Power Switch | 12. Top Cover |
| 13. Cord Bushing | 14. Brush | 15. Cloth Brush |

Matters Needing Attention

Before using this product, please read the instruction manual carefully and retain it for future reference.

Caution

- Dangerous: Do not immerse this product in water or other liquids, and do not rinse under a tap.
- Use this appliance with care and pay attention to the steam generated by the ironing machine, which may lead to splattering, scalding, and other hazards.

Warning

- Before connecting the product to the power supply, please ensure that the indicated voltage matches your local voltage.
- Do not use the product if the plug, power cord, or the product itself has become visibly damaged, or if the product has fallen or leaked.
- The product can only be serviced by the authorized maintenance center. Attempting to repair the product yourself will void the warranty.
- If the power cord is damaged, it must be replaced by a professional from the manufacturer or similar departments to avoid danger.
- Do not leave the product unattended while it is operating.
- This product is not suitable for children under the age of 8 or for individuals with physical or mental disabilities, sensory or mental disorders, or without the relevant knowledge and experience. It should only be used by such individuals under supervision or with instruction to ensure their safety.
- Children should not be allowed to play with this product.
- Keep the product and its power cord out of reach of children under the age of 8, especially when the product is energized or cooling.

- Children aged 8 and above should only use the product under adult supervision.
- Do not touch the steam head or surface during use. The product generates high-temperature steam which can cause burns. Do not aim the steam at people or animals and do not iron clothes while wearing them.
- Always disconnect the power before cleaning, performing maintenance, installing or removing accessories, or filling the water tank.

Attention

- Use the product with a grounded socket.
- If the product is very hot or has been connected to the power supply, avoid allowing the steam nozzle to come into contact with any surfaces when placing the product.
- Regularly check for any damage to the power cord.
- Avoid contact between the power cord and the high-temperature steam during the operation of the product.
- Do not operate the product when the water tank is empty.
- If you need to step away, even briefly, ensure that you turn off the product and unplug it from the power source.
- After using the steamer, turn off the device, disconnect it from the power source, and allow it to cool down for 60 minutes before attempting any cleaning.


- This product is designed for indoor residential use only. Do not use outdoors, in bathrooms, or in other humid environments.
- Avoid pulling or dragging the product or its power cord.
- Be mindful that steam can potentially damage or discolor certain walls or doors.
- This steamer is compatible with tap water. If the tap water in your region is very hard, scale buildup can occur, affecting performance.
- Do not introduce substances like perfume, vinegar, detergent, or ironing agents into the water tank, as they are not compatible with this product.

Before the First Use

- Before the initial use, inspect and remove any labels or protective covers from the steam head, and ensure the power cord is properly arranged and untangled.
- When using the steamer for the first time, let it run for a few minutes without clothes to remove any residues or odors left from manufacturing.
- To prevent circuit overload, avoid using the same electrical circuit simultaneously with other high-demand appliances.
- Upon unpacking, carefully check all the items and parts to ensure nothing is missing and to prevent any discrepancies.

Installation and Use

1. Before use, carefully unpack the product and remove all packaging materials.
2. Fill the water tank and attach the steamer handle as instructed. Ensure the water level is at least one-third but does not exceed the maximum level. Then, place the water tank back in its position.
3. Hold the steamer's handle with one hand and attach the additional cloth brush or bristle brush onto the steam head with the other hand. You should hear a clicking sound when it's properly installed.
4. Plug the device into a power outlet. The power indicator light will flash briefly, then stabilize, indicating the device is in standby mode. Press the power button to start heating. Once the indicator light stops flashing and remains on, the preheating is complete, and you may begin ironing. Press and hold the steam button to generate steam; release it to stop.
5. This product features an intelligent automatic power-off function. If left unused for a certain period, the internal control circuit will cut the power supply and switch to automatic power-off mode to conserve energy.

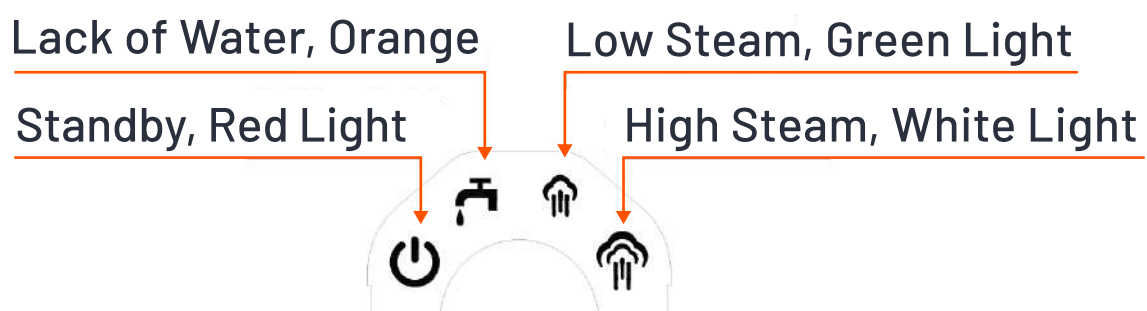

6. The device has a water shortage protection function. If the water level falls below the minimum, the pump will not operate, and after 30-50 seconds, the yellow indicator light under the lampshade (water shortage icon) will illuminate. This feature helps protect the pump and ensures the longevity of the device.

Ironing Clothes

The steamer is very user-friendly and versatile, ideal for ironing out wrinkles in clothing, curtains, and refreshing decorative fabrics. It's also suitable for most knitwear.

Note: The steamer is intended for use on clothes suspended vertically, avoiding the use of the device with clothes laid flat.

1. Ensure that the back of the fabric is breathable to prevent steam from condensing on the cloth and causing dampness.
2. Check that pockets are empty.
3. Inspect the back of clothing for items that could be damaged by steam.
4. Avoid using the device near metallic parts of clothing to prevent staining from metal corrosion.
5. While pressing the steam button, you may notice vibration and hear a soft buzzing, which is normal.
6. When ironing, move the fabric brush gently along creases for effective ironing.

7. If you're not using the fabric brush, maintain at least a 5cm gap between the steam head and the cloth.
8. A louder humming noise from the ironing machine, along with no steam, indicates the need to refill the water tank.
9. To stop the steam, release the steam button.

After Each Use

1. After use, continue to power the machine for about 15 seconds to expel remaining steam, then switch off or unplug the device.
2. To empty the remaining water in the tank, remove the tank, release the intake lid, and reverse the tank (in a sink or bucket).
3. Arrange it upright on a level surface and let the product cool down completely before gathering it.

Care, Cleaning, and Storage

1. Remove the bristle brush or mesh brush from the steam head, then clean with a damp cloth.
2. Refrain from using harsh or abrasive cleaners or solvents.
3. Do not immerse the steamer in water or any other liquids.
4. Avoid dropping or applying force to the steamer.
5. Do not try to bend or twist any part of the appliance

6. Please do not attempt to disassemble or reassemble the device.
7. Empty the water tank after each use to prevent mineral buildup.
8. Avoid storing the appliance in a damp environment.
9. Do not place the appliance near heat sources or in direct sunlight to prevent damage.
10. Always check that steam outlets are clean and not obstructed to ensure proper operation.
11. It is recommended to store the steamer vertically in a dry place, such as a wardrobe.

Troubleshooting Guide

Fault Phenomenon	Check the Reason
No display under the lamp shade.	<ul style="list-style-type: none"> *Ensure the plug is properly inserted. *Verify power supply.
Full-screen flashing buzzer sound	<ul style="list-style-type: none"> *NTC temperature sensor failure or short circuit. *Check for high and low temperature protection procedures.
The steamer does not heat	<ul style="list-style-type: none"> *Check whether the device is set to the correct function.
No steam from the device	<ul style="list-style-type: none"> *Ensure the water tank is properly filled. *Check the water level in the tank. *Firmly press the steam button.

<p>The water tank leaks</p>	<ul style="list-style-type: none">*Make sure the water level is not above the maximum mark.*Verify that the tank cover is secured tightly.*Follow the manual's instructions and maintain the device in an upright position during use.
<p>Loud pumping sound from the hanging hot machine</p>	<ul style="list-style-type: none">*Confirm the water tank is correctly filled.*Check the water level in the tank.*Understand that air in the water pipe is normal if the device has not been used for a while.
<p>Avoid discoloration of metal accessories on clothing</p>	<p>Do not use the device directly on metal components.</p> <p>Use steam cautiously around metal items.</p>

porodo
LIFESTYLE

Fault Phenomenon

Fault Phenomenon