

soundtec
BY PORODO

BASH X

Party Speaker


 **12 HOURS**
PLAYTIME




What's in the Box?

**Check to make sure you
have everything below**

- 1 AC Charging Cable
- 1 Quick Start Guide
- 1 Wireless Party Speaker

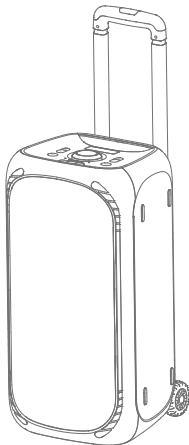


Get to Know Your Party Speaker

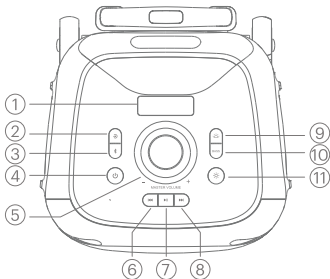

- | | |
|---------------------------|-----------------|
| 1. LED screen | 7. Play / Pause |
| 2. Source | 8. Next track |
| 3. Bluetooth / Party sync | 9. Wall light |
| 4. Power | 10. Bass boost |
| 5. Master volume control | 11. Party light |
| 6. Previous track | |



Get to Know Your Party Speaker

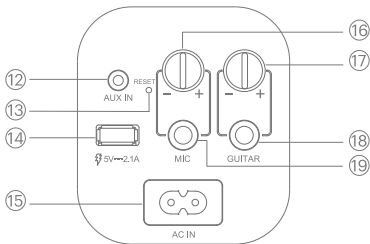

- 12. 3.5 mm AUX input
- 13. Reset
- 14. USB-A - charging port for mobile devices
- 15. AC charging port

- 16. Microphone volume control
- 17. Guitar volume control
- 18. 1/4" Guitar port
- 19. 1/4" Microphone port

Mount Your Party Speaker

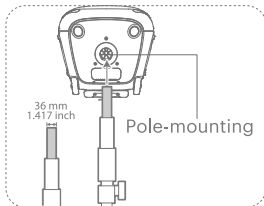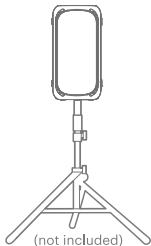


Tips:


- Installation should be done by qualified persons.
- The installer is responsible for proper selection and use of mounting hardware, to safely pole-mount the speakers.
- Always follow instruction and precaution advice from mounting stand manufacturer.

Let's Get Started! ————— 01

Press & hold  to power on/off the speaker.

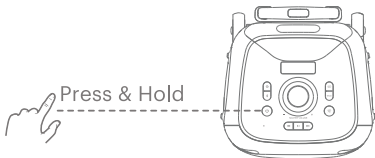


Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Speaker L".

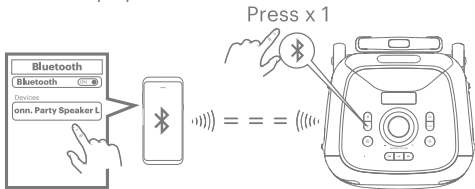


Want Your Party to the Next Level? ——— 02

1. If you have 2 **onn.** wireless party speakers, power on both speakers, press & hold  of each speaker to enter Party Sync Mode.
2. When two speakers are connected, you will hear “left channel, right channel”.
3. Use your mobile device to pair with the party speaker through Bluetooth wireless technology.
4. Press & hold  again to disconnect Party Sync Mode.

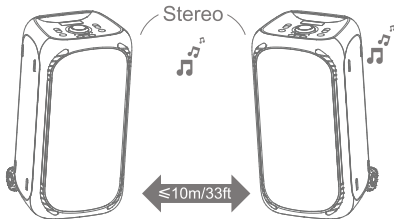


Wired Use? Yes! 03

1. Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source.
2. In AUX mode, ⏮ ⏭ ⏭ can't be controlled on speaker, you can ONLY control them by your audio source device.

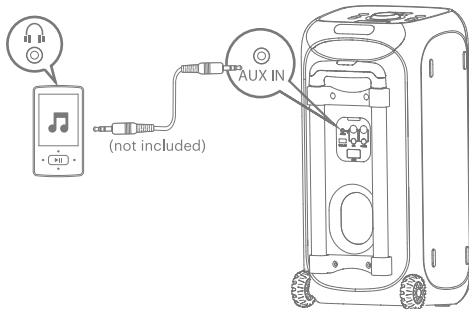


Listen to Your Favorite Radio Stations — 04

1. Press  to select FM mode.
2. Press  or  to scan and select FM stations channel by channel.
3. Press & hold  or  to seek (jump to the next available station).
4. In FM mode, press and hold  to assign a preset number for the current station, and press  to save, the LED screen will show "SAV" which means the station has been saved successfully. The preset number can be changed by pressing  and .
5. In FM mode, press  repeatedly to select a preset radio station.

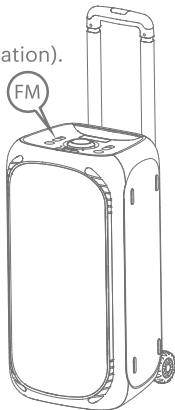


Want to Sing a Song? ————— 05

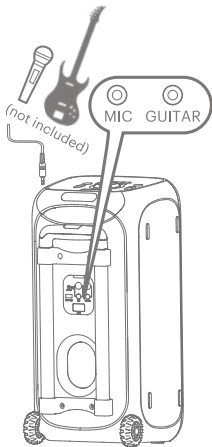

1. Connect your Microphone or Guitar to the MIC or GUITAR port.
2. Play Guitar through the speaker.
3. Singing through Microphone when music playing in Bluetooth/ AUX/FM mode.
4. Adjust the Microphone or Guitar volume through MIC or GUITAR knob.

Want More Lighting Effects? _____ 06

1. Press & hold ☀ to turn on/off the party light.
2. Quick press ☀ to switch between 6 different multicolor party lights.
3. Quick press ☀ x 2 to turn on/off the strobe light.
4. Press 🌅 to turn on/off the wall light.

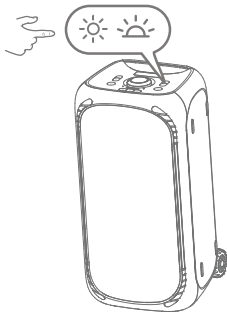


Charge Your Party Speaker _____ 07

The battery icon will flash when charging, it will remain solid white once fully charged.

Tips:

- Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place.
- Recommend to charge it at least one time for every 6 months, in order to keep the battery performing well. A prolonged empty battery may result in fewer hours of usage between charges.
- Always keep the charging port dry before connecting to AC power.

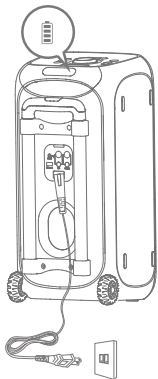

But Wait ... There's More!

- USB-A charging port with emergency power can charge your other smart devices (5V==2.1A output), when this Party Speaker is powered on.
- Do not sit on the speaker to avoid possible damages.
- To ensure it is waterproof, always close the protective cover securely.

