

 
 
porodo | CHOOSE THE BEST







**4G / LTE HOME & OUTDOOR
PORTABLE ROUTER**

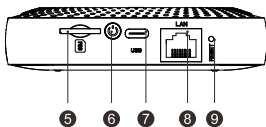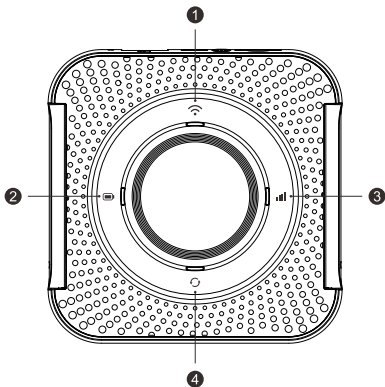SKU:PD-4GCPMF-BK






Product display



Product display

Indicator light	Implication	Status	Description
1 	Wi-Fi indicator	Green always on	Wi-Fi is on.
		Off	Wi-Fi is abnormal or off.
		Flashing green	User connected.
2 	Battery message indicator	Flashing green	Battery is Charging.
		Green always on	Battery power is more than 30% or full charge.
		Red always on	Battery power is less than or equal to 30%
3 	Signal Indicator	Off	No network.
		Green always on	Data connection is open.
		Flashing green	Data connection is closed.
4 	System Indicator	Green always on	Device power on, light is on.

Interface Key Description

Interface	Description	Function
5 	SIM card slot	Using Micro Sim.
6 	Power button	In the shutdown state, press and hold 10S to start the device.
		In the power on state, press and hold 3S to release, and the device will shut down.
7 	USB interface	Device power supply/battery charging interface.
		When the external power supply is connected, the device starts automatically.
8 	LAN interface	Rj45 port. Connect to LAN to connect to PC. The router is set to wired broadband mode or access to WAN, and is used as a WAN port.
9 	Reset hole	Insert and hold the pin for 3-5 seconds to reset the router to factory settings.


Working Environment

To ensure the router works properly, the recommended working environment of the router is as follows.

- a) Keep away from heat sources and keep ventilation.
- b) Place the router on a horizontal table.
- c) Place the router in a dust-free and dry environment.
- d) In thunderstorm, please remove the power supply and all cables from the router to avoid damage by lightning.


Installation Instructions

1. Insert the SIM card into the SIM slot in the direction marked by the silk screen.
2. Press and hold the switch key for 10 seconds, and then let go.
3. Use the mobile phone to search the Wi Fi signal sent by the device, and connect to the Wi Fi to experience the network.

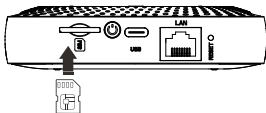

Connecting Devices

You can connect the router in the following ways:

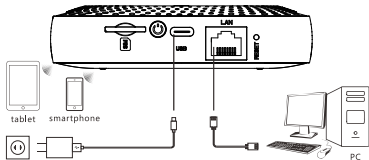

1. Wired connection

Before accessing the Web settings page, it is recommended that you set your computer to "Obtain an IP address automatically" and "Obtain DNS server addresses automatically".




2. Connect via Wi-Fi

Use your phone to search the wireless router's wireless network and connect to the network.

Default Wi-Fi name (SSID): 4G-WIFI-XXXX

Default Wi-Fi password (Key): 1234567890

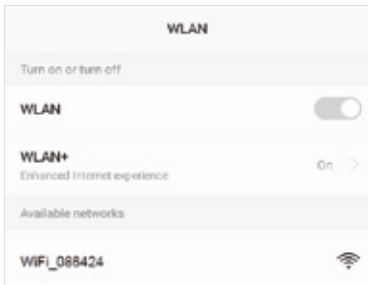





Device Login

1. Connect the Wi Fi signal transmitted by the device with a mobile phone or computer. See the device nameplate for details.

2. Open the browser (Google/Edge browser is recommended), enter the default IP address in the browser address bar, and enter the Web page. Enter the default password "admin" to enter the setting page.


3. After successful login, the display is as follows

Limited Service    

[Modify Login Password](#) [Logout](#) [English](#)

[SMS](#) [SSID](#) [Advanced Settings](#) [Quick Settings](#)


Connect Status



ON

↑ 5.1Kb/s
↓ 1.34Kb/s
00:00:00

Network Settings




Automatic >
Network Settings >
Wi-Fi Settings >

Connected routers

1 cable
0 wireless

Statistics



Used:
Not set, click settings >

Status Information

SIM Card Number	---
IMEI	869388013410185
RSRQ	15
SINR	-1
PCI	170
IMSI	460111166175691
Signal Strength	-84 dBm
Network Name(SSID)	4G-WIFI-57A1


[Detail information >](#)

Quick Setting

1. Wi-Fi Setting

Click "Set Wireless Intranet" to enter the Wi Fi setting page, where you can modify the SSID name, Wi Fi password, etc.

Wi-Fi Settings
Set up wireless so that your mobile phone or laptop could access network via 4

Main SSID	Wi-Fi Switch	<input checked="" type="radio"/> Enable	<input type="radio"/> Disable
Guest SSID	Multi SSID Switch	<input type="radio"/> Enable	<input checked="" type="radio"/> Disable
WPS	Main SSID		
Internet Wi-Fi	Network Name(SSID *)	<input type="text" value="4G-WIFI-67A1"/>	
Advanced Settings	Security Mode	<input checked="" type="checkbox"/> SSID Broadcast <input type="text" value="WPA-PSK/WPA2-PSK"/>	
WLAN MAC Filter	Pass Phrase *	<input type="text" value="*****"/> <input type="checkbox"/> Display Password Please input at least 8 characters 	
	Show on Icon	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	Max Station Number	<input type="text" value="32"/>	

[Apply](#)

1. APN Setting

Click "Set Internet Connection" and "APN Setting" to enter the APN configuration page, where you can modify the APN access point and other information.



Connection Mode

Network Selection

APN

APN

Current APN

CUCC

Mode

 Auto Manual

Profile

CUCC

PDP Type

IPv4v6

Profile Name *

CUCC

APN *

lgnet

Authentication

PAP

User Name

Password

Dial No.

 Hide Password

FAQ

1.Q: Can't open the router's login page on my browser?

A: Please check if your phone or computer is connected to the router and make sure the IP address "192.168.2.1" you entered is correct.

2.Q: How to reset the router to factory default settings?

A: Keep the router powered on, then press and hold the WPS/RST button for more than 5 seconds and then release it and wait for the router to reboot.

3.Q: How can I forget the login username and password of the router?

A: Reset the router to factory default settings. The user name and password will be restored to the default administrator password.

4.Q: How can I forget the Wi-Fi password of the router?

A: Reset the router to factory default settings. the Wi-Fi password will be restored to the default state.

Disclaimer / Caution

1) Please use the original power adapter, if the use of other adapters caused by the aftermarket bad problems, the company will not be responsible.

Power adapter specification: 12V $\overline{=}$ 1A

2) Avoid using this device near metal structures or equipment that emits electromagnetic waves, otherwise it will affect the signal reception.

3) This device is not waterproof, so please keep it dry and store it in a dry and cool environment.

4) Do not use this equipment after a drastic change in temperature. In this case, condensation may occur inside or outside the device. Please wait for a period of time until condensation disappears before using the equipment.

5) Please pick up and place the equipment carefully. Do not drop, bend or bump the equipment as this may cause irreparable damage to the equipment.

6) Do not disassemble the equipment by unprofessional persons. If you need repair, please go to the designated repair location for professional repair service.

7) Recommended use environment is 0~35°C and humidity is 5%~95%.

8) Only the original battery is allowed to be used to avoid equipment damage or explosion. (Note: replacement with the wrong type of battery will have the risk of explosion be sure to follow the instructions for disposalDispose of the used battery according to the instructions).

Warranty card

Thank you for purchasing our products, you will enjoy the following services when using the products:

1. Warranty services:

1) If the device has performance issues, but without any appearance damages. You can replace it with a new device within 7 days since you buy it.

2) Warranty period is 12 month from the date of purchase. During the warranty period, service centers will repair the device or replace parts of it if the device has a manufacture defect without any charges.

2. The following conditions are not covered under the terms of the warranty.

1) Warranty period expires.

2) The seal label is damaged, altered without permission or has no seal label.

3) Unauthorized disassembly or repair.

4) Man-made damage, resulting in product damage and deformation.

5) Damages results from abnormal environments with high-pressure, high temperature and high humidity.

6) Damaged by natural disasters such as lightning strikes, flooding, earthquakes, etc.

3. You can get our "Paid Repair" if your product not meet the conditions of our warranty services.