

porodo
LIFESTYLE




ELECTRIC
VEGETABLE SLICER
WITH MULTI FUNCTION PURPOSE

Model: PD-LSVEGC-WH


Product Features

1. One key electric cutting vegetables, save time and effort
2. large-diameter feeding port, without picking ingredients
3. Deluxe five blades, multi-functional use
4. Thin / Thick / Cheese shred, thin / flower slices, grated


Product list

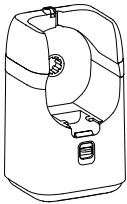


Main body

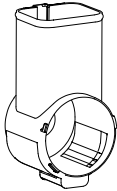

Feed port

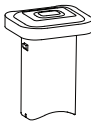

Small pusher

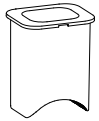

Large pusher



Blade holder



Outer cover of the feed port



Cheese blade*2



Flower slice blade*2



Thick shred blade*2



Thin shred blade*2




Slice blade*2


Initial Use and Maintenance

1. Please read the manual carefully for the first time, install the machine, turn on the machine first to check whether the working status of the machine is normal
2. Every time to use the machine, it is suggested to start the machine first, and then put the ingredients
3. Please unplug the machine from the power socket in time after use
4. After using the machine, it should be cleaned in time, the main body is prohibited to wash, and the rest of the components can be rinsed directly with water
5. Cleaning, use mild water effect is better, prohibit directly contact the blade on the blade holder to avoid injury
6. Do not use the research or corrosive cleaning agents to clean
7. Forbidden to disinfect the machine parts at high temperature
8. When the machine is working, do not press the ingredients heavily, it may lead to machine blocking or blade deformation
9. It is suggested that each replacement of ingredients, the rotating blade holder and blade cleaning, otherwise it will lead to unsatisfactory cutting effect.


Installation for Use

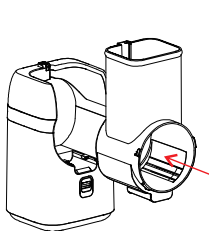


1. Vertically forward, insert into feed port

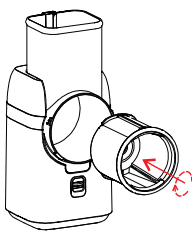


2. Insert the rotary blade vertically forward and rotate clockwise or counterclockwise to fix; please confirm whether the blade is installed correctly and in place before installation

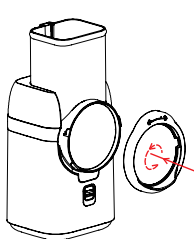


3. Insert vertically forward at an angle of 15° and rotate counterclockwise to tighten

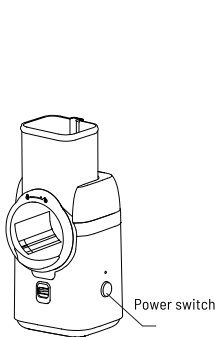

4. Press the power switch to start the machine

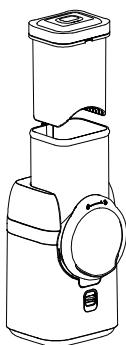


5. Put in the ingredients, insert the pusher, starting to process the ingredients

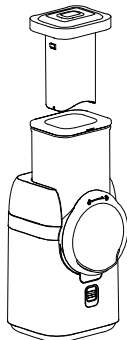


6. If the ingredients are smaller or longer, you can release the small pusher to process the ingredients

Blade removal and installation

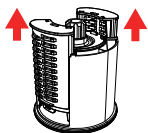

When removing, press the blade holder on the desktop and take out the blade upwards.

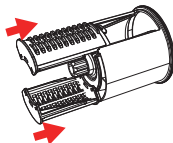


Installation: push the blade to the end along the slot.


Note:

1. Hands do not touch the blade edge to avoid injury.
2. When replacing the blade, must be replaced into the same group of blades


Disassembly method

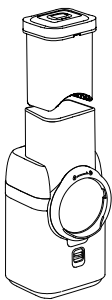


1. Remove the pusher vertically upward

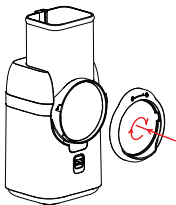


2. Turn clockwise and remove feed port outer cover vertically forward

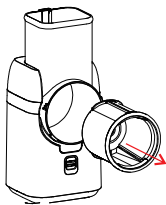

3. Grab the inside edge of the blade holder and pull out the blade holder vertically

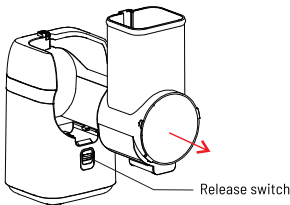

4. Press down on the main body release switch, take out the feed port vertically

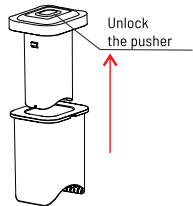

5. Press the pusher release key and remove the smaller pusher vertically upward

Materials of food contact accessory

Accessory		Material
Metal	Shred blades Flower slice blades	Stainless steel 06Cr19Ni10(SUS304)
	Slice blades	Stainless steel 420j2(SUS420)
	Cheese blades	Stainless steel 10Cr17(SUS430)
Plastic	Chute	AS
	Pusher Small pusher Blade holder	ABS
	Blade holder	PP

This series of products contain or above food contact materials, some models may not contain individual materials, the actual products shall prevail!

Warm tips

1. When the machine is turned on, the power indicator light is blue.
2. When using large diameters feed port, do not put in too much food ingredient, so that the pusher cannot be inserted.
3. When replacing the blade, hand should avoid the edge of the blade to replace, because the blade is sharp and may cause injury.
4. Make sure all accessories are in place before you start processing the food ingredient.
5. The machine is blocked, the machine will rotate 2-3 circles counterclockwise, it is not a fault
6. After use, please unplug from the power socket in time
7. If the machine is not used for a long time, please clean and dry it and put it away

Attentions

1. Do not place the product in microwave oven, dishwasher or refrigerator to avoid product damage.
2. Do not touch the rotating parts or disassemble when machine when it is in working.
3. After 30 minutes of continuous work, it is recommended to rest for an hour before use.
4. This machine cannot be used to process hard ingredients, such as frozen ingredients and similar ingredients
5. The blade is very sharp. Do not touch the blade directly to avoid injury
6. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with appliance.
7. The machine should be placed on a flat countertop, not close to the heat source, not placed on other electrical appliances, and should be guarded during use to avoid accidents
8. Before the machine is finished or cleaned, the plug should be unplugged from the power socket in time to avoid electric shock
9. If the power cord is damaged, in order to avoid danger, it must be replaced by manufacturing or other maintenance departments or similar professionals, do not disassemble and repair, so as to avoid danger
10. When replacing the blade, hand should avoid the edge of the blade to replace, because the blade is sharp and may cause injury.
11. This product is intended to household and indoor use only.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. They shall state that care shall be taken when handling the sharp cutting blades and during cleaning.
14. Always disconnect the appliances from the supply if it is left unattended and before assembling, disassembling or cleaning.

Product parameter

Product model: PD-LSVEGC-WH

Rated voltage: 220-240V

Rated power: 80W

Product weight: 1850g

Rated frequency: 50-60Hz

Product size: 139*145*325mm



Fault and Treatment

If you experience any of the following fault during the use of the machine, please check and deal with them according to the following table.		
Phenomenon	Rreason	Treatment method
Not working	1. The equipment is not assembled 2. The power supply is not connected	1. Assemble the equipment according to the manual 2. Connect to the 220V power supply
Suddenly stopped in operation	1. Taking too long to process ingredients 2. Check whether the power cable is loose 3. The food ingredients are too hard	1. Clean food residue in time 2. Reinsert the power cable 3. Remove harder food
Abnormal noise	1. Accessories are not properly installed 2. The machine is placed in an inclined position for use 3. loud noises when cutting food ingredients	1. Stop the machine and check whether the accessories are installed correctly and in place 2. Please put the machine on a horizontal surface 3. Confirm whether the machine is properly assembled. If the assembly problem is eliminated stop using it

The time of food processing

Blade type	Types of ingredients	Quantity of ingredients handled per session	Single handling time of ingredients
Cheese blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Flower slice blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Thick shred blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Thin shred blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min
Slice blade	Potatoes, carrots, radishes, cucumbers, sweet potatoes	≤1kg	≤2min