

PORTABLE HANDHELD
SUPER DUSTER
WITH VACUUM FUNCTION



USER MANUAL

MODEL: PD-PARDS-BK

Schematic



① Blow nozzle

③ Swimming ring blow nozzle

⑤ Vacuum bag nozzle

② Brush blow nozzle

④ Air bed blow nozzle

⑥ Air bed exhaust nozzle

Parameters

Product model	AD20
Input	5V= 3A
Battery capacity	2500mAh*3pcs
Working time	1 st gear: 30 mins 2 nd gear: 20 mins 3 rd gear: 15 mins
Material	ABS
Charging time	2 hours

Accessories	Quantity
Air duster	1
Type-C charging cable	1
User manual	1
Blow nozzle	1
Brush blow nozzle	1
Air bed blow nozzle	1
Air bed exhaust nozzle	1
Swimming ring blow nozzle	1
Vacuum bag nozzle	1
Polyester bag	1

Instructions Details

Firstly, take the AD20 out of the box.
Then, use up the battery for the first use.
Finally, charge it with type-C cable.

Short press the upper key to turn on or turn off the light

1. Long press the below key, and it will start to work and defaults to the first gear.
2. Press the below key once to switch to the second gear.
3. Press the below key again to switch the third gear, and then press it again to close the gear.
4. Long press the below key to turn it off in any gear.

Indicator lights in charging

If air duster is in charging, the gears indicator flashes blue.
If air duster is in the fully charged, then 4 lights of the battery indicator are in steady blue.


Battery indicator

- 4 lights always on, the battery percentage is about 100%;
- 3 lights always on, the battery percentage is about 75%;
- 2 lights always on, the battery percentage is about 50%;
- 1 light always on, the battery percentage is about 25%;
- 4 lights flashing, the battery is in low power status, and it might be shut down at any time.

Gear light indicator

1. Shift operation and gear light instructions (the hole above) The default is the 1st gear speed when starting up, then Press the gear button to switch to the 2nd gear speed,
2. Press the gear button again to switch the 3rd gear speed.
3. The gear light flashes for 0.3s, indicating the 3rd gear wind speed.
4. The gear light flashes for 0.7s, indicating the 2nd gear wind speed.
5. The gear light flashes for 1.5s, indicating the 1st gear wind speed.
(The machine does not work while charging.)

How to use air duster

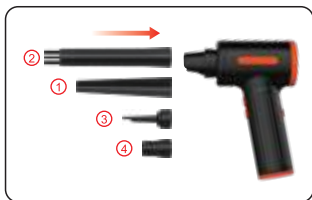

1. Install the blow nozzle on the head of air duster.



2. Clean the dust of keyboard.



3. Blow the fire more vigorously while camping.



4. The inflatable part is equipped with an inflatable nozzle, which can inflate the swimming ring & yoga ball.



5. The inflatable part is equipped with an inflator nozzle, which can inflate the air bed.

How to use vacuum



1. The vacuum bag nozzle could vacuum the vacuum bag.



2. The air bed exhaust nozzle could vacuum the air bed.

Warranty Policy

In order to provide better service & shopping experience for you. Please purchase the goods through legal channels. We will provide 12-month warranty. (The warranty don't include man-made damage, disassemble burning, water ingress, breakage etc.)