




PDX535

ACTION WEBCAM

WITH TOUCH MUTE & PRIVACY COVER


OVERVIEW

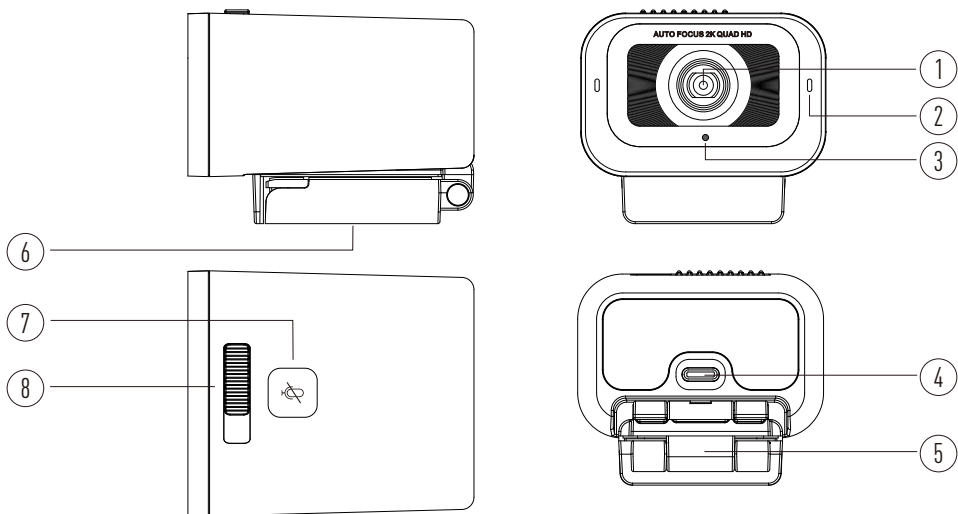


1. Lens	2. Microphone	3. Signal indicator
4. Type C port	5. Mountbracket	6. 1/4 " Tripod nut
7. Mute key	8. Privacy cover slide nob	

MOUNT THE WEBCAM

- 1. Rotate the mount bracket and place the webcam on the computer monitor.
- 2. You also can mount the webcam to a tripod as you need.

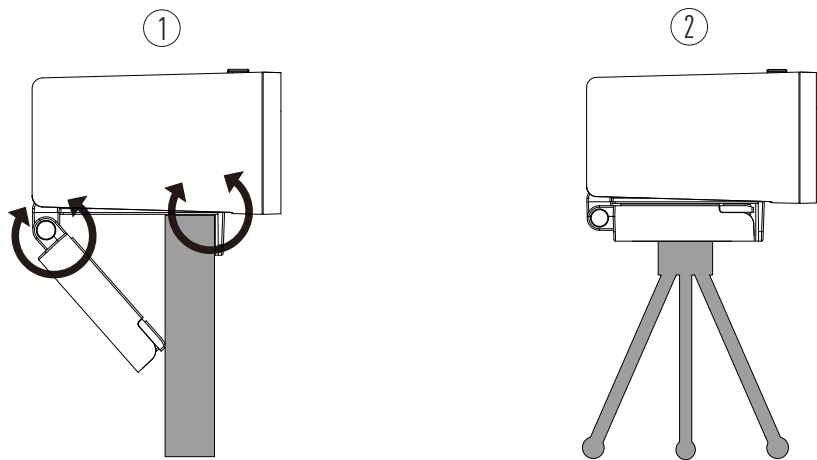

OPERATE THE WEBCAM

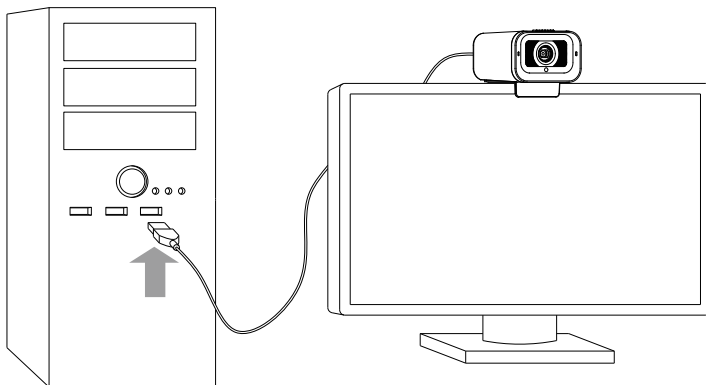

- Plug the webcam into USB socket of PC or TV STB.
- Wait about one minute, webcam will install automatically.
- When video calling connect, the signal indicator will be turn on.
- When touch the mute key, video will pause and voice mute. indicator will be blink.touch again to recover.
- If not use for a long time, slide the privacy cover knob to close.

GETTING START WITH VIDEO CALLING

To take advantage of video calling, both you and the person you call must install video-calling application, such as Skype, Yahoo! @Messenger, Windows Live@ Messenger or Gmail.

As well as a USB camera and video calling application, both callers need;

- A computer with speaker(or a headset) and a microphone (the webcam has built-in microphone);
- A broadband Internet connection(e.g., DSL, T1, or cable);
- Please check your preferred video calling application requirements, (requirements may vary between different applications, but usually a minimum of 2Mbps upload speed is required);

QUESTIONS AND ANSWERS

Q: How do I know if my camera is recognized by the operating system?

A: Connect the camera in any USB2.0/3.0 port. Once the camera is connected, it takes a few moments before the camera is recognized. To ensure the camera has installed correctly, check the following: Under Control Panel > System and Security > System > Device Manager

Q: How do I know if my video calling application is using my webcam?

A: All video applications have an option setting to review the audio and video device. Using the video application, review the followings:

- The Audio selection to ensure the USB2.0 camera microphone is selected. If not, change the selection to USB2.0 camera.
- The video selection to ensure the USB2.0 is selected. If not, change the selection to the USB 2.0 camera.

For more information,
please contact our support team:

support@porodo.net