

porodo | CHOOSE THE BEST

USER MANUAL

6+
AGES



KIDS TALK WALKIE TALKIE

Please read the instruction carefully before using the product

Model: PD-WKTKV2-WH

In the process of compiling this manual, we strive for the highest accuracy and completeness of the content, but Our company will not assume any responsibility for possible errors and omissions.



Our company reserves the right to change product design and specifications. Due to the continuous development of technology, product design and specifications are subject to be changed without notice.



User safety information

please read the following safety information for your safe and efficient use:

1. Please turn off the walkie-talkie before entering the flammable and explosive environment.
2. Do not replace or charge the battery in a flammable and explosive environment.
3. Do not use the walkie-talkie with a damaged antenna. The damaged antenna may cause slight burns if it touches the skin.
4. The maintenance work of the walkie-talkie can only be carried out by professional and technical personnel, please do not disassemble or assemble it by yourself.
5. In order to avoid problems caused by electromagnetic interference or electromagnetic compatibility, please turn off the walkie-talkie in the place where the "Please turn off the walkie-talkie" sign is affixed.
6. This walkie-talkie does not have full waterproof performance, please keep it dry.
7. Do not expose the walkie-talkie to direct sunlight for a long time or put it near a heating device.
8. When the walkie-talkie is transmitting, keep the walkie-talkie in a vertical position and speak close to the microphone. If you wear the walkie-talkie on your body, please make sure that the antenna is at least about 5 cm away from your body when the walkie-talkie is transmitting.


FUNCTION DESCRIPTION

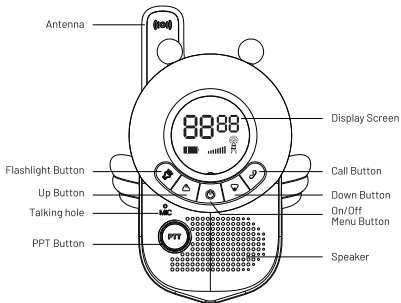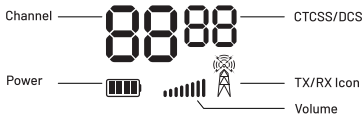

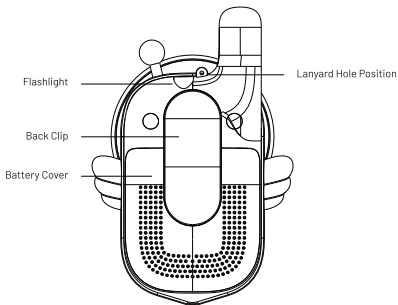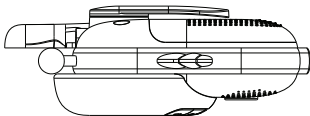


INTRODUCTORY GUIDE


1. Rotate the back clip to the upper right

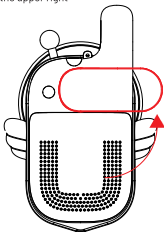


2. Push down the battery cover

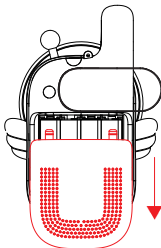

3. Insert 4 AAA batteries, close the battery cover and press down

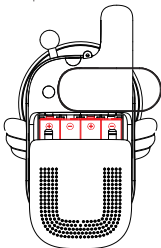

4. Rotate the back clip to the lower left

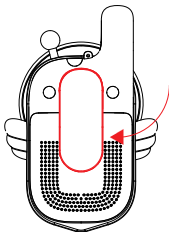

Turn on/off the walkie-talkie

Insert the battery, press the turn on button for 4-3 second, the walkie talkie will beep once and the display is on, indicating normal boot. Press the turn off button for 4-3 seconds, the walkie-talkie will beep once and turn off the screen display, indicating that it has been shut down normally.

Power display

The battery icon on the screen displays the battery level, from full to empty. A periodic "beep" sound or the entire screen display has dimmed, indicating that the battery is low and the battery needs to be replaced or recharged.

Set volume

In the power-on state, short press the ▲ button to increase the volume, and short press the ▼ button to decrease the volume. The volume is divided into 8-1 levels, which are marked by a vertical line icon on the display.

Set up channel

Turn on the walkie-talkie, short press the menu button once to enter the channel setting, the channel number on the screen starts to flash; use the A/V button to select the channel; after setting, press the PTT button to save the setting.

Set group code/CTCSS

Turn on walkie-talkie, short press the menu button twice to enter the group code setting, the channel numbers on the screen start to flash; use the ▼/▲ button to select the group code; after setting, press the PTT button to save the setting

Turn on/off flashlight

In the power-on state, short press the flashlight button to turn on the flashlight, and short press the flashlight button again to turn off the flashlight.

Set call tone

Send ringtone function, send different ringtones to other walkie-talkies, short press the Call tone button to send ringtones; there are 10-1 call tones to choose from. Turn on the walkie-talkie, short press the menu key three times to enter the Call tone mode setting; use the A/V buttons to select; after setting, press the PTT button to save the setting.

Voice signal transmission/reception

Before communication, set the channel and group code of the multiple walkie-talkies to be communicated to be consistent. Long press the PTT button, speak and send a voice signal; Release the PTT button to receive the voice signal.

Product Parameter

Frequency: 409.7500409.9875 MHz

RF output power: -0.5W

Working voltage: 4.3V-6V

Communication distance: 3-1 kilometers

(depending on geographical location and ring mirror)

Encryption: CTCSS \DCS

Number of channels (simplex): 20

Frequency stability: ± 5 ppm

Precautions :

1. Regularly check whether the casing and other parts are damaged, and if any damage is found, stop using it until the repair is complete;
2. If there are any obvious damaged parts, please stop using it and keep it away from children. Do not let children play with disintegrated, damaged or deformed toys, so as to avoid accidental swallowing, suffocation and other dangers.
3. Do not store in a place near fire, high temperature and humidity;
4. When the machine is not used for a long time, please remove the battery and place it properly.

Battery use and safety precautions :

1. The walkie-talkie does not have the charging function, and the battery cannot be charged directly into the walkie-talkie;
2. It can only be charged by rechargeable batteries in a dedicated battery charger;
3. Pay attention to the positive and negative positions when installing the battery.

Maintenance :

Do not immerse in water or place in a humid environment; Pay attention to cleaning and dustproof, and wipe the surface stains with a dry cloth.