

porodo
LIFESTYLE



GOLDEN BROWN **TOASTER**

With Defrost Function

Model: PD-LSTST-BK

including the following:

Please read all instructions carefully.

1. Make sure that your outlet voltage matches the voltage that is written on the product's label.
2. Do not touch the toaster's hot surface. Use handles or knobs only.
3. To protect against electrical shock, avoid putting the cord, plug, or any part of the toaster under water or any liquid.
5. Extra attention must be paid when the toaster is used by or near children.
6. Unplug the toaster from its power supply when it is not in use or before cleaning
7. Do not use the appliance with a damaged cord or plug, or when abnormal function is suspected. If its main cord is damaged, it must be replaced by the manufacturer, or a nearest service agent or a qualified technician.
8. Do not let the cord hang over the edge of the table or the counter, or touch the hot surface.
9. Do not place it on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for purposes other than what it is intended by the manufacturer.
11. Oversized-foods, metal foil packages or utensils should not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, and they must be closely monitored.
13. The use of accessory attachments are not recommended by the appliance manufacturer and may cause injuries both to the appliance and to the user.
14. Do not try to remove food from the toaster while it is still hot. This might result in burns.
15. Take the breads out carefully after toasting
16. This appliance has been incorporated with a grounded plug. Please ensure your household outlet in your house is Earthed.
17. The appliance does not have an external timer or a separate remote-control system.
18. This appliance should not be used by children aged 7 years or younger.
19. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge should not use the appliance unless they are closely supervised or given instruction concerning how to use the appliance safely and the users must also be informed about the hazards involved.

Children should not play with the appliance. Cleaning and maintenance must not be made by children unless they are older than 8 and supervised

20. Keep the appliance and its cord out of the reach of children younger than 8 years.

21. Warning: if the appliance is used to toast small bread slices (less than 85mm length), the user must pay attention to the potential risk of burning when taking the breads out.

22. Do not use the appliance outdoors.

23. This appliance is intended to be used in the household or similar applications such as: staff kitchen areas in shops, offices and other working environments such as;


- farm houses;

- by clients in hotels, motels and other residential type environments;

- bed and breakfast type environments.

24. Keep these instructions.

PRODUCT INTRODUCTIONS FOR THE FIRST TIME USE

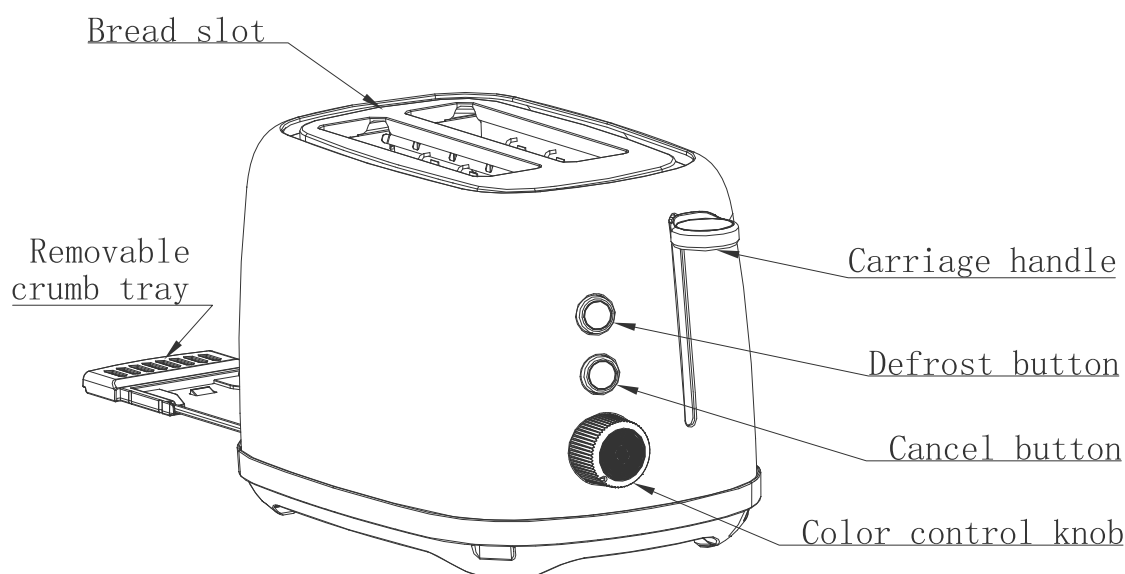

As there are manufacturing residues or oil remains in the toaster or on the heating elements, the appliance starts to smell for the first time. It is normal and will not occur after several times of use.

Before toasting the first slice of bread it is strongly suggested to operate the appliance by following the instructions written below, except without bread.

OPERATION:

1. Put the bread slice into the bread slot, two slices can be inserted in each round of use.

Only regular slices can be placed into the bread slot.

Note: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the power supply outlet.

3. Set the colour control knob to your desired colour. There is a 6-position level, the lowest is white and the highest is purple. The bread slice can be toasted to golden colour at the level 3

Note: 1) during toasting, you can check the colour of the bread. If it is satisfactory, you can press the cancel button to stop the toaster.

4. Press carriage handle down vertically until it locks in position, the indicator of **Cancel** button turns on, and toasting begins. Once the bread is toasted, to the desired selected colour, the carriage handle will automatically jump up, and you can remove the bread easily.

Note: The carriage handle can be pressed down only when the appliance is connected to the power supply.

5. During the toasting process, you can check the toasting colour. If you are satisfied with the colour, you can interrupt the toasting process by pressing the Cancel button at any time. However, do not lift the carriage handle to stop the device.

6. If the bread has been taken out from the refrigerator. Set the colour control knob to your preferred colour. Press the carriage handle down vertically until it is positioned in place, then press the **DEFROST** button and the indicator of **DEFROST** will turn on. In this mode it will be toasted to your desired colour by considering defrosting time as well.

7. If you want to **REHEAT** the cold toasted bread. Turn the knob to the heating position, Press the carriage handle down vertically until it is positioned in place, in this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end the reheating process.

CAUTION:

1. Remove all protective wrappings before using.

2. If the toaster starts to smoke, Press **Cancel** to stop toasting immediately.

3. Avoid toasting the food with extremely runny ingredients such as butter.

4. Never try to remove bread that is stuck in the slots before unplugging the toaster from the electrical outlet first. Make sure you do not damage the internal mechanism or heating elements when removing the stuck bread.

5. The bread slot is only suitable for toasting regular bread slices, for example irregular bread or round bread, you can toast them on the toast rack.
6. In order to achieve uniform colour we suggest waiting at least 30s between each toasting so that colour control can reset automatically.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning
2. Wipe the outside with soft dry cloth after the toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of the toaster by the crumb tray handle and empty it. If the toaster is used frequently, the bread crumbs pile up quickly and should be removed at least once a week.

Make sure the crumb tray is completely closed before using the toaster again.

4. When the toaster is not in use, the power cord may be wound under the bottom of the toaster.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand over the non-working electrical equipments to
an appropriate waste disposal

