

PORODO



Porodo

**10000mAh Power Bank with
Built-In Type-C and Lightning**

SKU: PD-PBFCH055

Table of Contents

Indicator Guide	2
Specifications	2
Schematic View	2
Instructions for Use	3
Charging Instructions	3
Safety Warnings	3
Troubleshooting	4
Disposal	5
Warranty	6
Contact Us	6

Indicator Guide


- 1. The display lamp shows the current power level.
- 2. The power digital tube also indicates the current power. When the power is low, the button has no output, and the digital tube turns off.
- 3. During power bank discharge, the display lamp shows the current power level. When the power is low, the output button is inactive, and the digital tube turns off.

Specifications

Battery Capacity	10000mAh/3.85V/38.5Wh
Rated Capacity	5300mAh
Type-C Input	5V/3A 9V/2A 12V/1.5A 18W (Max)
Type-C Output	5V/3A 9V/2.22A 12V/1.67A 20W (Max)
USB-A Output	5V/3A 9V/2A 10V/2.25A 12V/1.5A 22.5W (Max)
Type-C Built-in Cable Output	5V/3A 9V/2A 10V/2.25A 12V/1.5A 22.5W (Max)
Lightning Built-in Cable Output	5V/2.4A
Total Output	5V/3A (Max)
Standard	GB 4943.1-2022 ,GB 31241-2022

Schematic View

- 1. Display Screen
- 2. Type-C Cable Input/Output
- 3. Lightning Cable
- 4. USB-A Output
- 5. Type-C Output
- 6. Switch Button

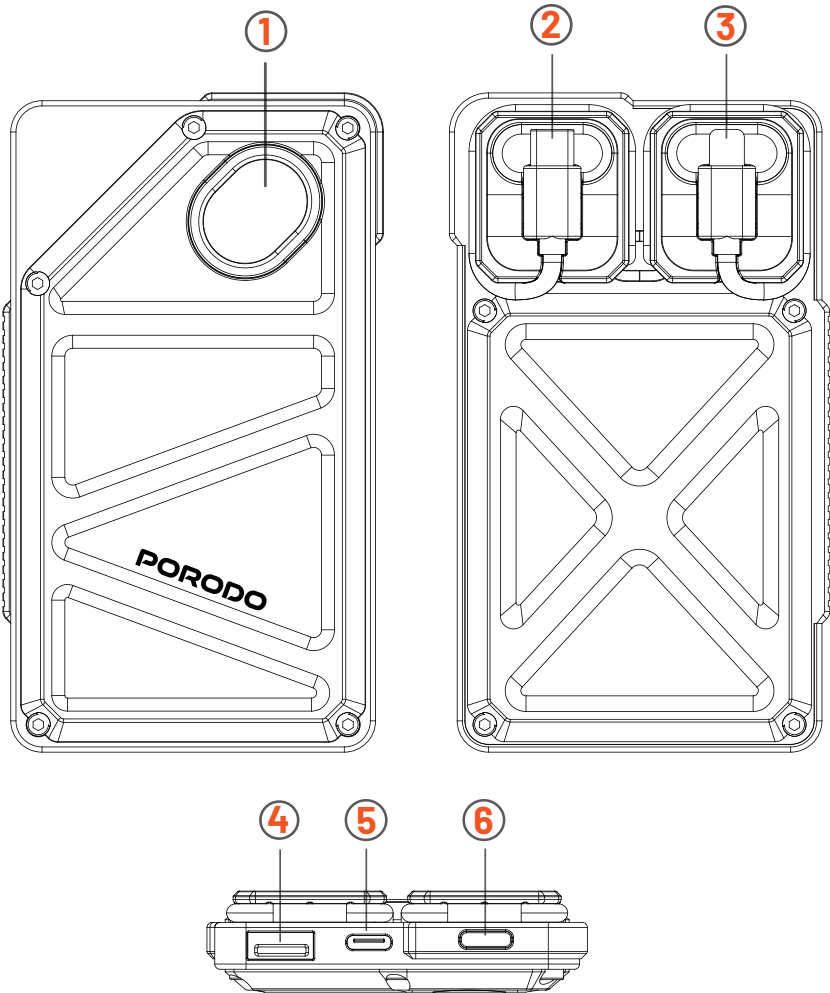

Instructions for Use

Charging the Power Bank: When the power bank's battery is low, recharge it using an appropriate charging cable via the USB port, connected to a computer, AC adapter, or car charger.

Charging Other Devices: Use a USB cable or the built-in cables to charge various digital devices using the power bank.

Important Note:

1. Do not hang the power bank by the charging cable while charging your phone.
2. Always use a USB cable compatible with the power bank.
3. The power bank must be supervised when in operation or charging. Do not leave the product unattended.

Charging Instructions

Power Status While Charging (Input): When charging, the digital tube flashes to display the current power status. Once fully charged, it shows "100," and the light remains on.

Power Status While Charging Other Devices (Output): During discharge, the digital tube remains on, showing the current battery percentage. When the power falls below 10 %, the digital tube flashes at a rate of 1Hz to indicate a low battery. If the battery voltage drops below 3V, the power bank will automatically shut off.

Safety Warnings

1. The product should be placed on a desktop during use. If in contact with the human body, limit contact time to less than 10 seconds.
2. The working temperature range is 0°C to 35°C. It is recommended not to use the product in environments above 35°C or below 0°C.
3. Do not place the product into fire or water. Avoid scrubbing with a damp cloth to prevent leakage, short circuits, or other malfunctions.
4. Do not cover the product with paper or any other objects, as this may hinder heat dissipation and cooling.
5. Do not leave the product unattended while in use.

6. Do not attempt to disassemble the device. This product does not contain any components that can be disassembled or maintained by users.
7. Avoid dropping, shaking, knocking, impacting, or squeezing the product.
8. Do not short-circuit the product's anode and cathode to avoid fire hazards.
9. Keep the product out of the reach of children.
10. Ensure the output voltage of the charger matches the product's specifications before use. Using an incompatible charger may cause overload, resulting in smoke, fire, or other dangers.
11. Unplug the charger after the product is fully charged.
12. If you notice any abnormal situations such as odor, heat, discoloration, deformation, or leakage, deactivate the product immediately.
13. When using a power adapter, ensure it is a matching, certified branded adapter that meets standard requirements and is compatible with the device's specifications.
14. If the battery is improperly replaced, there is a risk of explosion.
15. Batteries must not be exposed to direct sunlight, fire, or similar overheating environments.
16. Do NOT use the product after it has been exposed to or immersed in water.
17. Keep out of the reach of children, infants, and pets.
18. **Warning:** If there is a peculiar smell, overheating, discoloration, deformation, leakage, or any other abnormal condition during use, stop using the product immediately. If the skin comes into contact with battery liquid, wash it immediately with water and seek medical attention promptly.

Troubleshooting

Problem	Possible Cause	Solutions
The indicators cannot display a full charge status after a long time of charging the product.	1. The charging time is not enough. 2. The adapter or product may be malfunctioning.	1. Fully charge the product. 2. Contact a service center.
The remaining power of the product cannot be detected.	1. The product has no remaining power. 2. The power button or indicator may be malfunctioning. 3. There could be a power failure in the product.	1. Fully charge the product. 2. Contact a service center.

The product cannot charge other devices.	1. The product has low power. 2. There is no power transmission in the USB cable or adapter. 3. The wrong adapter may have been chosen. 4. The product's power management system is prohibiting the device from charging.	1. Fully charge the product. 2. Replace the USB cable or adapter. 3. Look for a proper connector that suits the product's interfaces. Note: The product may be incompatible with the device.
The product can charge other devices but cannot fully charge them.	The battery of the product has depleted.	Charge the product.
When charging other devices with remaining power, the product suddenly stops working or fails to display any power.	An external short circuit or overload of the product leads to an automatic shutdown for self-protection.	Charge to reactivate the product.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**