

PORODO
LIFESTYLE



Porodo Lifestyle
Blend and Sip Portable Blender

SKU: PD-LFST068

Table of Contents

Overview	2
Precautions	2
Instructions for Use	4
Specifications	5
Schematic View	6
Cleaning Instructions	6
Troubleshooting	7
Disposal	8
Warranty	8
Contact Us	8

Overview

The Porodo Blend and Sip Portable Blender allows you to extract all the nutrients from fruit directly into your cup, enabling you to enjoy delicious and healthy juice daily, thanks to innovative technology. Its fully integrated design occupies less space and enhances the juicing effect.

Precautions

In order to prevent misuse, please read the instructions carefully.

- 1.** This product features a battery-operated DC motor. It must be charged using a 5V=2.5A output and an adapter that complies with the GB 4706.1-2005 standard.
- 2.** Please use the provided USB power cord to fully charge the product before initial use, which should take between 2.5 hours.
- 3.** Ensure that all parts that come into contact with food are thoroughly cleaned and dried before use.
- 4.** Ensure the product is off and the mixing blade has completely stopped before turning it on.
- 5. Warning:** When cleaning the product, make sure the power switch is off and the silicone cap at the charging port is secured.
- 6.** Avoid washing the motor unit in water to prevent moisture from damaging the electronic components.
- 7.** Do not operate the juicer more than five times in succession to prevent overheating and potential damage to the electronic components, which can reduce the product's lifespan.
- 8.** This product includes overload protection. If the blade jams due to large food pieces, the device will shut down to protect itself, displaying an E1 error on the screen. It can be restarted after clearing the obstruction.
- 9.** Do not sterilize any parts of this product with hot water or in a microwave oven at temperatures exceeding 60°C to avoid deformation and damage.
- 10.** Do not place the main parts of the product in the dishwasher or other cleaning equipment, and ensure no water enters the main engine.
- 11.** Avoid using steel wool, abrasive cleaners, or corrosive liquids to clean the product.

- 12.** This product is designed for juicing and is not suitable for mincing meat, grinding nuts, or processing bean products.
- 13.** Do not turn the product upside down or operate it while the straw is inserted into the main engine or if the silicone plug at the water port is not securely fastened.
- 14.** Always disconnect the power supply of the mixer before assembly, disassembly, or cleaning if unattended. Ensure children do not use the mixer unsupervised.
- 15.** Exercise caution when removing the mixing blade, cleaning the main machine, and handling the mixing cup.
- 16.** Turn off the power switch and disconnect the power before replacing accessories or interacting with moving parts.
- 17.** This product contains a built-in lithium battery. Avoid placing it in high-temperature environments and do not dispose of it as general waste.
- 18.** Before discarding the appliance, use tools to remove the battery by prying open or destroying the shell. Once removed, place the battery in a designated battery waste bin for disposal by authorized personnel.
- 19.** Ensure the appliance is powered off before removing the battery.
- 20.** Dispose of the battery safely.
- 21.** This product is intended for home use only. Misuse of the appliance, such as improper assembly, overfilling, or using the appliance for purposes other than its intended use, may result in injury or damage. Always follow the operating instructions carefully.
- 22.** Before using the product for the first time, charge it fully and clean all parts that come into contact with food thoroughly. The product is equipped with double safety protection measures and will only enter standby mode when the cup body is rotated into the correct position on the body.
- 23.** To avoid damage to the electrical components, do not immerse the appliance in water.
- 24.** Clean the appliance with a damp cloth and mild detergent, ensuring that no water enters the electrical sections.
- 25.** Do Not Place in a Cabinet While in Use.
- 26.** Never place the ice coffee maker in a closed cabinet or enclosed space while it is in operation.

- 27.** Ensure that the appliance has adequate ventilation during use to prevent overheating and ensure safe operation.
- 28.** Do not operate the appliance with any parts removed or improperly assembled.
- 29.** Keep body parts away from moving parts, and avoid contact with surfaces during operation.
- 30.** Always turn off and unplug the appliance before cleaning, assembling, or disassembling.
- 31.** Keep out of reach of children, infants, pets. Ensure that the appliance is used only by responsible adults or under supervision.
- 32.** To maintain hygiene and prevent contamination, clean all surfaces that come into contact with food or liquids, such as the water reservoir, brewing chamber, and carafe, after each use. Use a soft cloth or sponge with warm water and mild detergent.
- 33.** Do not immerse the appliance in water or any other liquid to prevent electrical components from being damaged.
- 34.** Avoid abrasive cleaners or scouring pads, which could scratch or damage the surfaces.
- 35.** For a more thorough cleaning, refer to the detailed instructions in the manual. Regular cleaning will help ensure optimal performance and prevent contamination.
- 36.** Children should not clean the appliance without supervision. Ensure that the appliance is cleaned only by responsible adults.

Instructions for Use

Review the previous guidelines carefully.

- 1.** Wash the fruit and cut it into small pieces approximately 1.5×1.5 cm. Remove any hard seeds, thick skins, or hard shells first.
- 2.** Fill the cup with the cut fruit up to about 60% of its maximum capacity, then add water up to the maximum scale.
- 3.** Screw the host onto the cup until the screen displays 'PP', indicating that the host is properly attached.

Note: Ensure that the fruit and water do not exceed the maximum scale line on the cup to prevent overflow.


4. Double-click to start the product and invert it. The default operating time is 40 seconds.
5. Gently shake the product during operation for better mixing results. Press the button to check the battery level.
6. Once juicing is complete, the product will automatically enter standby mode.
7. Open the cover to the preset position to drink directly from the cup or use a straw.
8. If the product does not start and displays the 'Lo' symbol, insert the USB cable into the charging port, compatible with various 5V power sources.
9. The screen will show '100 %' when fully charged. It is advisable to charge the product while in the cup.
10. This product can also be charged using a power bank. A full charge takes about 2.5 hours and can produce up to 8 cups of fresh juice.

Specifications









Battery Capacity	x2 1500mAh
Input	5V/2.5A
Battery Voltage	DC 7.4V
Power	70W
Blades	Stainless Steel
Waterproof Rating	IPX6
Recharge Time	2.5H
Motor Speed	18000RPM
Single Working Time	40s
Mixing Capacity	500ML
Max Capacity	1L
Product Dimension	115×115×241mm

Schematic View

1. Cup Lid on Main Engine
2. Main Engine
3. Motor Mount
4. Sealing Ring of the Main Engine
5. Mixing Knife
6. Cup
7. Portable Cup Lid
8. Sealing Ring for Cup Lid

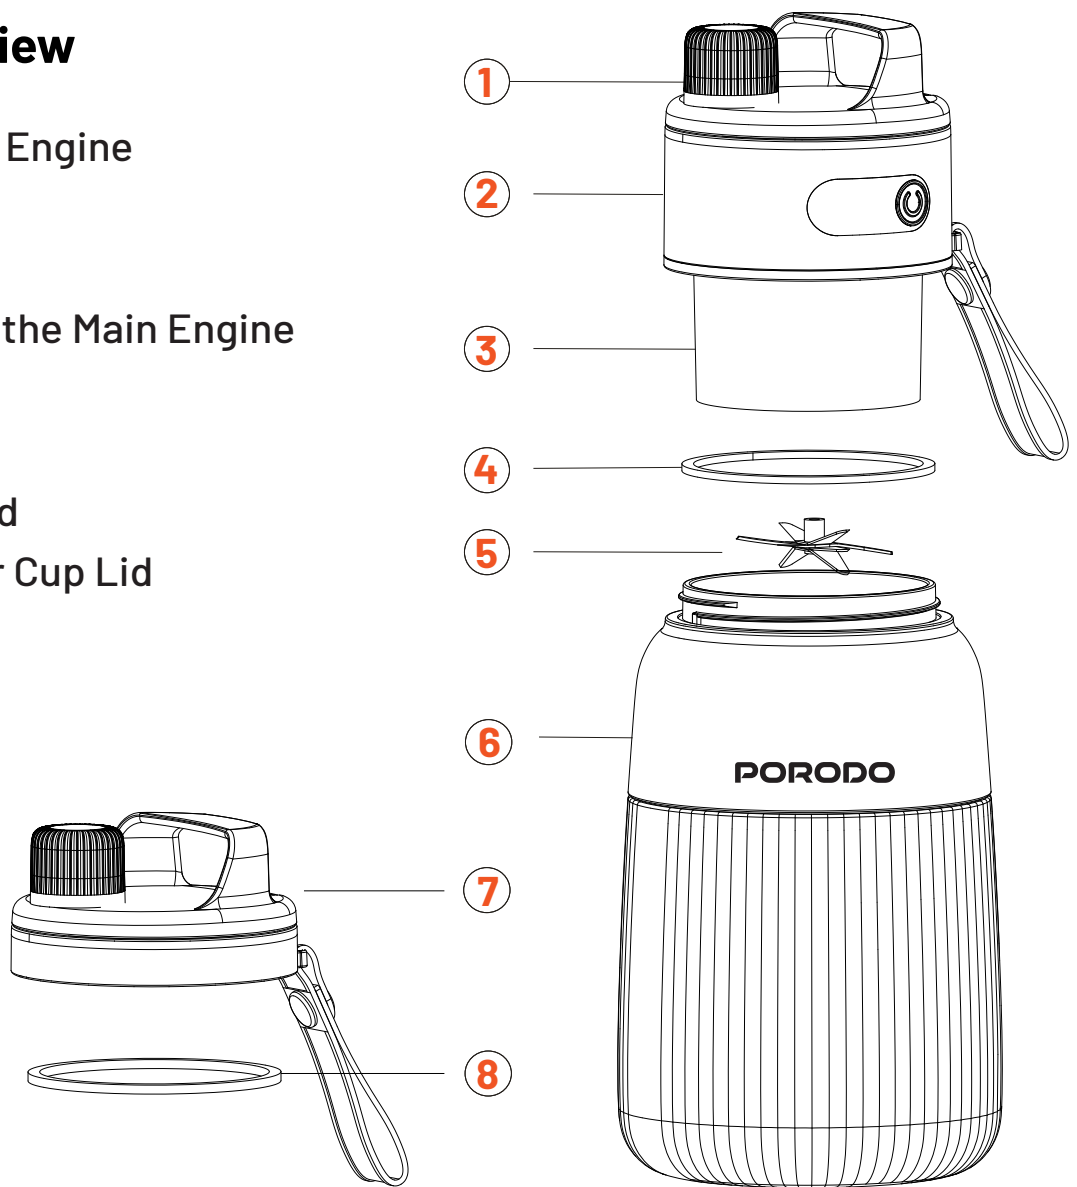

Operation Guide

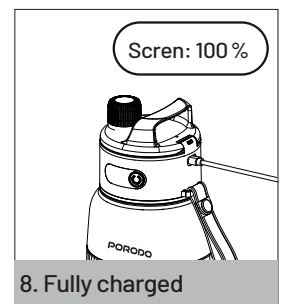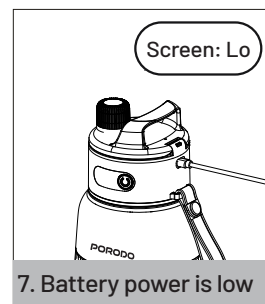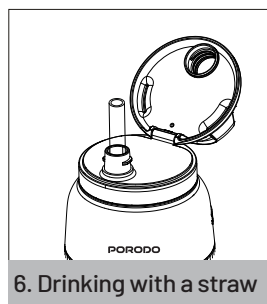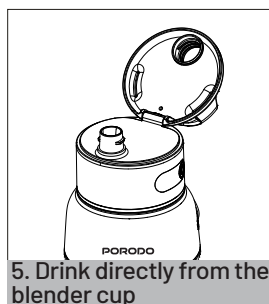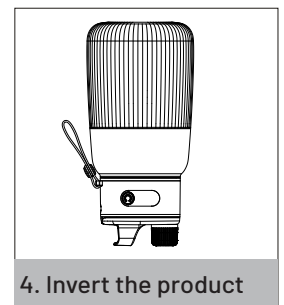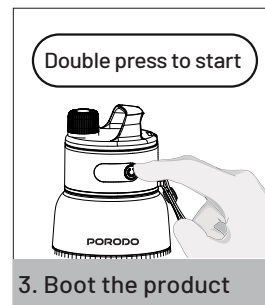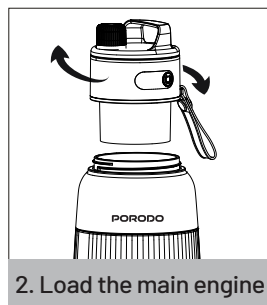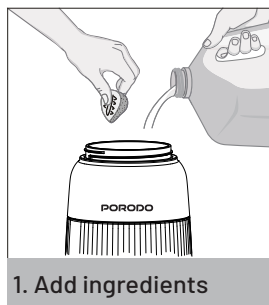


Cleaning Instructions

1. To ensure cleanliness and avoid contamination, regularly wash all parts that come into contact with food or beverages, such as the water tank, brew chamber, and carafe. Clean these areas after each use with a soft cloth or sponge, warm water, and gentle soap.
2. To safeguard the electrical components, do not submerge the appliance in water or any other liquids.
3. Do not use abrasive cleaners and scouring pads that might scratch or harm the surfaces.

Warning:

1. Do not immerse in water.
2. Do not wash in a dish washer.
3. Supervise children cleaning the appliance, and ensure that only responsible adults perform cleaning tasks.

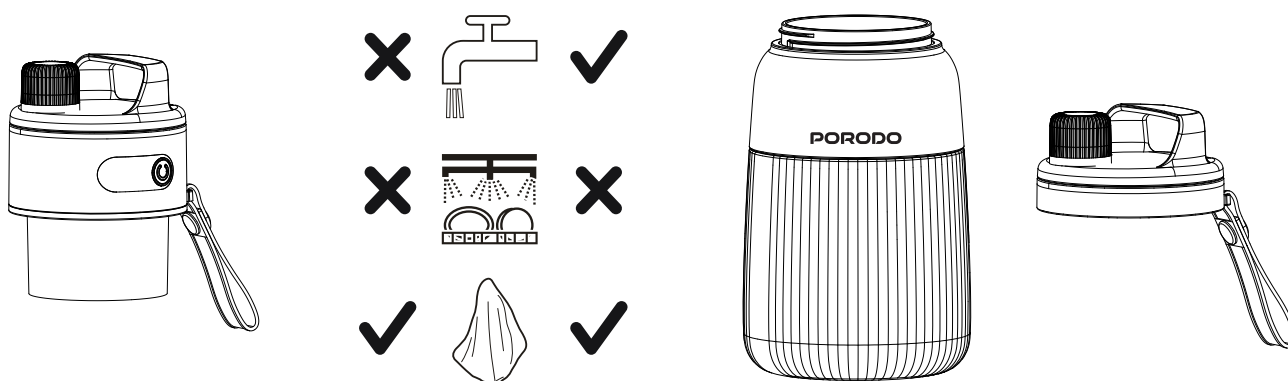

Troubleshooting

Problem	Possible Cause	Solution
Unable to turn on or stops during use. The screen displays the L0 symbol.	Insufficient electricity.	Please charge the device in time.
Shuts down during use; the screen displays the E1 symbol.	Motor is jammed.	Remove any stuck ingredients and restart.
Unable to turn on; the screen displays the E2 symbol.	Overheat protection activated due to five consecutive uses with intervals of less than 20 minutes between any two uses.	Restart the device after a 15-minute shutdown.
Unable to turn on; the screen displays the E0 symbol.	The cup is not screwed into the correct position.	Ensure the cup is properly screwed into place.
Water leakage.	The silicone ring is not properly assembled, or the cup body is not tightened adequately.	Check whether the silicone ring is correctly assembled and ensure the mixing cup is tightened securely.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**