

PORODO
LIFESTYLE



Porodo Lifestyle

T-Blade Compact Trimmer

SKU: PD-LFST110

Table of Contents

Product Overview	2
Safety Warnings	3
General Safety Instructions	3
Important Note	3
Oil Bottle	3
Instructions for Use	4
USB Charging	4
Cleaning and Maintenance	5
Specifications	5
Disposal	6
Warranty	6
Contact Us	6

Product Overview



- 1.** Precision Blade
- 2.** On/Off Button
- 3.** Indicator Light Function
- 4.** Cleaning Brush
- 5.** USB Charging Cable
- 6.** Oil
- 7.** Attachment Combs (7/5/3/1mm)

Safety Warnings

1. This appliance can be used by children over 8 years of age, as well as by individuals with physical, sensory, or mental limitations, or those who are inexperienced, provided they have received proper training on how to use it safely and are aware of the potential risks involved.
2. Children should not be allowed to play with the appliance. They are also not permitted to clean or perform maintenance on the appliance without adult supervision.

General Safety Instructions

1. It is advisable to keep these instructions for future reference.
2. Always check the appliance before use. Do not use it if damaged, as it may cause injury. Always replace damaged parts with original components.
3. Do not open the appliance to replace the rechargeable battery.
4. This appliance is not washable. Never immerse it in water or rinse it under the tap.
5. Avoid using compressed air, scouring pads, abrasive cleaners, or aggressive liquids, such as petrol or acetone, to clean the appliance.

Important Note

1. This trimmer has a built-in rechargeable battery. Do not throw it into fire, apply heat to it, or expose it to high temperatures.
2. The appliance should not be used on animals.

Oil Bottle

Keep out of reach of children. Do not swallow. Avoid contact with eyes. Dispose of properly when empty.

Instructions for Use

1. For uniform cutting, allow the trimmer to cut through the hair gradually. Do not force it to move faster.
2. The trimmer comes with four attachment combs of different sizes: 1mm, 3mm, 5mm, and 7mm. These combs are easy to select and lock in place to adjust the length.
3. Start by combing the hair so it naturally falls in the right direction. Place the largest guide comb onto the trimmer, and begin trimming the sides, starting from the bottom.
4. Hold the trimmer lightly against the hair with the teeth of the guide comb pointing upwards but flat against the head.
5. Slowly lift the trimmer up and outward through the hair, cutting only a small amount at a time. Repeat this process around the sides and back of the head.
6. To turn the unit on or off, press the on/off button. When pressed, the unit will start working, and pressing the button again will stop the unit.

USB Charging

1. The hair trimmer is highly portable and can be charged anywhere using the USB cable.
2. To turn off the hair trimmer, push the switch to the "OFF" position.
3. Rechargeable: The trimmer comes with a built-in battery. It requires 2 hours of charging time to offer about 90 minutes of running time.
4. Two charging methods:
 - 4.1 Charge the device directly using the included USB cord. Connect it to a power bank, adapter (5V 1A), or computer.
 - 4.2 Alternatively, plug the USB cord into the charging stand's connection (5V 1A).
5. The red light will turn green when fully charged.
6. Oiling Indicator: For best results, place a few drops of oil on the teeth of the blades.

7. Charging Indicator: The red rectangle indicator will flash when the battery power is too low, signaling that you need to recharge.

Note: This product can be used both corded and cordless.

Cleaning and Maintenance

- 1. Before cleaning the appliance, always ensure it is switched off and unplugged.
- 2. Clean the unit using a damp, soft cloth.
- 3. Avoid using detergents or solvents to clean the appliance.
- 4. After use, remove the cutting guide and use the cleaning brush to clean the device, ensuring that any hair is removed from the cutting blade.
- 5. To maintain optimal performance, it is advisable to clean and oil the appliance regularly.
- 6. Remove hair from the cutting blade using the cleaning brush, apply 2 or 3 drops of oil, and allow the machine to run for a few seconds so it can lubricate properly.

Note: The cutting blade is fixed by screws.

Specifications

Blade Material	Stainless Steel
Battery Capacity	600mAh
Charging Time	2H
Working Time	60Min
Charging Interface	Type-C
Charging Power	DC 5V/1A
Accessories	Charging Cable, Oil, Cleaning Brush, Attachment Combs (7/5/3/1mm)



This item is made in conformity with CE

Disposal



The device (including its removable parts and accessories) must not be disposed of with municipal waste at the end of its life. In accordance with European Directive 19/2012/EC, it must be handled separately from household waste. You should either take it to a separately-collected waste disposal center for electrical and electronic appliances or return it to the retailer when purchasing a new device of the same type.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**