

PORODO
LIFESTYLE



Porodo Lifestyle

HEATPULSE Portable Steam Iron

SKU: PDLFSTSIWH

Table of Contents

Important Safety Precautions	2
Schematic View	3
Specifications	4
Instructions for Use	4
1. Function Guide	5
2. Steam Generation Function	5
Precautions During Operation	6
Cleaning and Maintenance	6
Troubleshooting	7
Material Content Table	8
After Use	8
Disposal	8
Warranty	9
Contact Us	9

 
Important Safety Precautions

Please read this manual thoroughly before using the product and retain it for future reference. The following basic safety precautions should always be observed when using this product:

- 1.** Users must be at least 8 years old to operate this product.
- 2.** Individuals with reduced physical senses, cognitive impairments, or insufficient experience and knowledge should not use this product.
- 3.** If the charging cable is damaged, replace it only with a cable of the same type to ensure safety.
- 4.** The product remains hot during and after use. Avoid contact with high-temperature parts such as the ironing soleplate to prevent burns or damage to surrounding objects.
- 5.** This product should not be used near open flames, heat sources, or flammable and explosive materials.
- 6.** Ensure the product operates on a stable surface.
- 7.** When placing the product temporarily during use, position it on an insulating silicone pad to prevent damage to clothing or tabletops.
- 8.** If you notice any abnormalities (such as burning or smoking), immediately cease use and turn off the power to avoid further damage.
- 9.** In case of malfunction, do not attempt to disassemble or repair the machine yourself. Contact customer service for guidance or take the product to an authorized repair center.
- 10.** This product is intended for household use only and is not suitable for commercial purposes.
- 11.** Do not iron directly on buttons or other hard objects to avoid damaging the surface coating of the soleplate, which may affect the product's performance and lifespan.
- 12.** Avoid ironing directly on synthetic fiber garments. Always cover them with a layer of cloth to prevent burning the fabric.
- 13.** Before ironing, check the garment's care label and select the appropriate heat setting.
- 14.** After use, allow the product to cool down in a safe location or place it on a thermal insulation silicone pad to prevent burns.
- 15.** This product should not be immersed in water for cleaning.

16. Allow the product to cool sufficiently before cleaning. Use a damp, soft cloth for cleaning, and for stubborn stains, gently wipe with a cloth dipped in a mild detergent.
Reminder: If the product is not used for an extended period, please fully charge it every 3 months to maintain battery health and prevent degradation of performance and lifespan.

Schematic View

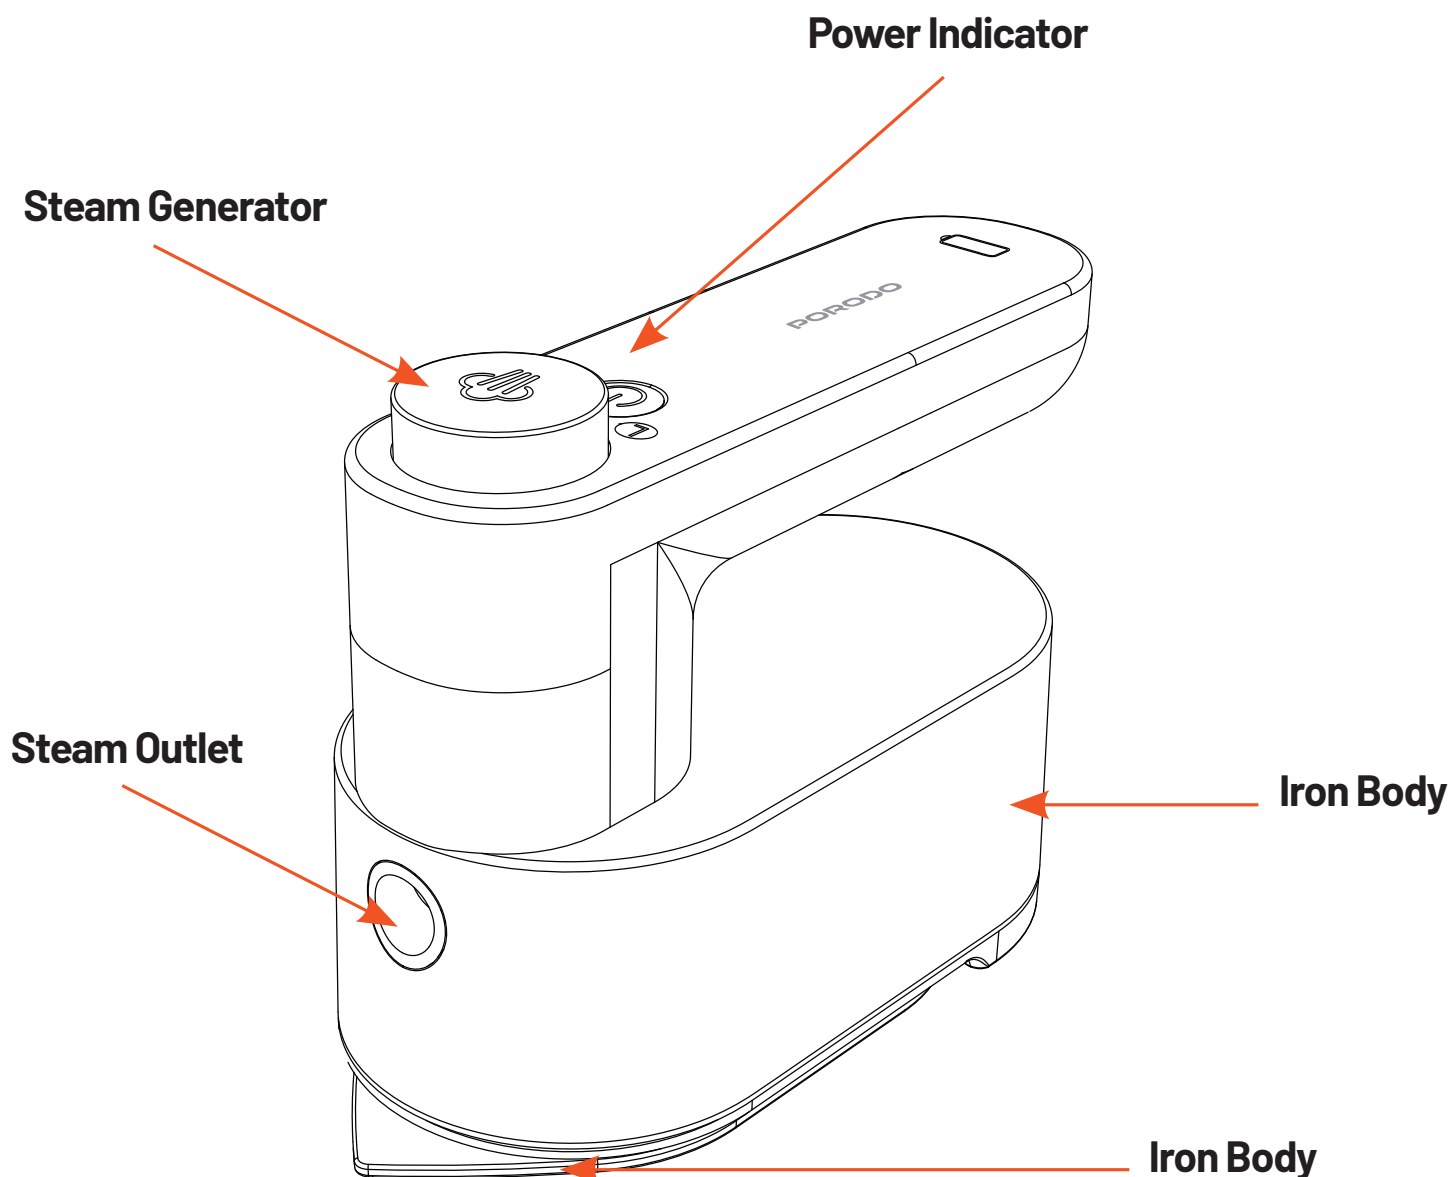

Specifications

Battery Capacity	5200mAh
Input	5V/2A 10W
Working Voltage	7.4V
Working Current	10-15A
Working Time	40 Minutes
Charging Time	210-240 Minutes
Water Tank Capacity	15ml
Product Weight	420g
Product Size	110 x 70 x 155mm
Model Number	PDLFSTSI

Instructions for Use

This product features two adjustable temperature levels, which can be selected based on the fabric being ironed. The temperature adjustment levels are as follows:

L Level: Suitable for delicate fabrics such as nylon, chemical fibers, silk, and wool.

H Level: Suitable for sturdier fabrics like cotton and linen.

Tips: For heat-sensitive fabrics, always place a layer of cloth between the garment and the iron to prevent deformation or damage. When ironing blended fabrics, select the appropriate temperature level based on the fibers with lower heat tolerance. Start by ironing clothes with lower heat resistance first.

1. Function Guide

1.1 Switch Button: Controls the power on/off and level selection. In the off state, double-click to turn the product on. While on, click the button to cycle through the temperature levels. Double-click the button to turn it off.

1.2 Type-C Charging Port: Used for charging the device with a voltage of 5V DC/2A.

1.3 Power Display: Click the button while the device is in standby mode to display the remaining battery. The display will show the charging status when charging.

1.4 Level Display Area: When the device is on, the current ironing level will be shown. Clicking the button will toggle between L and H levels, cycling through the available settings.

1.5 Ironing Soleplate: The heated surface used for ironing clothes.

1.6 Thermal Insulation Silicone Pad: Protects the ironing soleplate and provides heat insulation, offering a safe resting surface during use.


2. Steam Generation Function

The steam generator is built into the iron and is used during ironing. It can be removed and used separately as a water replenisher. Before use, the device needs to be charged. The red light will flash while charging and will stop once it's fully charged. The steam generator has a built-in lithium battery, and both the charging port and power switch are located at the bottom of the device.

2.1 Before ironing, remove the ultrasonic steam generator to charge and add water.

2.2 Open the water tank and fill it with clean tap water. Once filled, securely tighten the water tank and gently shake it to ensure even distribution.

2.3 Press the button to activate the spray function. Press again to turn it off.

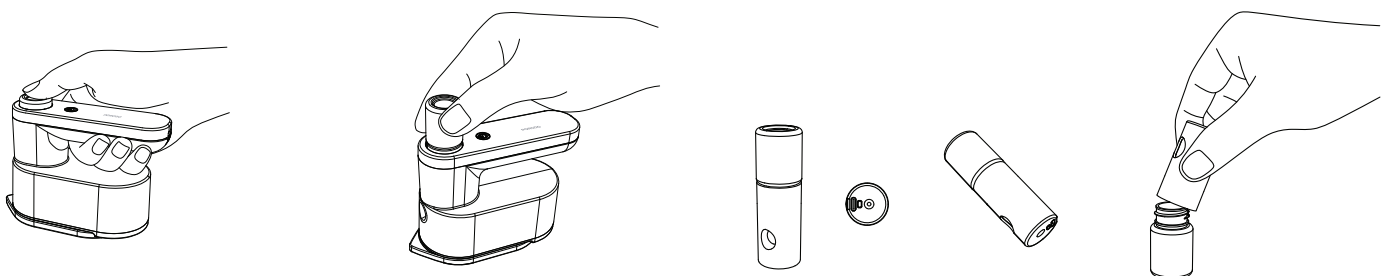

Precautions During Operation

- 1.** Before using the product for the first time, remove all packaging and clean the ironing soleplate. It is normal for a slight smoke to appear during the heating process.
- 2.** When ironing clothes, start by ironing the smaller wrinkled areas (such as collars, cuffs, and waistbands) before moving on to the larger areas (such as sleeves and the front/back of the garment). If the clothes are dry, spray a small amount of water before ironing for better results.
- 3.** When Using the Steam Generator as a Water Replenisher:
 - 3.1** Do not use alcohol, detergents, or products containing mercury, alkali, or acid for cleaning.
 - 3.2** Avoid spraying directly into the eyes.
 - 3.3** It is best to use mineral water with this product. Avoid using pure water, bottled water, or water with poor quality, as they can cause water droplets to form. If you wish to use a lotion or toner, dilute it by mixing 90 % mineral water with a small amount of lotion.
 - 3.4** Never use sharp objects to touch the spray nozzle when the product is not spraying, as this can cause damage. Any resulting consequences will be at your own risk.
 - 3.5** Keep the device 5cm away from your face before applying makeup, and 12cm away after applying makeup.
 - 3.6** It is normal for a small amount of water droplets to gather around the atomization port when spraying. Simply wipe them off with a paper towel.

Cleaning and Maintenance

To extend the lifespan of the product, it is important to develop a habit of cleaning the machine thoroughly after each use. This will help maintain its neat appearance. Be sure to allow the product to cool down completely before cleaning.

- 1.** Allow the product to cool down before cleaning.

2. Avoid using hard or sharp objects on the ironing soleplate to prevent damaging its surface coating, which could affect its performance and durability.
3. Do not use corrosive or abrasive cleaners. Instead, wipe the exterior with a clean, damp cloth followed by a soft, dry cloth. If necessary, apply a small amount of neutral detergent to the cloth, not directly onto the product.
4. Never wash or soak the entire machine in water or any other liquid, as this may lead to malfunction or pose a safety hazard.
5. After cleaning, store the product in a dry, dust-free place.

Troubleshooting

1. The machine does not turn on:

1.1 Low battery: Ensure the battery is fully charged before use.

1.2 Button malfunction: Press the button, then double-click it to power on.

1.3 Charging issue: The machine will not operate while charging. Please disconnect the charging cable and try again.

1.4 Further assistance: If the machine still does not work, please contact a service center.

2. Abnormal temperature rise:

The machine is equipped with overheat protection. If the temperature rises abnormally, it will automatically suspend operation. Allow the machine to cool for approximately 30-20 minutes before resuming use.

3. The steam generator is not producing steam:

3.1 Water tank issue: Ensure the water tank is filled. If necessary, add water and charge the device.


3.2 Steam switch issue: The steam switch may not have been fully pressed. Press the steam switch again.

3.3 Machine malfunction: If the issue persists, please contact a service center for further assistance.

Note: If any abnormality occurs during use, immediately stop using the product and turn off the power. Do not attempt to disassemble or repair the machine yourself. For assistance, contact a professional service center.

Material Content Table

Part Name	Harmful Material					
	Pb	Hg	d	Cr(VI)	PBB	PBDE
Shell Component	○	○	○	○	○	○
Ironing Soleplate	○	○	○	○	○	○
Heating Parts	○	○	○	○	○	○
Circuit Board Component	○	○	○	○	○	○
Charging Cable and Internal Wires	○	○	○	○	○	○
Fastening Piece	○	○	○	○	○	○
This form has been compiled in accordance with SJ/T 11364. O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit specified by GB/T 26572. X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit specified by GB/T 26572.						

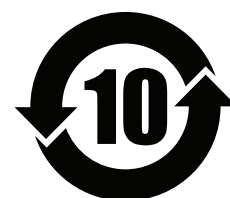

After Use

1. Once the iron has completely cooled, place the high-temperature resistant silicone protective cover on it before storing.
2. Gently coil the power cord, ensuring it is not wrapped around the iron.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**