

porodo
LIFESTYLE

USER MANUAL



OUTDOOR CAMPING REMOTED LED COOLING FAN

Model: PD-LSCMF

Safety Precautions

- 1.After purchasing the product, please fully charge it before use
- 2.If you don't use it often, please charge it once every two months to avoid battery damage
- 3.If there is water or solution into the product, please promptly disconnect the power and put the product in a dry place to dry. product in a dry place to dry before use
- 4.Keep product out of reach of children and pets
- 5.Do not disassemble, modify or repair this product yourself
- 6.Do not put product into or near fire in order to avoid fire and explosion hazard
- 7.Please stop using it if in the event of abnormal operation
- 8.To protect the environment, please take out the battery and get the battery to the right recycle place

How To Remove The Battery

Remove the mask screws, remove the mask, top open the rear cover buckle position, remove the rear cover, remove the battery Cover Tremove the battery

Product Maintenance

Please charging for more than 2 hours after purchasing fan, if don't need to use fan, please charging it every 2 months to avoid damage to the battery

How to use this product

Fan function

Short press the fan button to start the fan working, short press again to upshift the wind gears.The fan will be shut down after short press again on 5th wind gear.Long press the fan button for 5 seconds to shut down all functionsincluding remote control. The remote control can be used if it's on charging or short press the fan button or light button.

Shaking head function

When the fan is working, short press the oscillating button to start oscillation,short press again to shut down oscillating and turn back to initial position.

Light function

There are 3 brightness in the light of this product, short press the light button to turn on, short press 2nd time to raise brightness, short press 3rd time to raise to the strongest brightness, short press 4th time to turn the light off.

Remote Control


- 1.Introduction of the remote control, press the button in the middle is start the fan working, press the wind speed button "-" and "+" to speed down or speed up.
- 2.The buttons of the remote control, including wind speeds "-" and "+" and oscillating control must be working after turn the fan on.

NOTE: The remote control can't be used after stop working for 12 hours, It will be reactivated if you recharge it or short press the fan/light button.

Shaker function

The gear indicator light is white and weak brightness on 1st wind speed.
The gear indicator light is white and middle brightness on 2nd wind speed.
The gear indicator light is white and strong brightness on 3rd wind speed.
The gear indicator light is white and max brightness on 4th wind speed.
The gear indicator light is green and middle everbright on 5th natural wind speed.

Usage Status

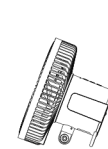

Can be placed




Suspendable



Standable

Function Introduction


- 1 Rotate to adjust the fan angle
- 2 Rotate to adjust fan height
- 3 Carrying handle can be hung
- 4 Magnetic remote control

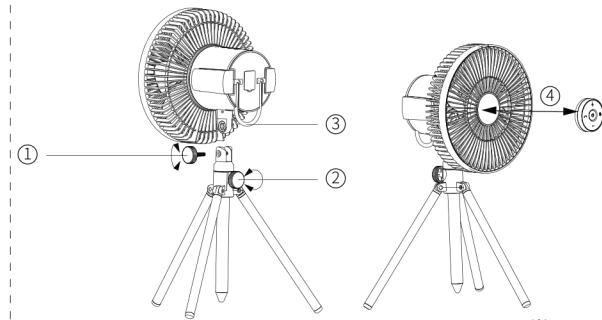


How to take down the fan cover

Take out the screw and counter-clockwise rotation.

Product Introduction

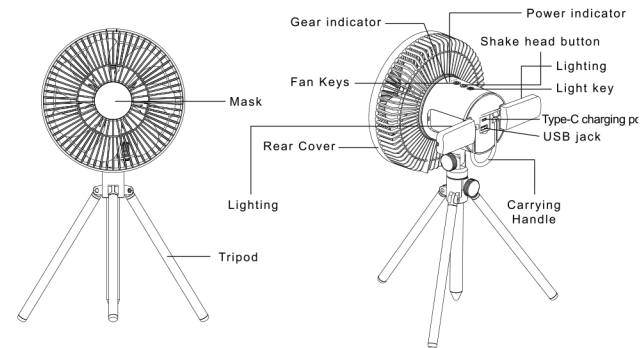


Camping Fan

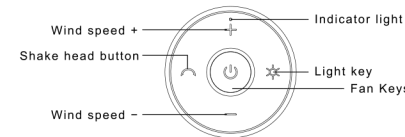

Warm Tips!

Positioning of brackets and mainframes:
Rotate the fixer clockwise to fixed it on the main body, Please makesure the arrowhead of the fixer in face of the arrowhead of the main body.(It will be returned to the original possion when the fan is oscailting.)

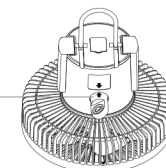

Specification

Material	ABS+Aluminum
Input	5V --- 2A
Output	5V --- 2A
Battery Capacity	10000mAh 3.7V
Net weight	990g
Shaking head angle	120°
Remote Distance	10m
Item Size	200*140*448mm
QC	Qualified Product
Corporate standards	Q/WTSJ001-2016
National Standard	GB4706.1-2005 GB4706.27-2008