

PORTABLE CORDLESS CITRUS JUICER




PD-LSCJ45

In order to use this product correctly and maintain it better, please read the manual carefully and keep it properly.

PRODUCT FEATURES

1. Wireless portable, USB charging, not affected by the use environment, juicing anytime and anywhere.
2. One key juicing, hands free, time-saving and labor-saving.
3. Can juice many kinds of fruits, apple...and so on.

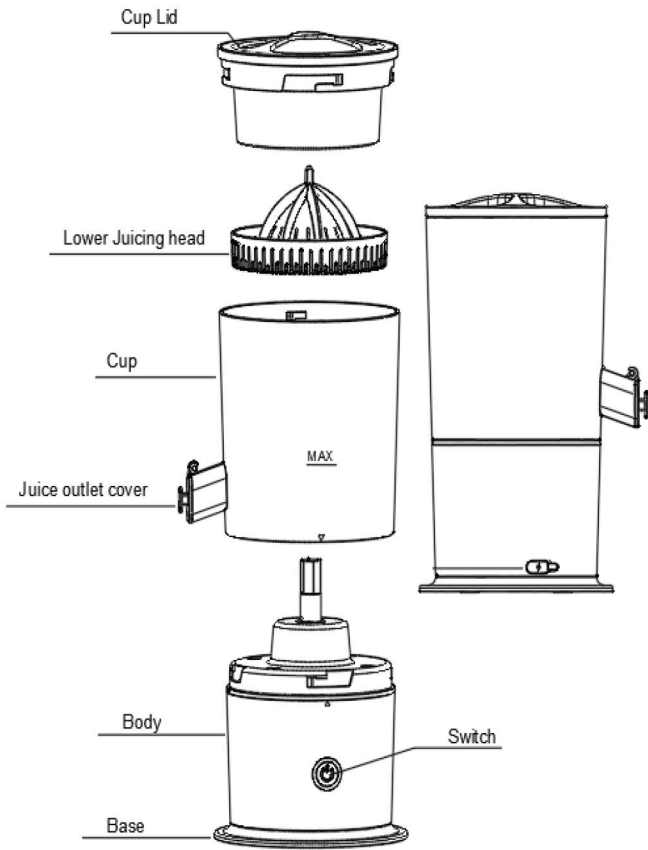


SAFETY PRECAUTIONS

1. This product is prohibited for commercial use.
2. Please read this manual carefully and keep it properly before using this product.
3. It is forbidden to use this product on inclined or unstable worktops.
4. When charging, confirm whether the power adapter is consistent with the specification of this product.
5. If the parts are damaged, must stop use the product immediately, and go to the designated maintenance point and ask professionals to replace and repair, so as to avoid dangerous accidents.
6. When cleaning and disassembling, the product should in a stopped state.
7. Please ensure that all removable parts are installed in place before operation.
8. Place the machine in a place that is not easy for children to touch when working.
9. Products should be stored away from children. Do not let people with incomplete limbs, sensory or mental disorders or lack of relevant experience and knowledge (including children) use or play with this product.
10. Do not put the host of this product into water for cleaning.
11. All parts of this product can be cleaned in a dishwasher below 60ℳ. Can't use corrosive detergent for cleaning. If use hot water for cleaning, the water temperature should not exceed 70℃.

USE METHOD

1. Wash the fruit and cut it in half (If the fruit is too large, it can be cut into multiple parts).
2. Clean and assemble all parts of the machine, and press and hold the switch button to start the machine.
3. Open the lid, cut the fruit in half and place on the juicer (Fig 1)
4. Align the lid with the fastening and fasten the lid clockwise (Fig 2)
5. Lightly press the switch to start juicing. (Fig 3)
6. After juicing, place the cup under the juice outlet and open the lid. (Fig 4)
7. Open the lid in the direction of the arrow, take out the juicer head, and then gently press down the juicer cup and unscrew it for cleaning (Fig 5)

Notice:Juice cannot exceed the MAX mark.

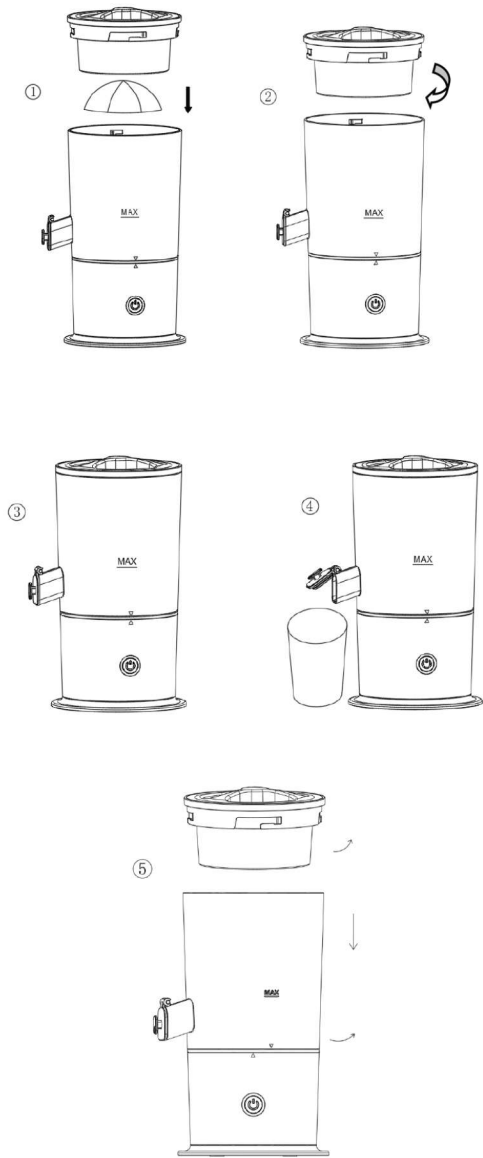

WARM TIPS

1. It is normal for the cup cover and the cup to shake slightly during juicing.
2. There is a maximum juice prompt (upper limit of juice) on the juice cup. When the upper limit is reached, please open the juice outlet cover.
3. After juicing, press and hold the switch button to turn off the machine, and the indicator light goes out; If there is no operation within 5 minutes, the machine will shut down automatically and the indicator light will go out.
4. After the product is cleaned, wipe or dry all parts, then reassemble them and store them in a dry, cool and ventilated place.

CLEANING AND MAINTENANCE

1. This product is a built-in battery charging citrus juicer. Please charge the product before using it for the first time.
2. Please clean the juicing cup and upper and lower juicing heads immediately after use.
3. It is forbidden to wash the host machine with water, it is recommended to wipe it with a soft wet cloth, and the rest of the parts can be washed with water.
4. Do not use corrosive detergent for cleaning.
5. All parts of this products can't be cleaned in a dish washer.
6. If the product is not used for a long time, please charge it within every three months for maintain.

PRODUCT SPECIFICATION


Product model: PD-LSCJ45
Rated voltage: DC 7.4V
Product size: 153mm*130mm*241mm
Rated current: 6A
Product weight: about 1.1Kg
Rated power: 45W
Charging specification: DC5V 1A
Charging mode: USB Type C

ERROR ANALYSIS

If there may have any faults when using this product, please confirm the following points before asking for maintenance:

Phenomenon	Reason	Solutions
Can't work	Dead battery	Charge in time
Stop suddenly during working	1. The fruit is too big. 2. The battery is down. 3. The ingredient is too hard and jam the machine.	1. Cut small pieces of fruit. 2. Charge in time. 3. Take out the hard ingredients.
Abnormal noise	1. Accessories are not installed in place. 2. The machine is placed in an inclined position when working	1. Stop the machine and check whether the accessories are installed correctly and in place. 2. Please put the machine on a level surface for use. Confirm whether the machine is well assembled. If it's not the assembly problem, stop using it.
There is food overflow when working.	1. Some fruits contain more water or put too much fruit. 2. Confirm whether the upper cover is covered.	1. It is normal. 2. Install the upper cover correctly.
Indicator light: 1. White light flashes 2. After the red light is on for 10 seconds extinguished 3. Indicator light when charging not bright 4. The red light flashes for 5 seconds and the machine stops	1. Prompt the battery is dead 2. The battery is dead, automatic protection 3. The charging cable is not connected 4. Stall protection	1. Prompt to charge in time 2. To charge 3. Connect the charging cable 4. Long press the switch button to reset the machine, take out the fruit, and release the locked rotor

ELECTRICAL DIAGRAM

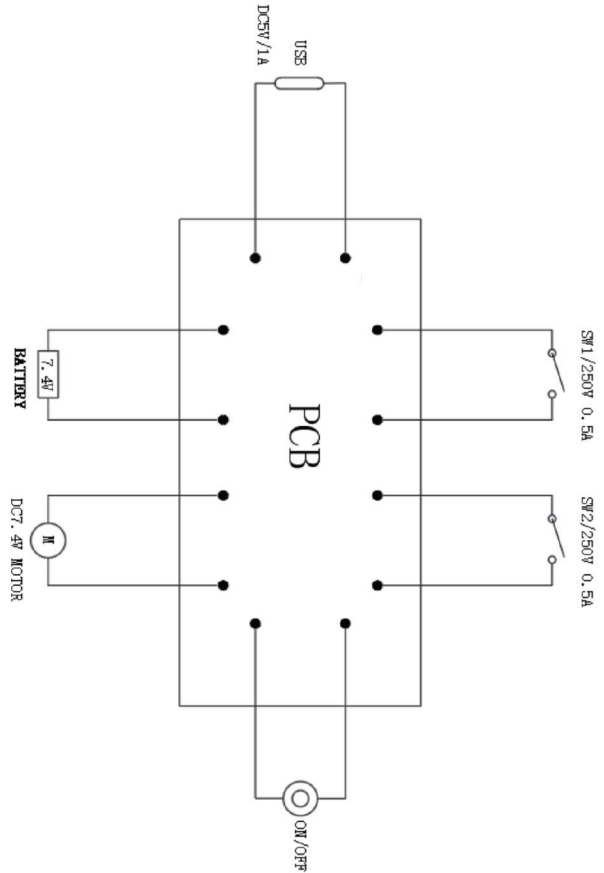

For more information, please contact our support team:
support@porodo.net