



USER MANUAL

PD 120W LAPTOP POWER BANK


MODEL: PD-PBFCH023-BK

Please read this manual carefully before using the product and keep it safe.

Dear Customer:

Thank you for purchasing this product! Please read the "User Manual" carefully before using this product and operate correctly according to the instructions.

Product Description

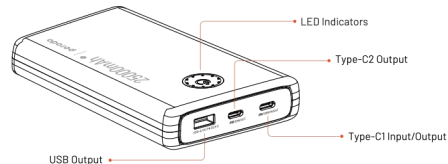

Specifications

Model	PD-PBFCH023-BK
Battery	5 x 21700
Capacity	25000mAh@3.7V 92.5Wh
Type-C1 Input	DC5-20V/2-5A(PD 100W Max)
Type-C1 Output	DC5-20V/2-5A(PD 100W Max)
Type-C2 Output	DC5V/3A, 8V/2A, 12V/1.67A(PD 20W Max)
USB-A Output	DC5V/3.6A, 9V/2A, 12V/1.5A
Product Size	162x86x26mm
N.W.	480g

Support double channel fast charging

Type-C1 + Type-C2 total output: PD 120W Max


Type-C1+USB-A total output: 122.5W Max

Instructions for use:

Power indication

Power indicator light	One	Two	Three	Four	Five	Six	Seven	Eight	Nine	Ten
Remaining Battery	<10%	<20%	<30%	<40%	<50%	<60%	<70%	<80%	<90%	<100%

Note: In the fast charging mode, the power indicator will turn green.

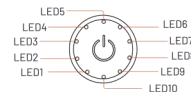

CHARGE THE POWER BANK

1. Choose an appropriate charging adaptor to charge the device via Type-C input port.
2. The LED indicator flashes until it is full during charging.
3. Please remember to pull out the cable when the device is fully charged.

USE THE POWER BANK TO CHARGE LAPTOP OR OTHER DIGITAL DEVICES

1. Charge digital device via USB or Type-C output port. Type-C port can also charge compatible laptops.
2. The power bank will automatically begin to charge the laptop or digital device and the LED indicators will automatically show the remaining power.
3. Please unplug the cable from the laptop or other digital device in time when charging is completed.

Note: Fast charge output to a laptop or mobile device requires the use of a Type-C to Type-C cable or USB to Type-C/Micro/Lightning data cable, fast charge input also requires a Type-C cable as well a power source with sufficient power.

Package Contents

- PD 120W Power Bank x 1
- User Manual x 1
- Type-C to Type-C Cable x 1

Precautions:

1. Before using, please note the instructions of the power bank to ensure proper use.
2. For the first time, it is recommended that the power bank be fully charged.
3. To charge the power bank, it is recommended to use formal brand power adapter.
4. Use a power bank to charge other devices, please choose your own cable.
5. To charge other devices, if the power bank remaining battery is low, please recharge it as soon as possible.
6. Please keep the power bank clean and dry, do not use chemicals, soap, damp cloth to wipe the product.
7. Keep the power bank in a dry place away from moisture and corrosive items.
8. After long time storage, please do several discharging and charging cycles to ensure the best performance of the power bank.
9. This product is not a toy, please prohibit the use by children.
10. If you notice the power bank change shape or some other phenomena, please stop using it immediately.
11. If there is a leak of electrolyte, do not contact the skin or eyes directly; if contact occurs, apply a large amount of water to rinse the contact site and seek medical attention.
12. Please environmentally friendly dispose the power bank.

Designed and manufactured by Teqtronix Inc.
All rights reserved 2023.

For more information, please contact our support team:
support@porodo.net

www.porodo.net

Instagram /porodo

Facebook /myporodo

CE RoHS FCC UKCA
Made in China