

60mm x 100mm

porodo
LIFESTYLE

Head Massager User Manual



Model No: PD-LSHDMSG4-BK

SAFETY INSTRUCTIONS

Please read ALL instructions carefully before using the product for the first time. We recommend that you keep this manual for future reference, even if you are familiar with the product. The basic safety precautions should always be followed. Failure to comply with this manual may cause fire, electric shock, damage to the product, and serious injury.

- This product is not intended to diagnose or treat any medical condition or to replace your healthcare professional. Always consult your physician before use any massagers. Please STOP using and consult your healthcare professional immediately when you feel uncomfortable during use.
- This massager should not be used by children younger than 6 years or by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they are supervised or are given instruction concerning the use of this product in a safe way and understand the hazards involved.
- **DO NOT** use this head massager if you have any of the following diseases or conditions:
Skin infection or other skin disease.
Heart disease or recorded, acute diseases, malignant tumors, or any other unhealthiness.
Pregnancy or period.
Patients with blood diseases such as bleeding tendency, osteoporosis, soft tissue diseases or stroke.
- **DO NOT** use this head massager on:
Skin areas with damage, redness, inflammation, congestion and other uncomfortable symptoms.
The surgical site of your body.
- Please **DO NOT** use the product if you are drunk.
DO NOT use it while walking or driving.

- **Never** use the massager while it is charging.
- Keep the massager away from high heat, and/or corrosive environment.
- Please remove hairpins or objects on your head that may affect your massaging.
- Please comply with the safety regulations when using in a specific environment.
- **DO NOT** use sharp objects to scratch this product.
- The product is intended for personal use, it should **NOT** be used for the therapy purpose.
- Never operate the product if it has been broken or has a damaged charging cable.
- If there is any abnormal phenomenon during use, please cut off the power immediately. **Do not** disassemble or repair it by yourself.
- Please use the charging equipment offered by the seller to charge the product.
- Only use the adaptor (5V 1A, not included) to connect to the charging cable and recharge the head massager.

PACKAGE CONTENTS

- 1 x Head Massager
- 1 x Charging Cable
- 1 x User Manual

SPECIFICATIONS

Product Name	Head Massager
Model Number	PD-LSHDMSG4-BK
Rated Charging Voltage	5V=
Rated Power	5W
Session Time	10 Minutes
Battery Capacity	1200mAh

PRODUCT FEATURES

- 2 Massage Speeds
- Light and Compact
- IPX7 Waterproof
- Skin-Friendly
- One-Button Control
- Light and Compact
- IPX7 Waterproof
- Two Massage Speeds

KNOW YOUR HEAD MASSAGER

Featured four 3D silicone massage heads that are equipped with 68 contact points, Electric Head Massager replicates the circular thumb kneading technique of a professional massager. It rubs and massages the scalp to soothes nerves and relieves pressure. Use it on your neck, shoulders, back, legs, and any part of your body that need to experience the comfortable sensation. With IPX7 waterproof design, this massager can be used during a bath or while shampooing.

BUTTONS AND FUNCTIONS

- Indicator Light
- Main Button
- Silicone Massage Head
- Charging Interface

Main Button:

Power On


Press and hold the main button for one second to turn on the massager.

To Switch Speed

After starting, short press once for speed switching

Power Off

Press and hold the button for three seconds to power off

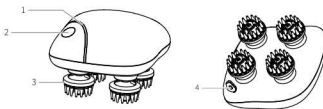

PREPARATION BEFORE USE

PREPARATION

- Check whether the products and accessories are complete. Do not use them if they are damaged.
- Fully charge the battery before initial use.

CHARGING

1. Place the magnetic suction head on the charging cable to the charging interface at the bottom of the massager.
2. Attach the charging cable to the power adaptor (5V 1A, not included), and plug it into the power outlet.
3. While charging, the light indicator on the main unit flashes in red. After 2 hours, the light indicator will turn green, and the charging process is completed.
4. Once the massage is fully charged, it can be used for up to 150 minutes each time. (There will be differences due to the different massage speed).
5. When the product power is low, the machine will shut down automatically.

Note: The massager will not operate while charging, please remember to remove the cable after charging.

PREPARATION INTRODUCTION

1. Press and hold main button for a second, the indicator light turns green and the default shiatsu mode begins at fast speed immediately.
2. To change mode, short press the button. The massage mode changes from fast speed to slow speed, and the green indicator starts to flash
3. Put the massage heads on the body to start the massage, relax your body completely while using this product. This massager can be used in the shower and bath as well.
4. After finishing massage, Long press the button for three seconds, the machine shuts down and the indicator light turns off.

Note: The product will shut down automatically after 10 minutes of no-operation.

CHARGING

Product Name	Head Massager
Green	Fast Speed / Charging completed
Flashing Green	Slow Speed
Flashing Red	Charging is in Progress

CLEANING AND MAINTENANCE

CLEANING

- The four silicone massage heads are removable. You can detach the massager heads from the unit and wash them with water. Wipe them and air dry.
- Spot clean the surface with a soft and slightly damped sponge.

STORAGE

- Please put the product back in box after use. Store it in a safe, dry, and cool place.
- **DO NOT** put any heavy object on the massager.
- Store the product in a well-ventilated place, avoid intense sunlight illumination and corrosive gas erosion.
- Recharge and inspect the massager before a long period of storage.

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the head massager still does not operate correctly, it may be a defective unit. Please contact a qualified technician or contact our support team if it's within the warranty. **DO NOT** try to repair it by yourself. Otherwise, there is a risk of electric shock.

Problem	Possible Cause	Solution
Fail to turn on the massager	The battery power is low	Please recharge the massager
Weak Massaging	The battery supply is not enough	Please charge the massager immediately