

PORODO
LIFESTYLE



Porodo Lifestyle
Multi-Function
Electrical Nail Clipper

SKU: PDENCLIM7

Table of Contents

Product Overview	2
Quick Guide	2
Using the Nail Clippers	4
Polish Nails	4
Cleaning	5
Charging	5
Important Safety Information	5
Instructions for First-Time Use	6
Tips	6
Specifications	7
Packing List	8
Disposal	8
Warranty	9
Contact Us	9

Product Overview

 
Magnetic
Protective Cover

LED Light

Indicator light

Trim Switch


Polishing Switch

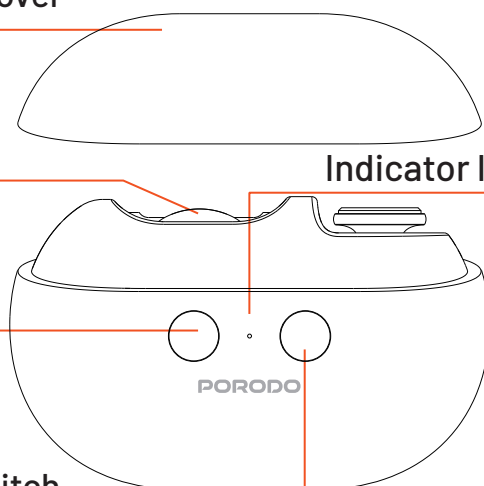

Front view

Grinding Armor

 
Storage
Compartment

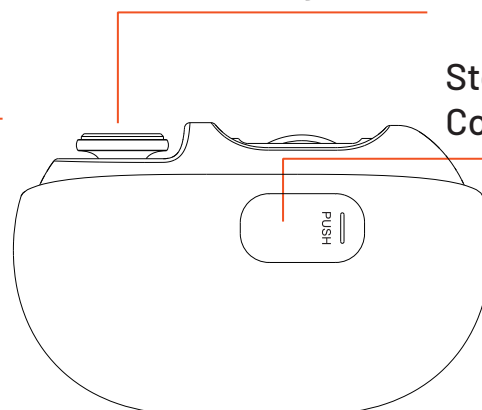

Back view


Finger Positioning Area

 Nail Clipper
Blades

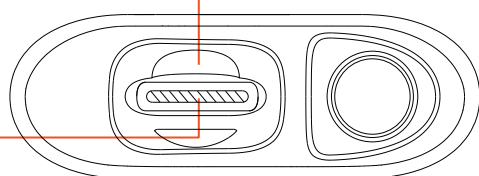

top view

 Charging Port

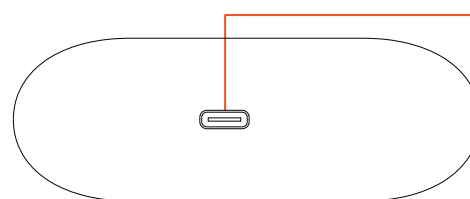

Bottom view

Quick Guide

1. Trim the Nails

Place the product with the front facing up. Position your finger on the designated area, extending your nail into the hole. Gently rotate your finger left and right to complete the round cutting process.

2. Polish and Remove Armor

Align your nails parallel to the polishing head. Gently polish the surface of the


nails, moving your fingers slowly to efficiently remove the nail surface.

3. Polish the Nails


Ensure the nail is perpendicular to the rotating head. Gently polish the nail tip by rotating your finger left and right to achieve a smooth, rounded finish.

4. Clean the Device


Press down on the "PUSH" symbol to open the storage compartment and remove the nail shavings.

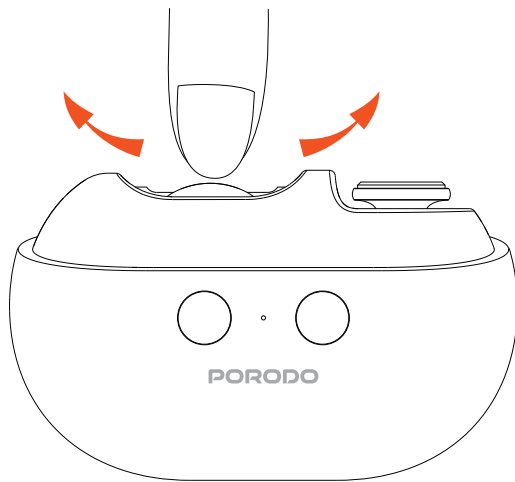


1

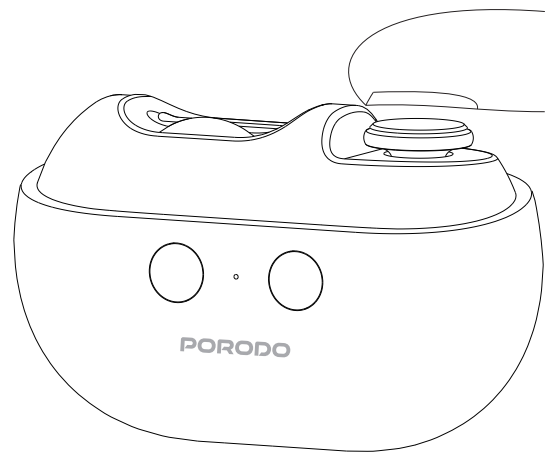

2

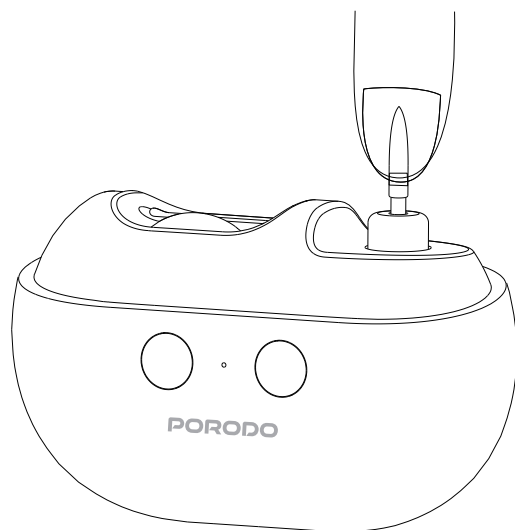

3

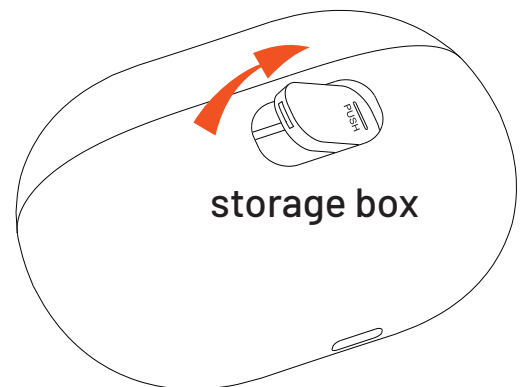 

4

Using the Nail Clippers

- 1.** Remove the cover before use, ensuring the indicator light is facing up and the storage box is positioned downward.
- 2.** Long press the power button to turn the device on (on high grade). The working indicator and lighting lamp will light up.
- 3.** Click the switch to toggle to low gear.
- 4.** Place your finger in the designated position and insert your nail into the hole. Gently push the nail into the hole, ensuring not to apply too much pressure. Move your nail or the product slowly to ensure the entire nail is trimmed and rounded.
- 5.** Press the right key again to turn off the machine. The indicator and lamp will go out simultaneously.

Polish Nails

- 1.** Remove the cover before use.
- 2.** Long press the power button to turn the device on (on high grade). The working indicator and lighting lamp will light up.
- 3.** Click the switch to toggle to low gear.
- 4.** Hold the nail perpendicular to the rotating head and gently polish the nail tip, ensuring it is round and smooth. Move the nail slowly to polish the surface evenly.
- 5.** Do not polish the nail with the edge of the rotating head, as this may cause scratches on the nail surface.
- 6.** Press the right key again to turn off the machine. The indicator and lamp will go out simultaneously.

Cleaning

1. Buckle the left side of the storage box, turn up the cover, and empty the nail debris into the storage box. Use a small brush to clean the storage box.
2. Clean the debris using a brush or remove the nail polish head and wash it with water to clear away any leftover particles.

Charging

Please follow these guidelines when charging the product:

1. Ensure the product is fully charged before using it for the first time.
2. Avoid using the product while it is charging.
3. Use the provided Type-C charging cable along with a 5V output power adapter to charge the device.
4. During charging, the indicator light will flash slowly and remain on once the device is fully charged. It will take approximately 1 hours to fully charge.

Important Safety Information

1. The blade is sharp. This product should not be used by children under 1 year old. Children between 1 and 12 years old should use it only under adult supervision.
2. Always place the product properly and keep it out of reach of children to prevent accidents.
3. Only use the product on nails. Do not touch other areas of the body to avoid injury.
4. While the product is in use, avoid contact with clothing, accessories, or other tools to prevent potential malfunction.

Instructions for First-Time Use

1. Charge the product fully before first use to ensure the battery is properly charged.
2. This product is intended solely for nail trimming. Do not use it on any other body parts.
3. Avoid using the product if there is any wound or injury around the nail.
4. Do not wash or soak the product in water. Keep it away from water and fire sources.
5. Do not operate the product while it is charging.
6. The product contains a built-in rechargeable battery. Do not expose it to high temperatures or fire.
7. Avoid dropping or knocking the product. If it sustains damage from a fall or impact, cease use immediately.
8. Do not attempt to modify, disassemble, or repair the product on your own.

Tips

1. This product is designed specifically for trimming and polishing nails. The cutting and grinding heads are precise, so avoid using them on hard objects to prevent damage.
2. Do not immerse the device in water to avoid damaging the internal circuits.
3. Avoid disassembling the machine, as its internal components are complex and may be damaged.
4. Refrain from trimming the same area for extended periods to prevent potential harm to both the nail and the device.
5. The product combines cutting, grinding, and polishing functions, which may produce minor dust, such as nail shavings. This is a normal and expected occurrence.

6. For motor protection, the device will automatically shut off after 5 minutes of continuous use.

 Specifications

Input	5V/1A
Battery Capacity	500mAh
Working Time	3H
Charging Time	1H
Charging Interface	USB-C
Speed Modes	2 (Trim & Polish)
Noise Level	48dB
Product Weight	116g
Product Size	30×59×86mm

Packing List

1. Nail clipper
2. Charging cable
3. Cleaning brush
4. Grinding head

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**