

PORODO



Porodo

PIANO 20000mAh Power Bank with Integrated Cables

SKU: PDPBJ34BK



Table of Contents

Product Overview	2
Specifications	2
Product Design	3
Key Features	4
Battery Indicator	4
Charging Instructions	5
Safety Precautions	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo PIANO 20000mAh Power Bank is the ultimate charging solution for those who need reliable power on the go. Featuring a robust 20000mAh capacity, it ensures you have enough charge to power multiple devices throughout the day. The integrated cables eliminate the need for carrying extra cords, while the built-in phone stand offers added convenience for hands-free viewing. This power bank is universally compatible, works with a wide range of devices, and supports fast charging for quick power-ups. With additional features like a portable handle, built-in safety features, and a handy flashlight, the Porodo PIANO Power Bank is a practical and stylish accessory, making it the perfect companion for everyday use and travel.

Specifications

Battery Capacity	20000mAh, 74Wh
Micro Input	5V/2.1A
Type-C Input	5V/2.1A
USB Line Input	5V/2.1A
USB Output	5V/2.1A
Micro Line Output	V/2.1A
Type-C Line Output	5V/2.1A
Lightning Line Output	5V/2.A
Multi-port Output	5V/3A
Product Weight	402g
Product Size	28 x 68 x 145mm
Model Number	PBJ34



- 1.** Cable Removal
- 2.** USB Port
- 3.** Battery Indicator
- 4.** Micro USB Cable
- 5.** Type-C Cable

- 6.** Lightning Cable
- 7.** USB Input Port
- 8.** ABS Grip Handle
- 9.** Mobile Stand Support

Key Features

With its sleek design and practical features, the Porodo PIANO Power Bank is a must-have for anyone in need of reliable, portable power.

- 1. 20000mAh Capacity:** Provides power for charging multiple devices, including smartphones, tablets, and more.
- 2. Built-in Phone Stand:** Convenient for hands-free usage while charging.
- 3. Integrated Cables:** Includes cables for various devices, reducing the need to carry separate charging cords.
- 4. Universal Compatibility:** Works with a wide range of devices, ensuring you can charge almost anything with ease.
- 5. Fast Charging:** Equipped with fast-charging capabilities for quick power-ups, so you're always ready.
- 6. Portable Handle:** Makes it easy to carry and use, whether at home or on the go.
- 7. Built-in Safety Feature:** Ensures safe and efficient charging for your devices.
- 8. Flashlight:** A useful addition for emergencies, providing illumination when needed.

Battery Indicator

The Battery Indicator provides a quick and easy way to monitor the charge level of your power bank. Follow the instructions below to ensure optimal usage:

1. Battery Check:

To check the current battery level, press the [button] once. This will activate the Battery Indicator, and the current charge status will be displayed on the screen or through LED lights.

2. LED Indicators:

A full set of lights typically indicates a full charge, while fewer lights or a flashing indicator signals a low charge.

3. Turn Off Power Display:

After checking the battery level, you may wish to turn off the display to conserve battery. Simply press the [button] again to deactivate the indicator. The power bank will no longer display the battery status, but it will remain powered on and ready to use. This feature helps save energy when the display is not necessary.

Charging Instructions

1. Charging the Power Bank:

The power bank can be charged via the built-in USB-A cable or using the user's own Type-C or Micro-USB cable.

2. Charging Indicators:

During charging, the battery indicator light will flash, showing the charging progress. Once fully charged, all four indicator lights will remain illuminated.

Note: Unplug the power bank after it has reached full charge to maintain optimal battery health.

3. Charging Status:

The power bank has four LED indicator lights to show the remaining battery level:

- a. 4 lights: Fully charged (100%)
- b. 3 lights: Approximately 75% charge remaining
- c. 2 lights: Approximately 50% charge remaining
- d. 1 light: Approximately 25% charge remaining

4. Charging Mobile Devices:

The power bank supports charging of mobile devices via several types of connections:

- a. Built-in Type-C cable
- b. Lightning cable (for Apple devices)
- c. Micro-USB connection

Alternatively, you can use your own USB-A or USB-C cable to charge devices.

Note: Some devices may require specific cables that are not provided.

5. Charging Multiple Devices Simultaneously:

The power bank can charge multiple devices at once, with a maximum

charging speed of 5V/2.1A when multiple devices are connected. It's important to ensure that the devices you are charging are compatible with this output for optimal performance.

Note: If the power bank becomes excessively hot during use or charging, it is essential to immediately unplug it from both the power supply and any connected mobile devices.

Safety Precautions

- 1.** If the power bank becomes uncomfortably hot or reaches excessive temperatures during use or while charging, it is critical to disconnect it from both the power supply and any mobile devices without delay. This is important to prevent potential damage to the power bank, connected devices, or even to ensure user safety. Allow the power bank to cool down naturally in a well-ventilated area before reconnecting or resuming use.
- 2.** Do not use or charge the power bank in excessively hot or humid environments.
- 3.** Always use the correct cable (Type-C, Micro-USB, or Lightning) for charging your devices. Using incompatible cables may cause overheating or damage.
- 4.** Ensure the charging port is clean and free from debris before connecting any cables.
- 5.** Do not expose the power bank to water, rain, or other liquids. It is not water-resistant and may malfunction or become damaged when wet.
- 6.** Store the power bank in a cool, dry place when not in use. Avoid direct sunlight and high-temperature areas such as next to radiators or in cars.
- 7.** Keep the power bank away from flammable materials to prevent any risk of fire.
- 8.** Do not attempt to open, disassemble, or repair the power bank yourself. Contact authorized service centers for any repairs or issues. Unauthorized disassembly may void the warranty and cause safety hazards, such as electrical shocks or battery leakage.

- 9.** Do not use the power bank if the cable or the power bank itself is damaged. A short-circuit or overload can occur if the power bank is not functioning properly.
- 10.** If the power bank is excessively hot or showing signs of swelling, stop using it immediately and dispose of it responsibly.
- 11.** Handle the power bank gently to avoid accidental drops or impacts. Physical damage can affect the performance or safety of the battery.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**