

# PORODO



**Porodo**

**Full HD Smart Projector**

SKU: PD-ETK12-GY

# Table of Contents

 
Preface	2
Accessories	2
Product Overview	2
Remote Control Guide	3
Installation	4
Operation Instructions	5
Connecting HD devices	5
HD Signal	6
Homepage Guide	6
Adding Applications	7
Settings	7
Eshare and AirPlay Mirroring	8
WiFi Settings	8
Bluetooth Connection	9
Projection Settings	9
Language Settings	10
About This Machine	10
Warning	10
Specifications	11
Disposal	12
Warranty	12
Contact Us	12

## Preface


Thank you for choosing our product. The Porodo Smart Projector offers Full HD resolution with a 150" ultra-wide screen for an immersive viewing experience. It features precise autofocus and keystone adjustments for optimal picture quality. The projector supports 270° versatile angle adjustment and delivers 250 ANSI lumens brightness for vibrant visuals. With dual-band Wi-Fi support (2.4GHz & 5GHz) and a remote control, it ensures a seamless and flexible projection experience for various environments.

**Warning:** To prevent the risk of electric shock, please do not open the device casing. Unauthorized repairs or modifications are prohibited. If repair is needed, please contact professional maintenance staff.

## Accessories



Remote Control

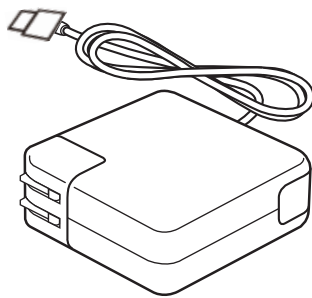 

Power Cable



HDMI Cable

## Product Overview

**Power Button:** Press and hold for 3 seconds to turn on the device and prevent accidental operation.

**Power Indicator Light:** The light is always on while charging and turns off when fully charged.

**Reset Button:** Insert a card needle into the hole to reset the system in case of a malfunction.



## Remote Control Guide



# Installation

Before selecting a location for your projector, consider the following factors:

 
- a. Size and position of your screen
- b. Location of the electrical outlet
- c. Distance between the projector and other equipment

Your projector can be installed in the following manner:

## 1. Front-Desktop

Position the projector near the floor in front of the screen. This is the most common setup for quick installation and portability. Once in place, turn on the projector and configure the following settings:


Settings > Projection Settings > Projection Method > Front-Desktop

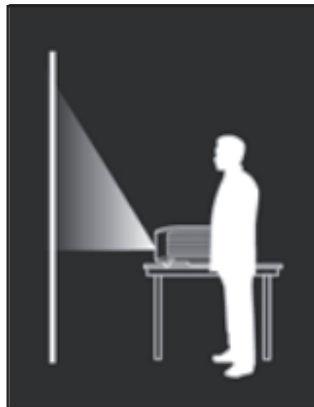

## 2. Front Ceiling

Position the projector suspended from the ceiling in front of the screen. After securing the projector, turn it on and configure the following settings:

 Settings > Projection Settings > Projection Method > Front Ceiling

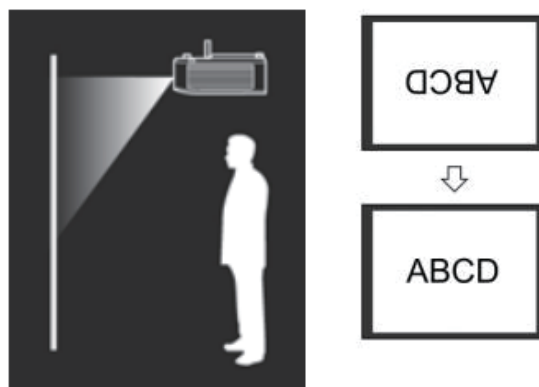

## Operation Instructions

 
### 1. Starting the projector

**1.1** Connect the power cable to both the projector and a power outlet. If applicable, switch on the power outlet. The power indicator light on the projector will turn red once power is supplied. To ensure safety, use only the provided power cable to prevent risks such as electrical shock or fire.

**1.2** Press the power button on the projector or the remote control to turn it on. Once the lamp illuminates, the power indicator will turn yellowish-green. The fans will start, and the projector will display a startup image while it warms up. During this warm-up phase, the projector will not respond to additional commands.



### 2. Adjust the image

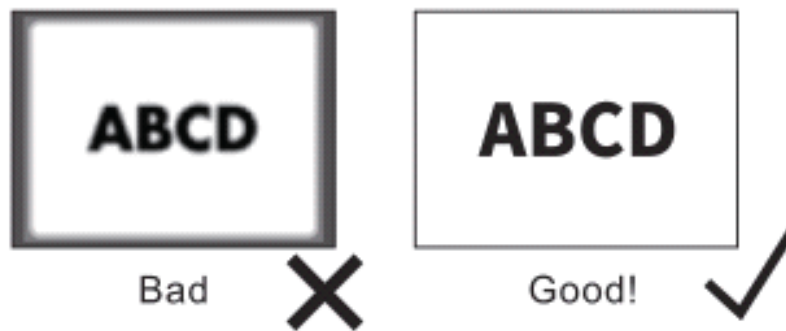

## Connecting HD devices

 
**1.** HD technology supports uncompressed video data transmission between compatible devices, such as laptops, DTV tuners, DVD players, Blu-ray players, and displays, using a single cable. Ensure that an appropriate HD cable is used when establishing a connection.

**2. To** connect, first connect to the Wi-Fi or set up a hotspot. After connecting to the network, you can stream the video online. The projector and HD devices to be connected include laptops, DVD players, digital tuners, Chromecast, Fire TV, etc.



## **HD Signal**

By connecting an HD cable, you can access various devices such as computers, televisions, set-top boxes, game consoles, and other compatible devices.

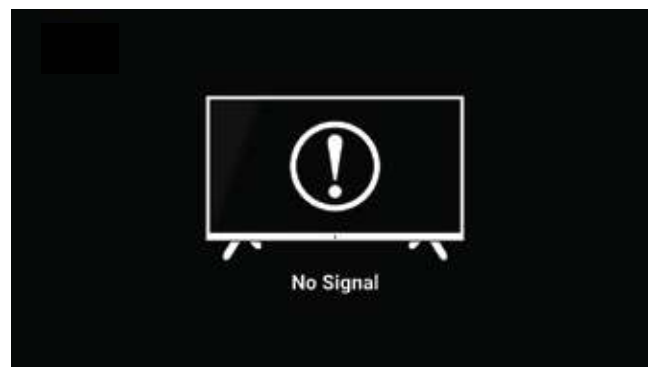

## **Homepage Guide**

The homepage displays options such as App Center, Cast, Miracast, Chrome, File Browser, Video, Uninstall, Source, Settings, Apps, and Source. The Source option serves as the entry point for connecting external devices. To download an application, click on "Play Store."



 
## Adding Applications

To view installed programs, click "APP" on the home page. To add a program to the home page, simply click on the program icon.



## Settings

This section allows you to manage basic user settings, application management, software versions, network settings, Bluetooth settings, projection settings, language settings, date and time settings, system updates, and other related settings. The "About" section provides additional details about the machine.

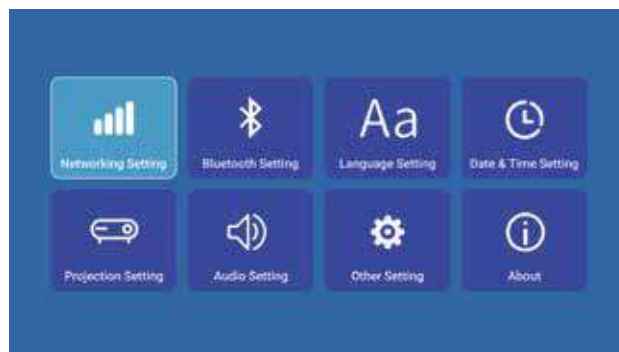

## Eshare and AirPlay Mirroring

 
To connect an Android mobile or tablet to the projector via Wi-Fi display technology, follow the instructions below:

1. Ensure your Android device is connected to the same network as your projector.
2. Once connected, your device will appear in the peer devices list.
3. Tap to launch wireless display on your device.
4. For iOS devices, make sure your device is connected to the same network as the projector for proper mirroring.



## WiFi Settings

Connect to Wi-Fi or set up a hotspot. Once connected, you can stream videos online without interruptions.

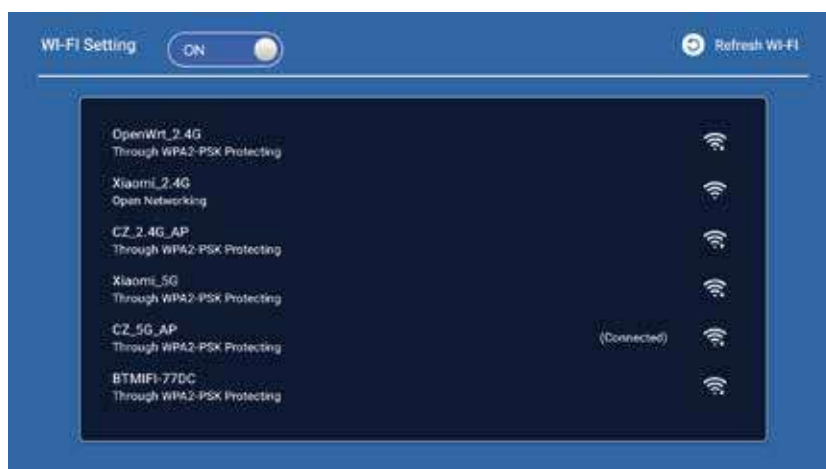

## Bluetooth Connection

Connect various Bluetooth devices such as phones, Bluetooth speakers, headsets, and more.



## Projection Settings

The user can select the installation mode for either front or rear projection. Keystone correction can be adjusted for vertical, horizontal, or four-point trapezoidal alignment. The automatic keystone correction can be toggled on or off. Additionally, the infinite zoom function allows for fine-tuned horizontal and vertical scaling adjustments.



## Language Settings

By default, users can select from a range of languages including Chinese, Korean, and more. This version defaults to English.



## About This Machine

1. View the version number and MAC address information of the device.
2. Perform a factory data reset.



## Warning

1. Use this product only for its intended purpose as outlined in this manual.
2. Avoid looking directly into the lens while the projector is operating.
3. Do not block the ventilation holes of the projector with cloth or any other material.

4. The projector is not waterproof. Avoid placing objects such as vases or cups around it.
5. Ensure the projector is stored and used in dry and clean conditions.
6. Turn off the projector and disconnect the power supply if it is not going to be used for an extended period.
7. Use the original foam and other shockproof materials when transporting the projector.
8. If the projector is defective, do not attempt to repair it yourself. Contact your distributor or the manufacturer directly for assistance.
9. To avoid the risk of electrical shock, do not disassemble or attempt to repair the device. Incorrect repairs can lead to electrical shock or injury.

## Specifications

Power Supply	100~240V, 60/50Hz
Light Source Life	30,000 Hours
Power Consumption	65W
Battery Life	2H
Bluetooth Version	5000mAh
LCD Panel Size	3inch
Brightness	250 ANSI
Native Resolution	1080*1920P
OS	Android 13.0
RAM	1G
ROM	8G
Contrast Ratio	1000:1
Aspect Ratio	4:3/16:9
Interface	HDMI/USB/Audio(3.5mm)
Wi-Fi	2.4GHz & 5GHz
Bluetooth	5.0
Light Source	LED
Projection Image Size	40~150"
Net Weight	1.1kg
Model Number	ETK12

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**