

PORODO
LIFESTYLE



Porodo Lifestyle
CORDLESS
CURLING IRON

SKU: PDBL007PK3



Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Setup Guide	4
Product Maintenance	6
Disposal	7
Warranty	7
Contact Us	7

Product Overview

The Porodo Lifestyle Cordless Curling Iron offers a convenient and portable styling experience with its cordless design. It features smart temperature control and quick heat-up technology, ensuring fast and precise styling. With three adjustable temperature levels, it caters to various hair types and preferences. The curling iron is powered by Type-C charging, providing efficient and easy recharging, while the auto shut-off safety feature ensures peace of mind during use. Perfect for on-the-go styling, this curling iron combines convenience, safety, and performance.

Specifications

Input	DC 5V/2A
Battery Capacity	2600mAh
Rated Power	22W
Working Time	25 Minutes
Recharge Time	3H
Charging Interface	Type-C
Temperature Range	160°C ~ 200°C

Product Size	3 × 3 × 20 cm
Product Weight	122g
Model Number	PDBL007

Safety Precautions

When using the product, a slight burnt smell may occur, which is normal when the product is exposed to high temperatures. This smell will lessen as usage continues.

Before disposing of the appliance, ensure the battery is removed.

Always power off the appliance before removing the battery.

Dispose of batteries safely.

Danger:

Use only a qualified plug to charge this product to avoid potential damage.

Do not use the product for individuals with a reduced sense of heat, as it may cause burns or scalds.

If the product malfunctions, stop using it immediately to prevent accidents or injury.

Avoid using this product with wet hands or near water sources such as bathtubs, showers, or basins.

Warning:

Do not use while taking a shower or in the vicinity of water (e.g., bathtubs, showers, washbasins, etc.) to avoid the risk of electric shock or fire.

If the product shows signs of damage (e.g., deformation or malfunction), stop using it immediately to prevent any risk of electric shock or fire.

Avoid using the product near flammable or explosive substances (e.g., alcohol, gasoline, nail remover, sprays, etc.) as they may cause fire or explosion.

Do not drop the product. If the product is damaged due to impact or handling, stop using it.

After use, ensure the product is turned off and unplugged to prevent any accidental operation.

Do not apply any substances to the product during use.

The surface of the heating element may reach temperatures of up to 200°C, so be cautious when handling.

When the product is in use, avoid direct contact with the heating element to prevent burns.

Before use, ensure that no flammable substances (such as hairspray or styling mousse) are in contact with the product to prevent ignition.

This product is not suitable for individuals with physical, sensory, or mental challenges, or for those without the required knowledge to use it safely. Supervision by a guardian is advised for children.

Always use the product for its intended purpose and ensure children do not play with it.

Keep the product and its packaging materials (e.g., plastic bags) out of reach of children.

Not suitable for pets.

Setup Guide

1. Operation Method

Button Indicator Lights:

Press and hold the power button for 30 seconds to turn on the device. It will intelligently auto-off after 30 minutes.

Depending on your air quality requirements, press the switch to select the appropriate temperature range.

When the product heats up, the white LED lights corresponding to the selected gear will flash. Once the temperature reaches the set gear, the LED for the current gear and below will remain on.

To turn off the device, press and hold the power button for 3 seconds. All indicator lights will turn off, and heating will stop.

When charging, the charging indicator light will flash, and the white light will remain on once fully charged. The product cannot be used while charging.

2. Operation of Wireless Curling Iron

Usage:

Ensure the hair is dry before use to achieve the desired effect.

Carrying:

When carrying the product, confirm that it is in shutdown status to prevent accidental power-on.

Charging:

The ambient temperature should not exceed 40°C, and the charging state cannot be used during charging.

Charging time: 0 to 100% takes approximately 3-4 hours. When using a plug exceeding 5V-2A for charging, the product will be locked and unable to charge (there may be slight differences depending on charging time).

First-Time Use:

Fully charge the product before its first use.

Fast Charging:

Fast charging is not supported.

3. Temperature Selection Recommendations

160°C: For ordinary hair

180°C: For ordinary or slightly curly hair

200°C: For very thick, curly, rough, or hard hair

A. Pre-Styling Preparation

Clean and blow-dry your hair, thoroughly combing it until smooth and free from tangles.

After turning on the product, choose the temperature range that suits your hair type.

B. Operation of Wireless Curling Iron

After turning on the product, press the temperature gear button to adjust the temperature according to your hair's needs.

After heating to the selected temperature, hold the handle and ensure the heating teeth are at a safe distance from the skin and eyes.

After styling, press and hold the power button for 3 seconds to turn off the device. Allow the iron to cool before combing through your hair.

Product Maintenance

This product is intended for personal home use and is not suitable for commercial applications.

We offer a one-year warranty for our products, effective from the date of purchase.

During the warranty period, we will replace parts or the entire product if it is found to be defective due to materials or manufacturing processes.

To claim the warranty, please return the product with proof of purchase to the after-sales service center.

The company does not provide warranty coverage in the following cases:

Improper use, such as using the product with the wrong power supply or in an unsuitable socket.

Damage caused by improper handling or misuse, including accidents or unauthorized repairs.

Normal wear and tear from regular usage.

Non-professional maintenance or use of accessories not intended for this product.

Casualty damages, including those caused by lightning, earthquakes, fire, floods, etc.

After-sales service does not cover damages resulting from the above reasons.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**