

PORODO



Porodo
QUAD-BASE SELFIE STICK
360° Fullangle Rotation

SKU: PDHSM34



Table of Contents

Product Overview	2
Specifications	2
Key Features	3
Usage Instructions	3
Safety Precautions	4
Disposal	5
Warranty	5
Contact Us	5

Product Overview

The Porodo Quad-Base Selfie Stick with 360° Full-Angle Rotation is the perfect accessory for those who want to capture steady, high-quality photos and videos while traveling light. Featuring a 360° full-angle rotation, it allows you to effortlessly adjust and find the perfect angle for your shots, ensuring dynamic and versatile photo opportunities. The selfie stick is designed with a stable quad-base, offering excellent stability for steady shots, whether you're taking selfies, group photos, or videos. It also includes a strong magnet to securely hold your phone in place, even during movement, preventing any accidental slips. The included wireless shutter enables remote control of your camera, making it easier to capture shots without needing to touch your phone. The lightweight yet durable aluminum alloy construction ensures that the selfie stick is both portable and long-lasting, while the clip-mount offers additional flexibility for hands-free shooting. With all these features, the Porodo Quad-Base Selfie Stick is an essential tool for anyone looking to enhance their photography experience, whether for casual shots or creative content creation.

Specifications

Material	Aluminum Alloy + ABS
Remote Control Battery	55mAh
Charging Interface	USB-C
Working Time	Up to 80 Minutes
Bluetooth Version	5.2
Folded Length	11.7cm
Extended Length	47.5cm
Net Weight	193g
Compatibility	Android 8+, iOS 4+
Model Number	HS34

Key Features

- 1. 360° Full-Angle Rotation:** Enjoy unlimited shooting angles with smooth, adjustable rotation for dynamic photo and video capture.
- 2. Stable Quad-Base:** The quad-base design ensures stability while you capture your shots, making it perfect for both selfies and group photos.
- 3. Strong Magnet:** The built-in strong magnet secures your phone in place, ensuring it stays stable even during motion.
- 4. Wireless Shutter:** Control your shots remotely with the included wireless shutter, making it easier to snap photos without the need to reach for your phone.
- 5. Clip-Mount Included:** For additional flexibility, a clip-mount is included, allowing you to easily attach your phone and capture hands-free footage.

Usage Instructions

- 1. Attaching the Phone:**
 - 1.1** Clip your phone securely onto the selfie stick's magnetic mount.
 - 1.2** Ensure your phone is balanced to maintain stability during use.
- 2. Using the Wireless Shutter:**
 - 2.1** Press the wireless shutter button to capture your photos or videos from a distance.
 - 2.2** Ensure Bluetooth is enabled on your phone to connect with the shutter.
- 3. Adjusting the Angle:**
 - 3.1** The selfie stick supports 360° full-angle rotation.
 - 3.2** Simply rotate the phone holder to adjust the angle for the perfect shot.
- 4. Setting Up the Tripod:**
 - 4.1** Open the tripod base for stability when you want to capture steady shots or videos.
 - 4.2** The quad-base design ensures maximum balance and support.
- 5. Portable and Compact:**
 - 5.1** After use, fold the tripod legs back in.
 - 5.2** Clip the selfie stick to your backpack or carry it on the go using the included clip-mount.

6. Storing:

Store the selfie stick in a cool, dry place to avoid damage to the aluminum alloy structure.

Safety Precautions

1. Check Stability Before Use:

Ensure the phone is securely attached to the selfie stick before taking photos or videos. Verify that the tripod is fully extended and stable before use to avoid tipping.

2. Avoid Extreme Heat:

Do not expose the selfie stick to high temperatures or direct sunlight for extended periods to prevent damage to the materials.

3. Handle with Care:

Avoid dropping the selfie stick, as it may cause damage to the tripod base, mount, or your phone.

4. Keep Out of Reach of Children:

This product contains small parts (like the clip-mount) that may pose a choking hazard. Keep away from young children.

5. Avoid Overloading:

Do not use the selfie stick with phones or devices that exceed the recommended weight limit to avoid damaging the stick or mount.

6. Use the Wireless Shutter Responsibly:

Keep the wireless shutter within the recommended range of your phone to maintain a stable connection. Ensure that the Bluetooth connection is properly established before use.

7. Store Properly After Use:

Fold the tripod base and store the selfie stick in a safe, dry location to avoid damage and ensure longevity.

8. Monitor Battery Life:

When using the wireless shutter, ensure that the battery is not low to avoid interruptions during use.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**