

PORODO



Porodo

**Wireless
TWS Earbud & Mouse**

SKU: PDSTS650

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Safety Precautions	4
Cleaning and Maintenance	5
Key Functions	6
Operation instructions	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Wireless TWS Earbud & Mouse offers dual-mode connectivity, adjustable DPI sensitivity, and a transparent magnetic cover. Designed for efficiency with smart power saving, it operates on a 2.4GHz frequency and provides seamless plug-and-play use. This versatile device combines wireless earbuds and a mouse for ultimate convenience and portability.

Specifications

Connectivity Modes	2.4GHz + Bluetooth V6.0
Battery Capacity	400mAh (Mouse), 30mAh (Earbud)
Recharge Time	1.5H (Mouse), 1.5H (Earbud)
Charging Interface	Type-C
Wireless Range	10m
Polling Rate	125Hz
Frequency Response	20Hz-20kHz
DPI Resolution	800 / 1200 / 1600
Switch Lifespan	3 Million Clicks

Mouse Battery Life	30H
Earbud Battery Life	4H (Music), 3H (Calling)
Cable Included	80cm PVC Cable
Mouse Size	38 × 66 × 110 mm
Product Weight	79g
Model Number	PDSTS650

Product Features

- a.** Dual-mode connectivity allows for seamless switching between devices for maximum versatility.
- b.** Adjustable DPI sensitivity provides precise control, perfect for both gaming and everyday use.
- c.** Transparent magnetic cover adds a unique, stylish touch while protecting the device.
- d.** Smart power saving technology ensures efficient energy consumption for longer usage.
- e.** 2.4GHz wireless frequency provides stable and reliable performance for uninterrupted connectivity.
- f.** Plug-and-play functionality makes setup easy without the need for additional software or drivers.
- g.** Combined wireless earbuds and mouse in one device offer ultimate convenience and portability.

Safety Precautions

1. Avoid Water Exposure:

Do not expose the device to water, moisture, or excessive humidity to prevent damage to the internal components.

2. Proper Handling:

Handle the device with care. Dropping or subjecting it to high impact may cause internal damage or malfunction.

3. Charging:

Use only the recommended charging cable and power adapter. Do not use damaged or incompatible chargers, as this may cause overheating or electrical damage.

4. Avoid Overcharging:

Do not leave the device charging for extended periods after reaching full charge to avoid battery wear and potential overheating.

5. Storage:

When not in use, store the device in a dry, cool place, away from direct sunlight or heat sources, to ensure its longevity.

6. Temperature Range:

Do not expose the device to extreme temperatures (below 0°C or above 45°C), as it may cause battery damage or device malfunction.

7. Earbud Use:

Keep the earbuds at a moderate volume to avoid hearing damage. Prolonged exposure to loud sounds may affect hearing health.

8. Children and Pets:

Keep the device out of reach of young children and pets to prevent choking hazards or unintentional damage.

Cleaning and Maintenance

1. Cleaning the Device:

- a.** Use a soft, dry cloth to wipe the device.
- b.** For stubborn dirt, lightly dampen the cloth with water. Do not use cleaning solutions or chemicals.

2. Cleaning the Earbuds:

- a.** Clean the earbuds regularly to ensure good audio performance and hygiene.
- b.** Use a dry brush or cotton swab to remove earwax or debris.
- c.** Do not soak the earbuds in water or use too much moisture.

3. Cleaning the Cover:

- a.** Clean the transparent cover with a microfiber cloth to remove smudges.
- b.** Avoid using rough materials that may scratch the surface.

4. Charging Port Maintenance:

- a.** Check the charging port for dust or debris.
- b.** Clean the port gently with a dry brush or compressed air.


5. Storing the Device:

- a.** Store the device in a cool, dry place when not in use to prevent dust buildup.
- b.** If not used for long periods, keep the device in its protective case.

6. Battery Care:

- a.** Avoid letting the battery fully discharge or overcharge. Recharge when the battery drops to 20-30%.
- b.** For long-term storage, ensure the battery is about 50% charged.

Keys Functions

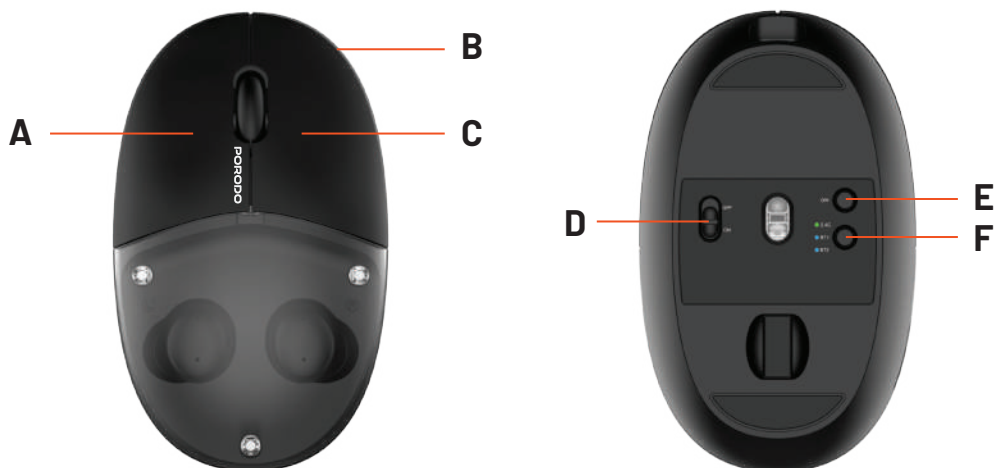

A: Left Key

B: Right key

C: Middle key

D. ON/OFF switch

E. DPI switch

F: Mode switching buttons

Operation instructions

a. 2.4G mode:

Open the package. take out the mouse. push down to ON mode. click the mode switch button. switch the mode to 2.4G mode. then insert the receiver into the USB port of the computer. and connect it for use.

b. Power consumption description:

Mouse input: voltage 5V. current 200-400mA. charging time 1-2h.

Mouse power consumption: output voltage 3.7V. use current about 13mA. full charge time about 30h.

c. Bluetooth Pairing Instructions

1. Open the package and remove the mouse.
2. Switch the mouse to the ON mode by pressing the power button.
3. Press the mode switch button to select Bluetooth (BT) mode.
4. Select the appropriate Bluetooth name (PDX-MS1-650 or PDX-MS2-650) and connect to begin using the mouse.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**