

PORODO
LIFESTYLE



Porodo Lifestyle
AUTOMATIC
2-IN-1 HAIR STYLER

SKU: PDLFSTSA008BK

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Safety Precautions	3
Operation Guide	4
Curling & Straightening Instructions	5
Cleaning and Storage	6
FCC Statements	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Intelligent Hair Curler & Straightener is a versatile 2-in-1 styling tool designed for effortless hair care. It features automatic rotating technology, allowing users to easily curl or straighten their hair with minimal effort. Equipped with ceramic coating, it ensures smooth and shiny results while protecting hair from heat damage. The PTC fast heating technology guarantees quick styling, reaching the desired temperature in no time. With three adjustable temperature levels, it offers flexibility for different hair types and styles. The 360° swivel cord provides convenience and mobility, while the built-in safety auto shutoff feature adds peace of mind during use. Ideal for achieving professional-quality hair results at home, this tool combines both functionality and safety in a sleek, user-friendly design.

Specifications

Rated Voltage	110-240V
Rated Frequency	50/60Hz
Rated Power	50W
Temperature Control	170°, 190°, 210°
Power Cord	UK 3-Pin Plug
Cord Length	1.8m

Model Number	PDLFSTSA008
--------------	-------------

Product Features

1. Automatic rotating technology for easy styling
2. Ceramic coating for smooth and shiny results
3. PTC fast heating for quick styling
4. Three adjustable temperature levels for different hair types
5. 360° swivel cord for enhanced flexibility and convenience
6. Safety auto shutoff for added peace of mind
7. Dual functionality as a curler and straightener
8. Lightweight and ergonomic design for comfortable use

Safety Precautions

1. Read all instructions before using:

Always carefully read the entire manual and any accompanying safety instructions to understand proper operation and avoid misuse of the appliance.

2. Keep away from water:

Ensure the appliance is kept away from any source of water, such as sinks, bathtubs, or swimming pools. Water and electrical appliances do not mix and can be dangerous.

3. Unplug the appliance immediately after use:

Always disconnect the appliance from the power source once you are done using it to prevent electrical accidents.

4. Avoid use while bathing or near water sources:

Never use the appliance in areas like bathtubs, showers, or near sinks and basins where water might come into contact with the electrical parts.

5. Never place the appliance in areas where it could fall into water:

Ensure the appliance is placed securely on flat surfaces, and avoid leaving it in locations where it could potentially fall into water or other liquids.

6. If the appliance falls into water, unplug immediately:

If the appliance accidentally falls into water or any other liquid, immediately disconnect it from the power supply. Do not attempt to retrieve it from the water. This could result in electric shock.

7. Do not leave the appliance unattended when plugged in:

Never leave the appliance on and plugged in when you are not around. Electrical appliances can pose a risk if left unattended.

8. Ensure supervision when used by children or individuals with certain disabilities:

Always supervise the use of the appliance by children or individuals who may have limited understanding or mobility to operate the appliance safely.

9. Use the appliance only as intended:

The appliance should be used only in accordance with the instructions in the manual. Avoid using attachments or accessories that are not recommended by the manufacturer, as they can lead to malfunctions or safety risks.

10. Check for damage before use:

Never use the appliance if the power cord, plug, or any part of the appliance is damaged. If the appliance has been dropped, exposed to water, or shows any signs of damage, it should not be operated. In these cases, contact a service center for proper inspection and repair.

Operation Guide

This appliance is designed for household use and can be plugged into any AC electrical outlet.

Note: During the first few minutes of initial use, a slight smoke or odor may occur. This is normal and will quickly disappear. Steps to Use the Appliance:

- 1. Setup:** Place the appliance on a flat, smooth surface and plug it into an electrical outlet.
- 2. Turn On:** Press the ON/OFF button. The power indicator light will illuminate, signaling the appliance is heating up. The default temperature setting is 170°C. Never leave the appliance unattended when it is plugged in. Avoid placing the appliance on surfaces that are not heat-resistant while it is heating or hot.
- 3. Adjust Temperature:**
 - a.** Press the "+" / "-" buttons to increase or decrease the temperature.
 - b.** Each press adjusts the temperature by 20°C. The indicator will display the selected temperature.
- 4. Auto-Off:** The appliance will automatically shut off 60 minutes after use.

Curling & Straightening Instructions

- 1. For Use as a Curling Iron**
 - a.** Take a section of hair and position the middle and upper part in the curling clip slot.
 - b.** Press the left ("<") arrow button to rotate the curling gripper to the left.
 - c.** Press the right (">") arrow button to rotate the gripper to the right.
 - d.** Hold the hair for 5 to 8 seconds, then release. The styling effect should be visible.
 - e.** Repeat the process until you achieve your desired look.
- 2. For Use as a Straightening Iron**
 - a.** Remove the hairbrush.
 - b.** Comb or brush your hair to ensure it is smooth and free from tangles. Use a comb to divide the hair into sections, but avoid overloading any section with too much hair.
 - c.** Take a section no wider than 5 cm, place it between the plates, and close them to straighten.
 - d.** Hold the iron in place for a few seconds and pull through hair, maintaining some tension.

- e.** For a finishing touch, turn the iron under just a half turn when nearing the end of the hair.
- f.** Release pressure from the plates and let hair slip out.
- g.** Repeat this procedure until you have achieved the desired look.

Cleaning and Storage

1. Cleaning

- a.** Unplug the iron and allow it to cool before cleaning.
- b.** Use a soft, slightly damp cloth to wipe the outer surface. Ensure no water or other liquids enter the unit.

2. Storage

- a.** Unplug the appliance and let it cool before storing in a clean, dry place.
- b.** Store the cord loosely coiled.
- c.** Avoid wrapping the cord around the unit to prevent premature wear and breakage.
- d.** Do not place stress on the cord where it enters the handle, as it may cause the cord to fray and potentially break.
- e.** Never hang the unit by the power cord.

FCC Statement

- 1.** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1)** This device may not cause harmful interference; and
 - (2)** This device must accept any interference received, including interference that may cause undesired operation.
- 2.** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**