

PORODO



Porodo

**SNAPP
ELECTRIC KIDS MINI BIKE**

SKU: PDLFSTJL005BG

Table of Contents

Product Overview	2
Specifications	2
Product Design	4
Installation Guide	4
Charging Instructions	5
Safety Precautions	5
Package Contents	6
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Porodo Snapp Electric Kids Mini Bike is a compact and stylish electric scooter designed for children, featuring 8-inch wheels and a comfortable riding seat. It offers a practical 12km distance per charge, making it ideal for short trips. The bike has a maximum loading capacity of 60kg, ensuring durability and safety for young riders. It comes with a convenient rear storage basket and ergonomic handlebars for an enhanced riding experience. Safety is a priority, with a front light for visibility and high-tensile steel construction for strength. The bike also includes a built-in kickstand and a maximum speed of 18km/h, ensuring a smooth, safe, and enjoyable ride for kids.

Specifications

Material	High-Tensile Steel, PP
Battery Capacity	4.4Ah
Input Voltage	36V
Rated Voltage	100-240V
Rated Current	2.5A
Motor Power	250W Brushless Motor

Working Time	30min
Recharge Time	4-5h
Distance	8-12km (Per Charge)
Speed	18km/h Max
Slope	2-5°
Wheel Size	8"
Water Resistance Level	IP54
Brake	Mechanical Brake & Fender Brake
Seat Height	44cm
Deck Size	20 x 38cm
Product Weight	13.3kg
Product Size	19 x 86 x 105cm
Model Number	PDLFSTJL005

Product Design



- | | | | |
|----------------------|-------------------|---------------|--------------|
| 1. Throttle | 4. Folding System | 7. Deck | 10. Seat |
| 2. Battery Indicator | 5. Front Fender | 8. Battery | 11. Basket |
| 3. Brake Level | 6. Tire | 9. Kick Stand | 12. headlite |

Installation Guide

1. Open the scooter.
2. Attach the Handlebar to the Base

- a. Begin by aligning the handlebar post with the base of the scooter.
- b. The red clamp shown in the image should be attached securely around the post, ensuring it holds the handlebars tightly in place.
3. Turn the handlebars to the Front Position
 - a. Rotate the handlebar post so that the front of the scooter is aligned correctly.
 - b. Orient the handlebars in the proper direction.
4. Tighten the Clamp

Use the provided tool (a wrench or screwdriver) to securely tighten the clamp that holds the handlebar in place. This ensures that the handlebars do not shift while riding.
5. Adjust the Direction of the Handlebars

Once the handlebar is securely in place, adjust it to the desired position for ease of steering. Make sure the handlebar is locked firmly before use to avoid any movement while riding.

Charging Instructions

1. Fully charge the battery before first use.
2. Charge immediately after each use.
3. Charge the product before storing the scooter.
4. If you're not using the scooter, ensure the unit is charged every 30 days.
5. Charge the unit for 6–8 hours or until the light indicates a full charge.
6. The red light indicator appears when you are charging the scooter, and a green light appears when it is fully charged.
7. Avoid deep discharging the battery.
8. For safety, do not charge the battery for more than 24 hours.

Safety Precautions

1. This product is designed for children (recommended for ages under 6 years old).

2. Ensure the handlebar assembly is securely locked before use.
3. Verify that all tires are properly inflated before riding.
4. Always wear protective gear, including knee pads, elbow pads, and a safety helmet while riding.
5. Maintain a safe speed at all times.
6. Only one rider is allowed at a time.
7. Do not place the battery near heat or fire.
8. Keep the charger away from water or any moisture.
9. Always turn off the scooter while charging.
10. Charge the battery after every use.
11. Ride only on dry, paved surfaces. Wet or uneven surfaces are hazardous. Avoid sand and obstacles.
12. Never ride the scooter too fast.
13. Slow down when turning in corners.
14. Follow all traffic laws and regulations when riding.

Package Contents

1. Electric Scooter
2. Battery Charger
3. Basket
4. Tool Kit

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: **porodo**