

PORODO



Porodo

3-IN-1

CORDLESS HAIR STYLING TOOL

SKU: PDRHS13SWH

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Product Design	4
Safety Precautions	5
Electrical Safety Instructions	6
Heating Instructions	7
Preparation Guide	8
Charging Instructions	9
Operation Instructions	9
Maintenance	10
Disposal	11
Warranty	12
Contact Us	12

Product Overview


The Porodo 3-in-1 Cordless Hair Styling Tool is a versatile, all-in-one solution for styling your hair with ease. This compact tool offers three interchangeable heads, making it ideal for straightening, curling, and styling. With a quick heat-up feature, it ensures you can start your styling session in no time. The heat-resistant design provides added safety, while customizable heat settings allow you to adjust the temperature to your preference. Perfect for on-the-go use, the portable, cordless design makes it travel-friendly, offering a convenient and efficient styling experience anytime, anywhere.

Specifications

Input	5V/2A
Rated Power	30W
Battery Capacity	2600mAh
Temperature Settings	120C, 140C, 160C (Curler); 160C, 180C, 200C (Straightener)
Recharge Time	2H
Charging Interface	USB-C
Working Time	15-20 Minutes
Product Size	34 x 34x 112.8mm(Body)
Model Number	PDRHS13S

Product Features

- 1. Three Interchangeable Heads:** This tool comes with three different heads to suit various styling needs. Whether you're looking to straighten, curl, or volumize your hair, simply switch between the heads for effortless styling flexibility.
- 2. Quick Heat-Up Technology:** No more waiting around for your styling tool to reach the desired temperature. The Porodo hair styling tool heats up rapidly, allowing you to style your hair in record time without compromising on performance.
- 3. Heat-Resistant Design:** Built with a heat-resistant exterior, this tool ensures safety and comfort during use. You can handle the device with ease, even when it's hot, and it helps to prevent burns or accidents.
- 4. Customizable Heat Settings:** Enjoy full control over your styling experience. With customizable heat settings, you can adjust the temperature based on your hair type and desired style, ensuring optimal results every time.
- 5. Cordless and Portable:** Designed with convenience in mind, this cordless styling tool is perfect for those who are always on the move. Its rechargeable battery ensures you can use it anywhere, whether you're traveling or at home, without being limited by cords.
- 6. Compact and Travel-Friendly:** With its sleek, lightweight design, the Porodo 3-in-1 Cordless Hair Styling Tool fits easily into your bag or suitcase, making it an excellent choice for those who want to maintain their style while on the go.
- 7. User-Friendly and Easy to Operate:** The ergonomic handle and intuitive controls make styling a breeze. Whether you're a styling pro or a beginner, you'll appreciate how easy it is to use this tool for flawless results.
- 8. High-Quality Build:** Made with premium materials, the Porodo 3-in-1 Cordless Hair Styling Tool is built to last. The durable construction ensures that it can withstand regular use and provide long-term reliability.

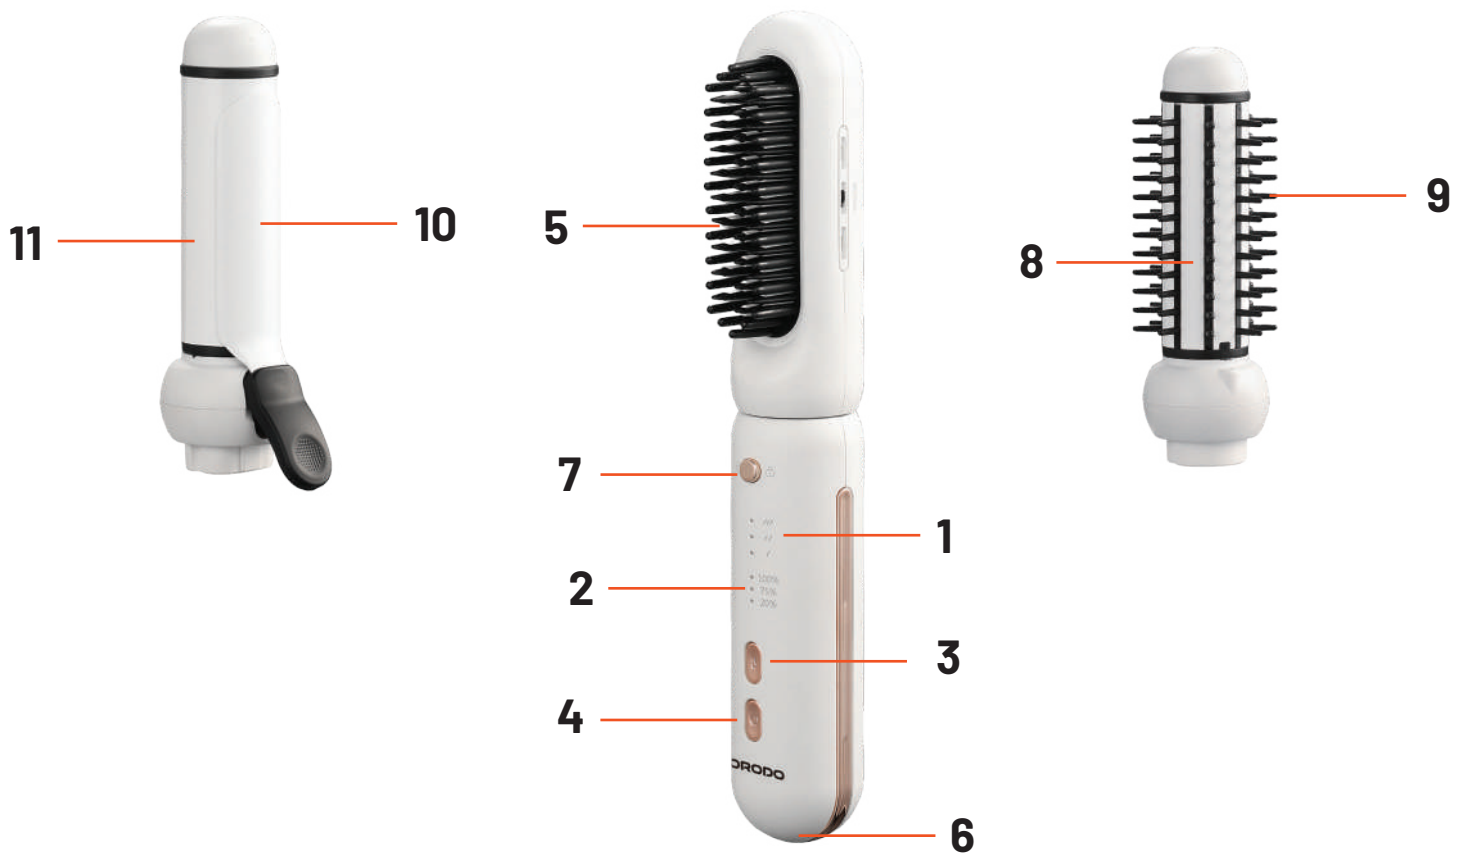

- 1. Temperature indicator light
- 2. Charging status display
- 3. Button for temperature adjustment
- 4. ON/OFF button
- 5. Hair comb
- 6. Type-C port
- 7. Button for body and head connection
- 8. Heating curling tube
- 9. Hair curling brush
- 10. Heating clip
- 11. Heating curling barrel

Safety Precautions

- 1.** This appliance can be used by children aged 8 and older, as well as individuals with limited physical, sensory, or mental abilities or a lack of experience or knowledge, provided they are supervised by a responsible adult or have been properly instructed on its safe use and understand the potential risks. The appliance is not a toy. Children should only clean and maintain it under supervision.
- 2.** Children under the age of 3 should stay away from the appliance, or they must be under constant supervision.
- 3.** Children aged 3 to 8 may only switch the appliance on or off when it is in its intended operating position, under supervision, or after receiving instruction on its safe use. They should not operate, connect, clean, or maintain the appliance.
- 4.** Parts of this appliance can become very hot and may cause burns. Exercise extreme care when children or vulnerable individuals are present.
- 5.** Children should be supervised to prevent them from playing with the appliance.
- 6.** Do not immerse the appliance in water or other liquids. Protect it from moisture.
- 7.** Avoid operating or charging the appliance after it has been moved from a cold to a warm environment. Condensation may occur, damaging the appliance. Allow it to reach room temperature before use.
- 8.** Ensure there is sufficient space around the appliance during operation, and keep it away from walls and flammable objects such as curtains.
- 9.** Do not use the appliance near heat sources.
- 10.** For safety, do not use the appliance to style artificial hair.
- 11.** Keep the appliance and its parts away from your face and ears to avoid burns.
- 12.** Do not use hair sprays while the appliance is in operation.
- 13.** Ensure your hair is free from styling products, such as foam or gel, before use to prevent damage.

- 14.** The straightening comb, curling barrel, or curling comb will be extremely hot after use. Handle with care to avoid burns.
- 15.** Always switch off the appliance before setting it down.
- 16.** After use, or before cleaning, switch off the appliance and allow it to cool.
- 17.** Do not use accessories from other brands or manufacturers to avoid damage to the appliance.
- 18.** Never open the housing of the appliance, as there is a risk of electric shock.
- 19.** Regularly check the charging cable for wear or damage. If the cable or any part is damaged, contact customer service for inspection and repair. Unauthorized repairs can pose serious risks and will void the warranty.
- 20.** If the power cord is damaged, it must be replaced by the manufacturer, customer service, or a qualified technician to prevent hazards.
- 21.** Please avoid using chemical hair styling products, such as hairspray, before styling your hair to prevent damage. Instead, it is recommended to apply heat protection products for added protection.
- 22.** The appliance becomes very hot during use. Direct skin contact may result in burns. Exercise caution.

Electrical Safety Instructions

- 1.** Comply with Safety Instructions: Follow all safety operating instructions for the USB charger.
- 2.** Voltage Requirements: Ensure that the mains voltage matches the USB charger's specified requirements when connecting it.
- 3.** Indoor Use Only: The appliance should only be charged indoors using the USB charger.
- 4.** Avoid Wet Conditions: Protect the USB charger from moisture, heat, and direct sunlight.
- 5.** Cable Handling: Ensure the charging cable is laid out fully to prevent damage from overheating. Avoid wrapping it around the appliance during storage.

- 6. Unplugging the Charger:** Always unplug the USB charger by grasping the plug, not the cable. Never pull directly on the charging cable.
- 7. Disconnect When Not in Use:** Unplug the charger from the mains supply when not in use.
- 8. Avoid Using with External Timers:** Do not operate the charger with an external timer or remote control system.
- 9. Water Hazard Warning:** If the USB charger is connected to the electrical outlet, it can pose a hazard in wet environments, even when the appliance is off.
- 10. Avoid Wet Hands:** Never touch the charger with wet hands to prevent the risk of electric shock.
- 11. Protect the Battery:** Do not damage the rechargeable battery through impact or vibration. If damaged, stop using it and contact customer service.
- 12. Regular Charging:** Recharge the appliance regularly to avoid deep discharge and potential damage.
- 13. Use the Correct Cable:** The provided charging cable is not suitable for data transmission.
- 14. Battery Leakage:** If the battery leaks, wear protective gloves before handling the appliance and avoid skin and eye contact.
- 15. Personal Use Only:** This appliance is designed for personal use and is not intended for commercial applications.

Heating Instructions

- 1. Heating Temperature Range:**
 - a. Straight Hair Comb:**
160°C–200°C (three-level adjustable)
(160°C ≈ 200°C, 180°C ≈ 160°C)
 - b. Curly Hair Comb:**
120°C–160°C (three-level adjustable)
(160°C ≈ 160°C, 140°C ≈ 120°C)

c. Curling Rod:

120°C–160°C (three-speed adjustable)

(160°C ≈ 160°C, 140°C ≈ 120°C)

2. Typical Run Time:

a. Straightener Comb:

≈ 30–19 minutes (including pause flashes 180–85 seconds)

b. Curling Comb:

≈ 19–15 minutes (including pause flashes 270–80 seconds)

c. Curling Wand:

≈ 19–13 minutes (including pause flashes 150–50 seconds)

Note: The data is measured when the battery is fully charged, and it may change based on room temperature.

Test data is based on a room temperature of 25°C.

The usage and stop flash times are for reference only and may be affected by factors such as environment, usage methods, and personal differences. The actual use time shall prevail.

Preparation Guide

1. Unpack the Appliance: Remove all packaging materials and transport safeguards. Keep children away from these materials to avoid suffocation hazards.

2. Dry Your Hair: For the best results, ensure your hair is dry before use. If needed, dry your hair thoroughly with a towel or a hair dryer.

3. Brush Your Hair: Brush your hair until it falls loosely to ensure smooth usage.

4. Charging Before First Use: Make sure the appliance is fully charged before using it for the first time.

5. Safety Lock: The appliance is equipped with a safety lock. To open it, press the button for the safety lock firmly.

Charging Instructions

1. Ensure the appliance is switched off and positioned stably.
2. Connect the charging cable to the appliance's charging port.
3. Attach the other end of the cable to a USB charger.
4. Plug the USB charging cable into an electrical outlet (ensure proper voltage).
5. Confirm all cable connections are secure; improper connections may prevent charging.
6. A flashing indicator light shows charging in progress. Once charging is complete, the indicator light will stop flashing.
7. To protect the rechargeable battery, do not charge the appliance for more than 12 hours.
8. The appliance can be used for approximately 25-20 minutes before needing a recharge. Full battery capacity is reached after several charge cycles.
9. Only recharge when the battery is nearly empty to maintain battery health.
10. Never connect the appliance directly to mains power unless a rechargeable battery is inserted.
11. You may use a different USB charging cable, provided it meets the required technical specifications. For assistance, contact customer support.
12. Alternatively, you can charge the appliance using a USB port on a computer. Note that this method may take longer, so using a USB charger is recommended.
13. The appliance features a USB output, which can be used to charge a mobile device in emergencies.

Operation Instructions

1. Unlock the Appliance: Press the button to release the safety locking mechanism.
2. Turn On the Appliance: Press the power button to switch it on.

- 3.** Set the Temperature: Choose from three temperature settings: (, , ), (, , ), or (). For thicker hair, select a higher temperature. For chemically-treated hair, use a lower setting.
 - 4.** Heating Process: The indicator light will flash while the appliance heats up. Once the desired temperature is reached, the indicator light will stay on.
 - 5.** Divide the combed hair into small strands no wider than five centimeters. If necessary, separate the strands with a bobby pin.
 - 6.** Open the appliance and place a strand of hair on the hair placement surface with the straightening comb, curling barrel, or curling comb.
 - 7.** Close the appliance.
 - 8.** Slowly and evenly move the appliance down to the tips of the hair. Keep the appliance firmly closed, and avoid holding it in place for more than two seconds at a time to prevent hair damage. For a smooth, tight-fitting look, always work close to the head. However, if you lift the appliance while styling, you will achieve more volume.
 - 9.** Determine the optimal temperature for your hair through trial and error.
 - 10.** The charge status indicator shows the current battery level: %75 , %20, or 100 %. Recharge the appliance once the display shows %20. If all three indicators flash, the appliance cannot be used until fully charged.
 - 11.** Please be aware that the styling tool remains extremely hot after use.
 - 12.** Turn off the appliance using the "OFF" button and allow it to cool before storing it. To prevent the smoothing comb or barrel from opening unintentionally, press the safety lock button again.
- TIP:** You can also create waves with the appliance! Style the hair as usual, but just before reaching the tips, place the appliance at the end of the strand and rotate it inward or outward (depending on the desired wave) to form a gentle curl.

Maintenance

- 1.** Do not immerse the appliance in water or any other liquids.
- 2.** Wipe the appliance with a damp cloth to clean it.

3. Avoid abrasive sponges and cleaning agents that may scratch or damage the appliance, such as scouring pads, steel wool, or harsh chemicals.
4. Keep the appliance free of dust to ensure optimal performance.
5. Clean the smoothing comb/barrel with a damp cloth when necessary. Allow it to dry thoroughly before reuse or storage.
6. Follow the manufacturer's guidelines when cleaning the USB charger to avoid damage.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**